




Instructions

Service kits

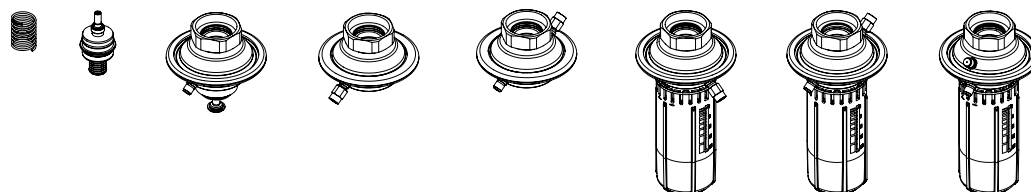

A	PN	DN	Δp (bar)							Code No.
			$0.05 \div 0.5$ $0.1 \div 0.5$	$0.2 \div 1.0$	$0.3 \div 2.0$	$0.8 \div 1.6$	0.2	0.3	0.5	
16	15 ÷ 32		-	×		-	×	-	-	003H1330
			-	-		-	-	×	-	003H1326
			-	-		-	-	-	×	003H1331
			-	-		×	-	-	-	003H1332
25	15 ÷ 50			-		×		-	88835920	
	15 ÷ 25			-		-		×	88835930	
	32 ÷ 50			-		-		×	88835940	

M1	CuSn5ZnPb (Rg5)
M2	EN-GJS-400-18-LT (GGG 40.3)

  

B	PN	DN	Δp_b (bar)							Code No.
			$0.1 \div 0.5$	$0.2 \div 1.0$	$0.3 \div 2.0$	$0.8 \div 1.6$	0.2	0.3	0.5	
16	15 ÷ 32							×		003H1330
25	15 ÷ 25							×		88835920
	32 ÷ 50							-		-

2	PN 16	AVP, AVP-F, AVPB, AVPB-F, AVD, AVQ, AVQM	M1
2	PN 16	AVPQ, AVPQ-F	M1
3	PN 16	AVPQ 4, AVPQ 4-F	M1
3	PN 16	AVPA	M1

