


## Instruction


### Compact Mixing Shunt, FHM-Cx

FH-TC

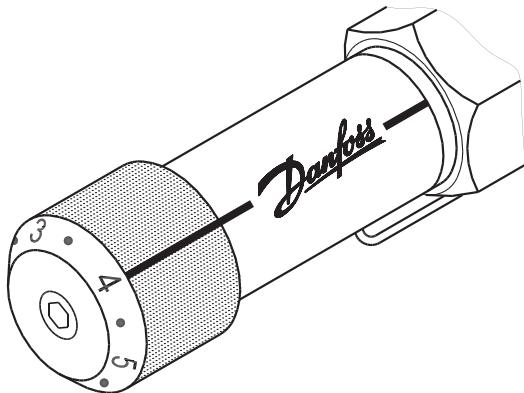


1	2	3	4	5	6	(max)
20°C	25°C	30°C	35°C	40°C	45°C	50°C


FHM-FL

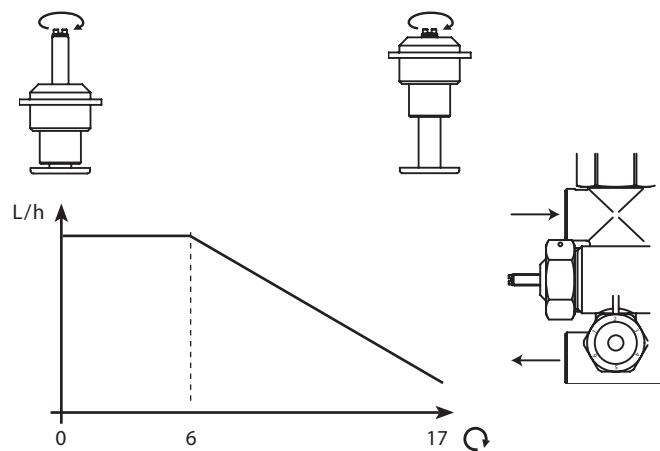

FH-ST

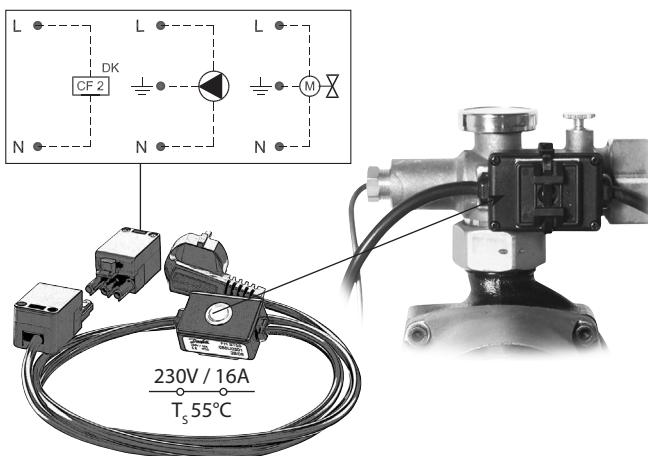

FH-MS

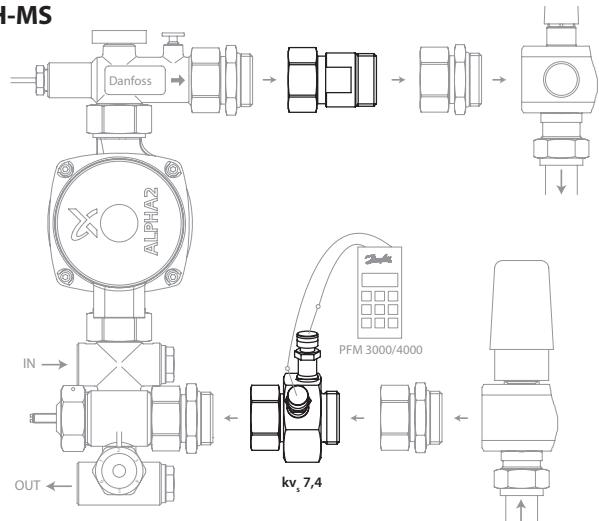

GB	Technical Data
Test pressure	16 bar
Max. working pressure	10 bar
Max. differential pressure	0.6 bar
Max. flow temperature	90° C
<i>Note! Maximum operating pressure and temperature given by the tube manufacturer must not be exceeded.</i>	


DK/N	Tekniske data
Test tryk / test trykk	16 bar
Max. arbejdstryk / arbeidstrykk	10 bar
Max. differenstryk / differansetrykk	0,6 bar
Max. fremløbstemp. / medietemp.	90° C
<i>NB! Maximum arbejdstryk / driftstrykk og temperatur oppgitt av rørleverandøren / rørprodusenten må ikke overskrides.</i>	

**GB**

1. Drain the system for water.
2. Remove the FH-TC ①.
3. Remove the capillary sensor ②.

**DK/N**


1. Tøm systemet for vand.
2. Fjern FH-TC ①.
3. Fjern kapillarføleren ②.

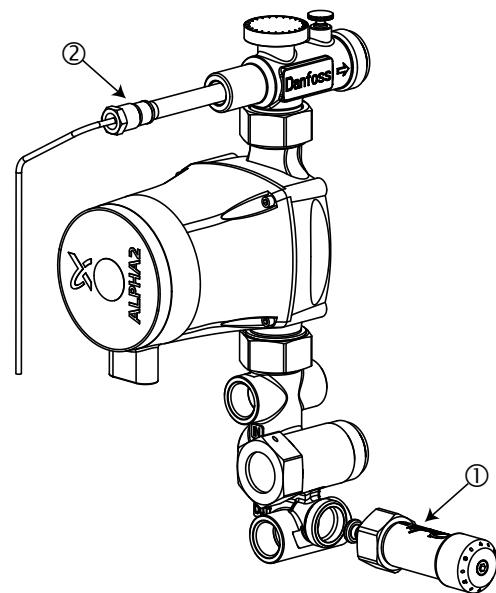
**GB**

4. Replace the casket with a new (supplied in box) and mount the adapter ③. Tighten the nut with app. 40 Nm.
5. The new sensor pocket ④ is supplied with O-ring and is replacing the capillary sensor ②. Mount the pocket and tighten with 20 Nm.
6. The sensor ⑤ is pushed into the pocket and is kept in place with a rubber ring

**DK/N**

4. Udsift pakningen med en ny (medfølger) og monter adapte- ren ③. Stram møtrikken med ca. 40 Nm.
5. Den nye følerlomme ④ leveres med O-ring, og den erstatter kapillarsensoren ②. Monter lommen og stram med 20 Nm.
6. Sensoren ⑤ skubbes ind i lommen og fastholdes af en gummi- ring.

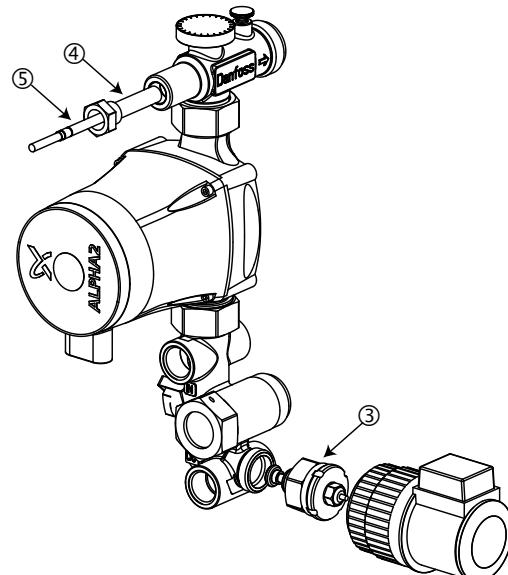
**GB**
**ECL 110 Settings for Floor Heating Applications**

- maintenance menu 2175: change settings to 1.0.
- maintenance menu 2178: change settings to 55°C.
- application menu 7024: change actuator setting to ABV.
- application menu 7162: change knee point setting to OFF.

**DK/N**
**ECL 110 indstillinger for gulvarmeapplikationer**

- vedligeholdelsesmenu 2175: indstilles til 1.0.
- vedligeholdelsesmenu 2178: indstilles til 55°C.
- applikationsmenu 7024: indstilles til ABV.
- applikationsmenu 7162: knækpunkt indstilles til OFF.