

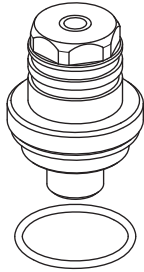
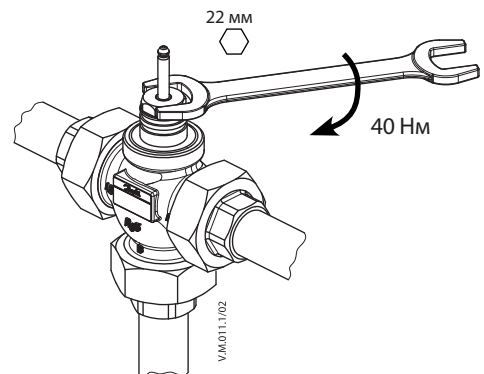
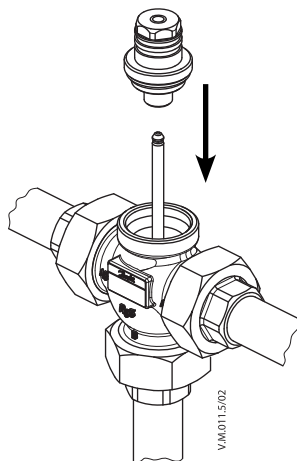
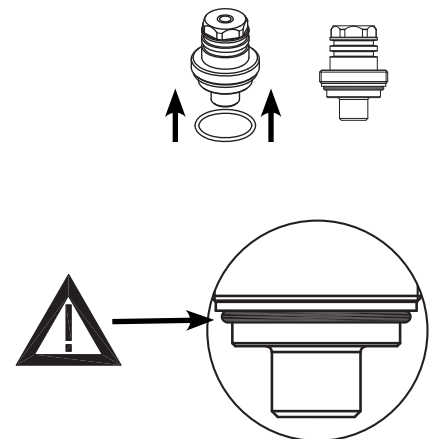
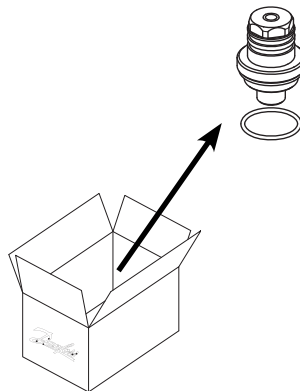
 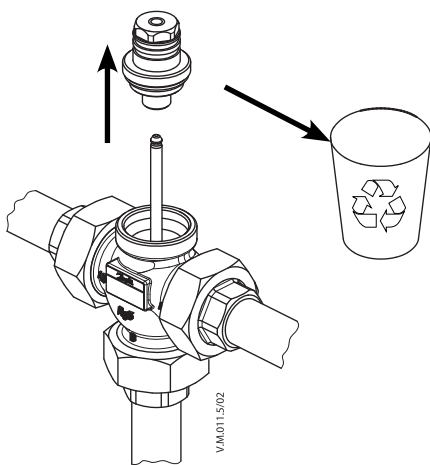



Руководство по монтажу

Запасные части - сальниковый блок для VRB, VRG, VF, VL (Выпуск 2009)

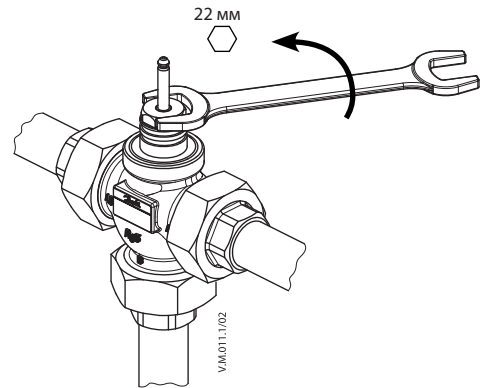


Ду 15	065Z0321
Ду 20	065Z0322
Ду 25	065Z0323
Ду 32	065Z0324




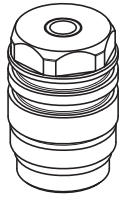


Ду 40-50	065Z0325
Ду 65-80	065Z0327

 

22 мм

 


36 мм

 


48 мм





36 мм (Ду 40-50)
48 мм (Ду 65-80)

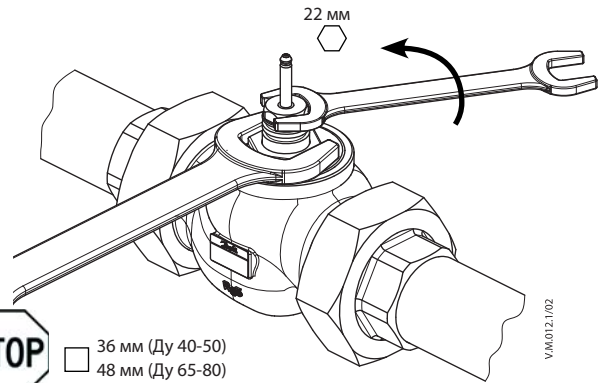


VM.012.1/02

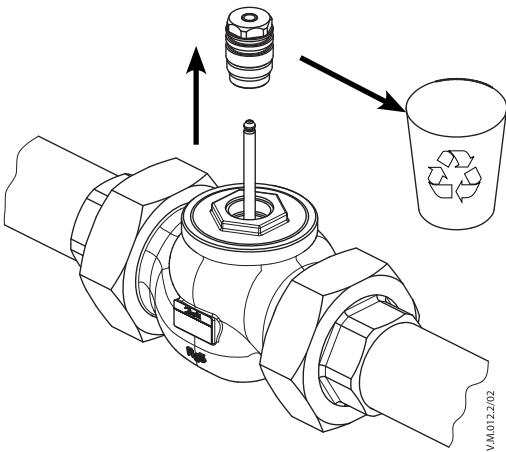

VM.012.2/02

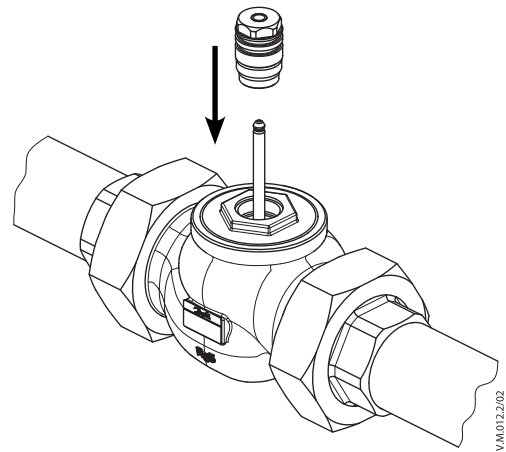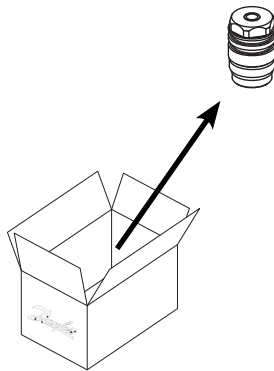

VM.012.2/02

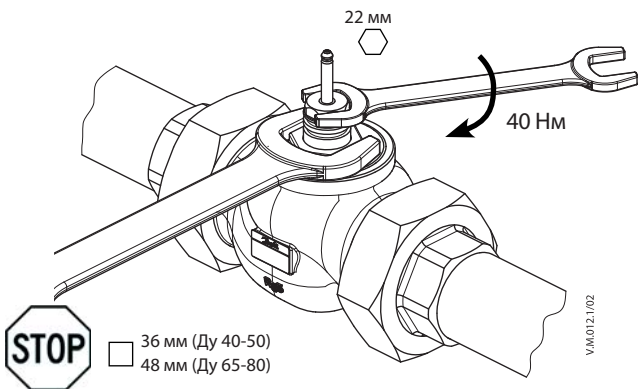

36 мм (Ду 40-50)
48 мм (Ду 65-80)

VM.012.1/02