



# Instruction sheet

## **KRT2800**

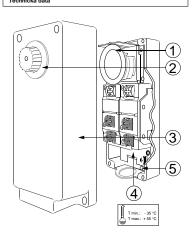


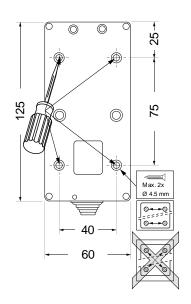


| Wiring                 |  |
|------------------------|--|
| Bedrading              |  |
| Cablagem               |  |
| Elektrisk installation |  |
| Zanojení               |  |


Raccordeme Cableado Ledningar Kabling

Verdrahtung Cablaggio Jodotus Καλωδίωση

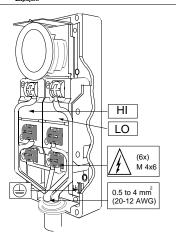

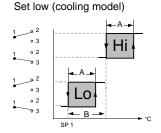

### Set high (heating model)

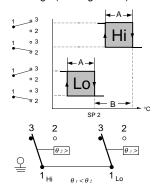

KRT2800 (0 - +40)230V Imax. 16A 400V Imax. 10A IP55

READ THIS INSTRUCTION SHEET CAREFULLY BEFORE INSTALLING, RETAIN IT SAFELY FOR FUTURE REFERENCE.

- Setpoint dial
   Knob for adjustment (knob models only)
   Cover
   Differential lever (adjustable differential models only)
   Drainhole

Adjustment
A Stage differential (fixed)
B Between stage differential (fixed or adjustable)
SP1 Set point "set low" models (refer to data label)
SP2 Set point "set high" models (refer to data label)

The KRT2800 is a 2-stage temperature control designed to sense temperatures.

According to EN 60730 it is a type 1 action, independently mounted control, suitable for surface mounting on a plane surface and for use in normal pollution situation.

These controls are designed for use only as operating controls. Where an operating control failure would result in personal injury or loss of property, it is the responsibility of the installer to add devices or systems that protect against, or warn of, control failure.

Installation DO NOT TURN SEALED SCREWS

△ Disconnect from power supply before the cover is removed.

Wiring
All wiring should conform to local codes and must be carried out by authorized personnel only. When using multi stranded wire apply a cable ferrule to the cable end.

Check out procedure
Before leaving the installation observe at least three complete
operating cycles to be sure that all components are functioning
correctly. If not contact your supplier.

Δ

Тел.: (495) 669-37-15 (многоканальный)

SIP: 0030047810

e-mail: info@frico-tm.ru www.frico-tm.ru