



Error contents
Discharge pipe temperature abnormal
Outdoor heat exchanger tem- perature sensor abnormal
Outdoor tem- perature sensor abnormal
Discharge pipe temperature sensor abnormal
High pressure abnormal