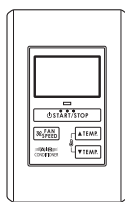


# AIRSTAGE™

**AIR CONDITIONER**
**KEEP THIS OPERATING MANUAL FOR  
FUTURE REFERENCE**

## OPERATING MANUAL

**SIMPLE REMOTE CONTROLLER  
(WIRED TYPE)**

 P/N 9374139019 **English**
**FUJITSU GENERAL LIMITED**

### SAFETY PRECAUTIONS

Before using the appliance, read these "PRECAUTIONS" thoroughly and operate in the correct way. The instructions in this section all related to safety; be sure to maintain safe operating conditions.

<b>⚠ DANGER!</b>	This mark indicates procedures which, if improperly performed, are most likely to result in the death of or serious injury to the user or service personnel.
<ul style="list-style-type: none"> <li>• Do not attempt to install this controller by yourself.</li> <li>• This controller contains no user-serviceable parts. Always consult authorized service personnel for repairs.</li> <li>• When moving, consult authorized service personnel for disconnection and installation of the controller.</li> </ul>	<ul style="list-style-type: none"> <li>• If a problem (burning smell, etc.) occurs, turn off the electrical breaker immediately to stop operation, and then consult authorized service personnel.</li> <li>• If the wiring cord is damaged, contact your service representative for instruction.</li> </ul>

<b>⚠ WARNING!</b>	This mark indicates procedures which, if improperly performed, might lead to the death or serious injury of the user.
-------------------	---

<b>⚠ CAUTION!</b>	This mark indicates procedures which, if improperly performed, might possibly result in personal harm to the user, or damage to property.
<ul style="list-style-type: none"> <li>• Do not expose the controller directly to water.</li> <li>• Do not operate the controller with wet hands.</li> <li>• Do not touch the switches with sharp objects.</li> <li>• Always turn off the electrical breaker whenever cleaning the controller, the air conditioner or the air filter.</li> <li>• Check the condition of the installation stand for damage.</li> </ul>	<ul style="list-style-type: none"> <li>• Ensure that any electronic equipment is at least one meter away from the controller.</li> <li>• Avoid installing the controller near a fireplace or other heating apparatus.</li> <li>• When installing the controller, take precautions to prevent access by infants.</li> <li>• Do not use inflammable gases near the controller.</li> </ul>

### OPERATING TIPS

- Cooling / heating priority (AIRSTAGE™ (VRF system Heat Pump model only))
- If another indoor unit in the same system is already operating in the cooling mode or dry mode, heating mode settings cannot be performed.
  - If another indoor unit in the same system is already operating in the heating mode, cooling mode or dry mode settings cannot be performed.

### TROUBLE SHOOTING

Before requesting service, perform the following checks:

	Symptom	Cause and Action
CHECK ONCE MORE	Doesn't operate at all.	<ul style="list-style-type: none"> <li>• Has there been a power failure?</li> <li>• Has a fuse blown out, or a circuit breaker been tripped?</li> <li>• Is the main power switch set to the OFF position?</li> <li>• Is the timer operating?</li> </ul>

If the problem persists after performing these checks, or if you notice burning smells, or the TIMER indicator flashes, immediately stop operation, turn off the electrical breaker and consult authorized service personnel.

### SPECIFICATIONS

MODEL	UTB- □R	
POWER	DC12V	
DIMENSION & WEIGHT		
HEIGHT	[mm]	120
WIDTH	[mm]	75
DEPTH	[mm]	14
WEIGHT [g]	UTB-YR	90
	UTB-TR	100

## OPERATION

### NOTES

Operation mode display.



AUTO COOL DRY FAN HEAT  
(Select HEAT or COOL automatically.)

 
### START / STOP

Each press of the button alternates operation and stop.  
When operating, operation lamp (green) will light up.


### FAN SPEED

Press the button while in operation.

### NOTES



(Select the fan speed automatically.)

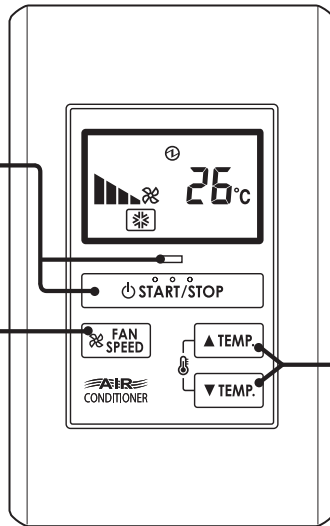

### NOTES

- (1) Display panel lights up.
- (2) When is displayed, there are functions for which settings cannot be mode. When a button is pushed to change a restricted setting, will flash.
- (3) During Automatic Defrosting operation and Oil Recovery operation, will be displayed on the remote controller.
- (4) When connecting with other controllers, the indoor unit might be controlled by the other controllers.
- (5) The wired remote controller or the wireless remote controller can also be used with this unit.

### TEMPERATURE

Press the / button while in operation.

### NOTES

Temperature setting range

- AUTO ..... 18 to 30°C
- HEAT ..... 16 to 30°C
- COOL/DRY ..... 18 to 30°C

The temperature setting should be considered a standard value, and may differ somewhat from the actual room temperature.

 
### SELF DIAGNOSIS

Run [Self Diagnosis ], if [EE] flashes in the center of the remote controller display.

- (1) Stop the air conditioner operation.
- (2) Press the button and button at same time for more than 5 seconds to start the self-diagnosis.  
The error code and the remote controller address are shown in the center of the remote controller display as shown on the right .

\* For the information on the error codes, refer to the installation instruction sheet for the indoor unit.

- (3) Press the button and button at same time for more than 5 seconds to stop the self-diagnosis.



Error code

Faulty unit No.  
(Remote controller address)

Ex. Self-diagnosis