


# Installation Manual

## Electric Three-Way Valve Pipe

### 2016804A0215

#### 1、Parts Introduction

No.	Name	Specs	Qty.
1	Connecting pipe of cold water	Diam. $\Phi$ 19, Junction G3/4"	2
2	Electric three-way valve	DDSTF-05	1
3	Connecting pipe of hot water	Diam. $\Phi$ 14, Junction G1/2"	2
4	Electric three-way valve	DDSTF-04	1
5	Seal rubber belt	$\Phi$ 19x2	2
6	Seal rubber belt	$\Phi$ 13.8x1.8	2
7	Seal washer	$\Phi$ 16x $\Phi$ 24.5x2	2
8	Seal washer	$\Phi$ 11x $\Phi$ 19x2	2

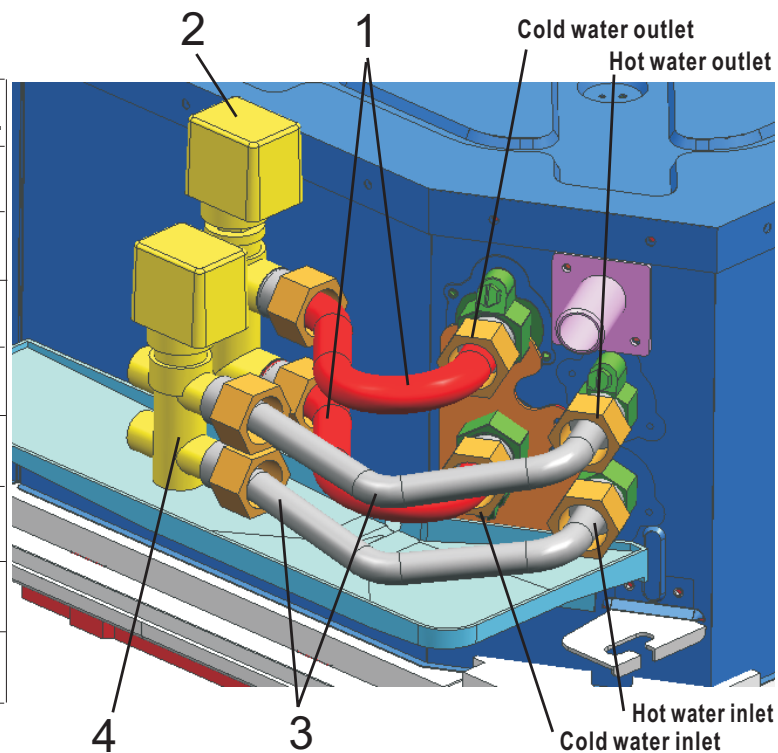

#### 2、Installation requirement:

- (1). Refer to the figure of size and install location for installation. To avoid the damage to screw thread of evaporator, do not overexertion, when screwing.
- (2). For avoid non-screw up or damage of screw thread, two spanners must be used simultaneously, when install or remove junction.
- (3). Except for four terminals of pipe sealed by seal washers, other screw threads must be wrapped by seal rubber belt.
- (4). Ensure all interfaces not water leakage, when finished pipes and junctions connection.
- (5). Please see enclosed Electric Three-way Valve Installation Manual for other installation procedures of the electric three-way valve.

