





Полное техническое руководство


RSJi-35/300RDN3


RSJ-35/300RDN3

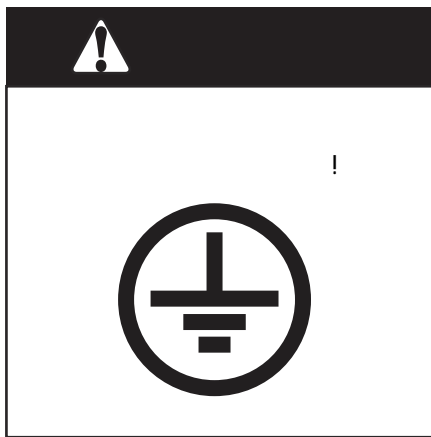





	1		
One Way Valve	1		
Adaptor	1		

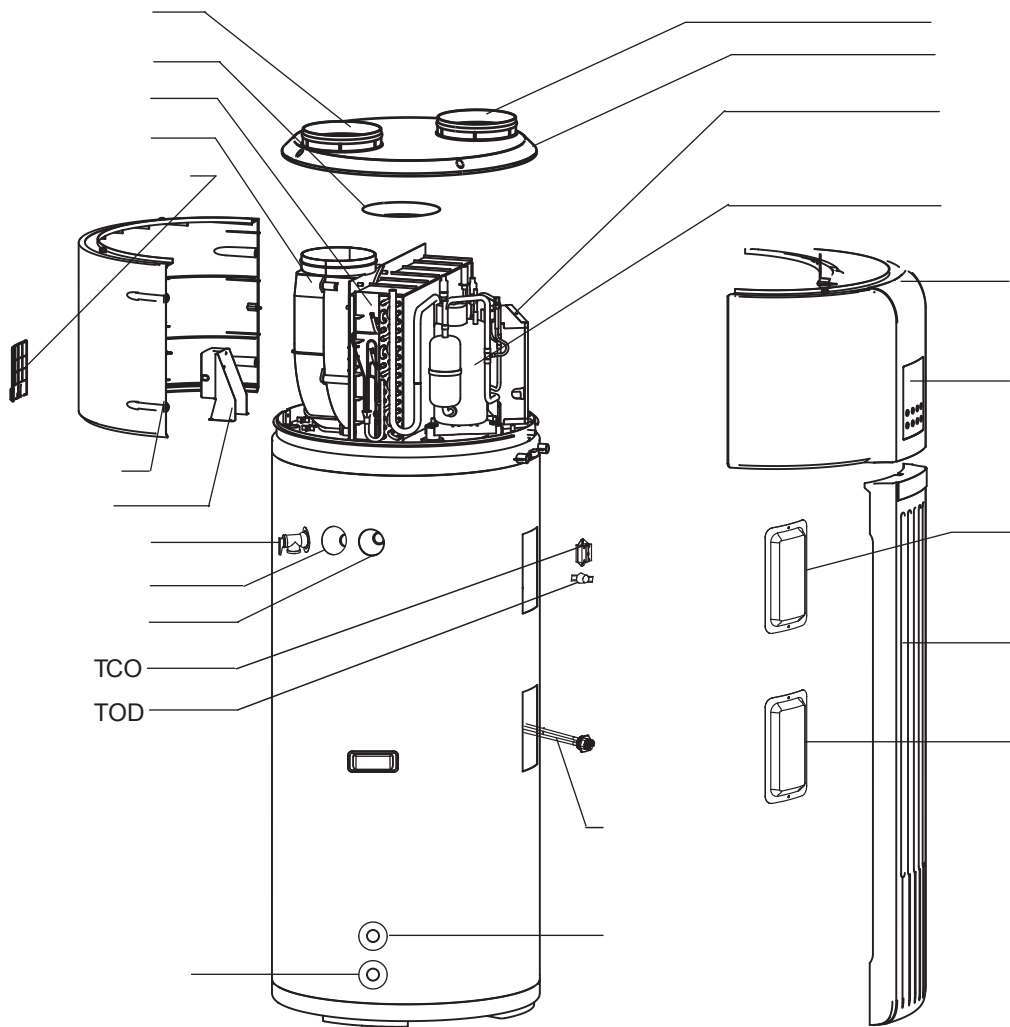

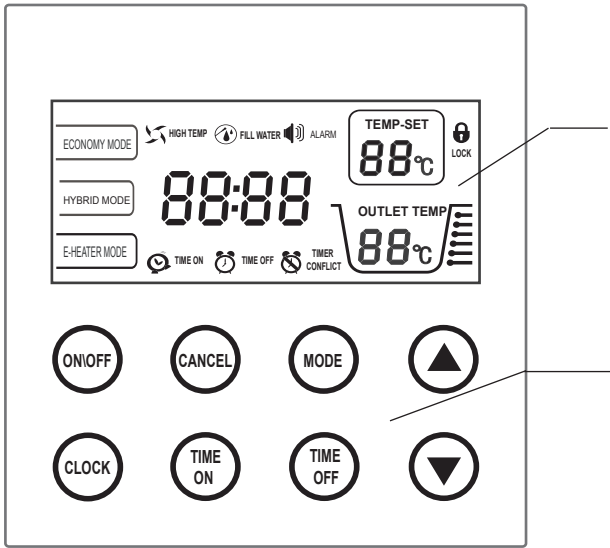

⑧	40
⑨	OUTLET TEMP
⑩	TIMER CONFLICT (,)
⑪	TIME OFF
⑫	TIME ON
⑬	CLOCK
⑭	E-HEATER MODE ()
⑮	HYBRID MODE , +
⑯	ECONOMY MODE

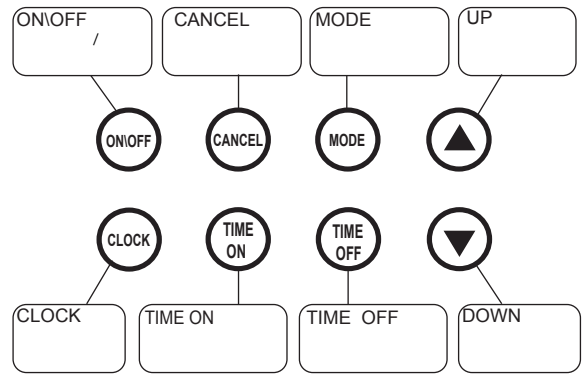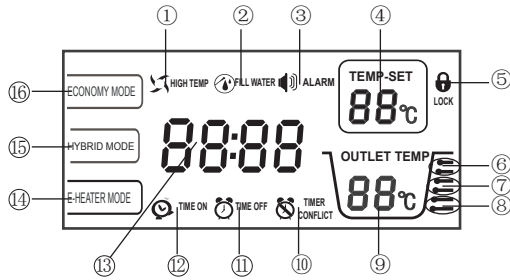

①	HIGH TEMP 50 ,
②	FILL WATER
③	ALARM
④	TEMP-SET
⑤	LOCK
⑥	60
⑦	50

■

3


1

ON/OFF,

ON/OFF






1

1

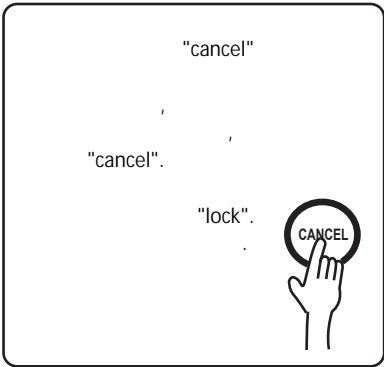

24-00:00.

00:00.

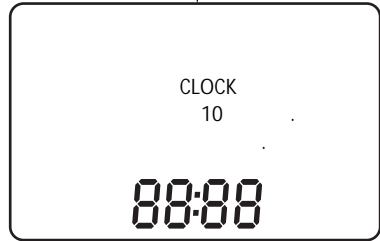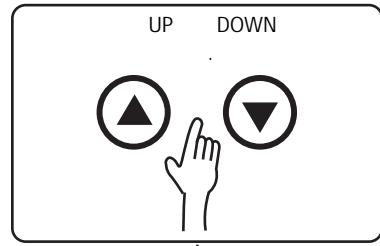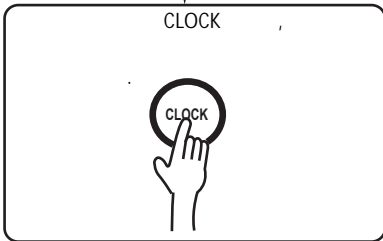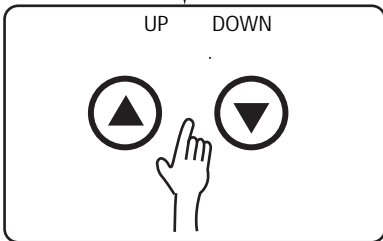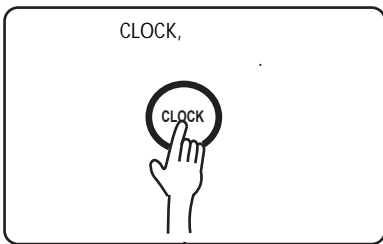

Economy (




Economy:

+5





-7

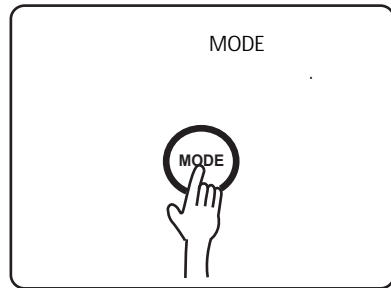

+55







+38

+60

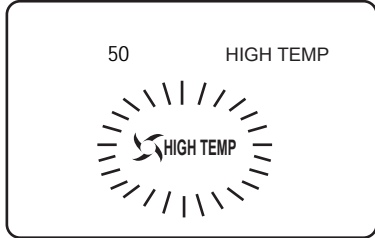
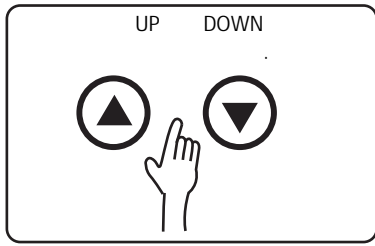












(TIME ON)

24:00

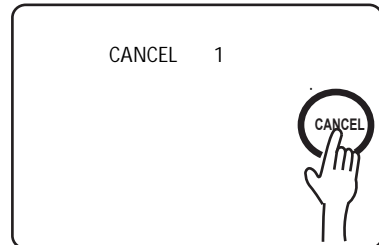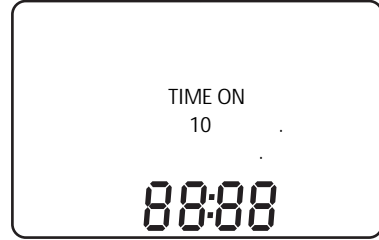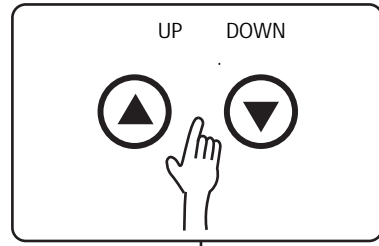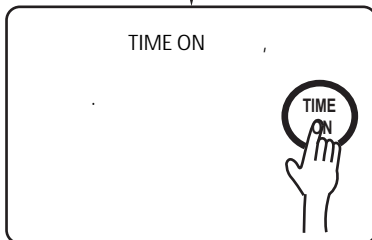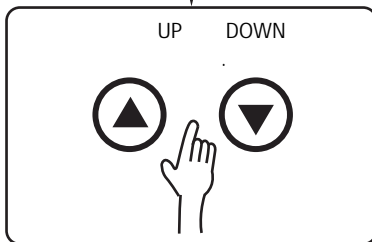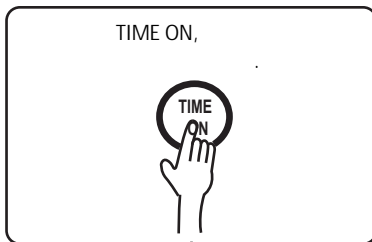

10

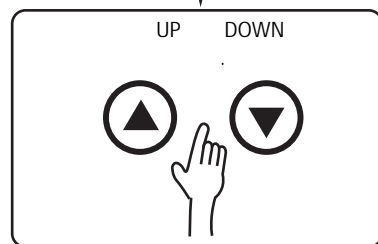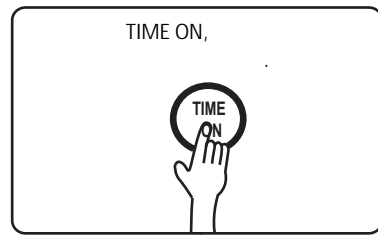

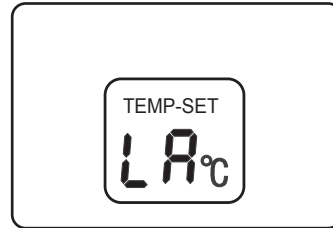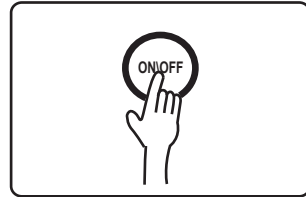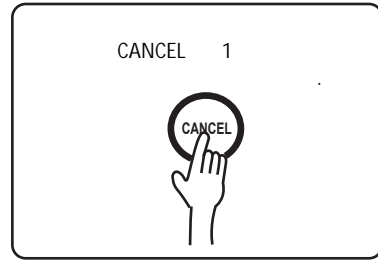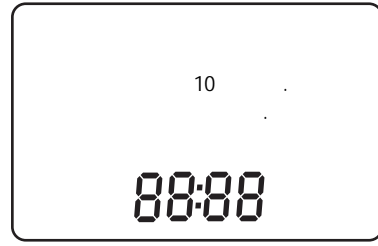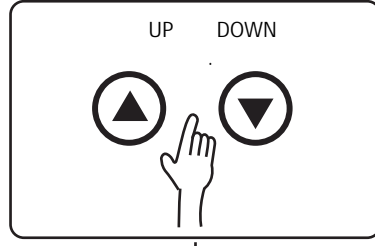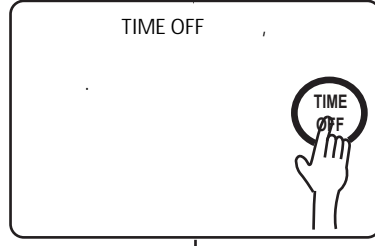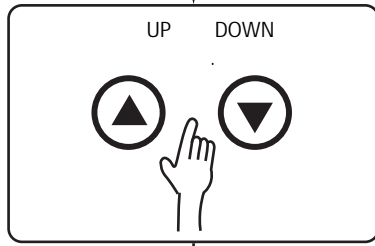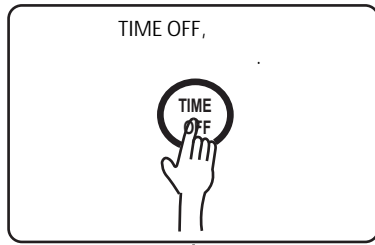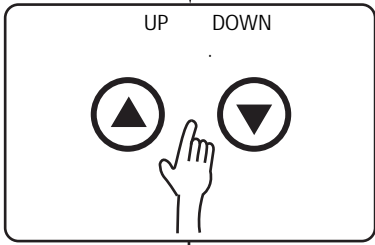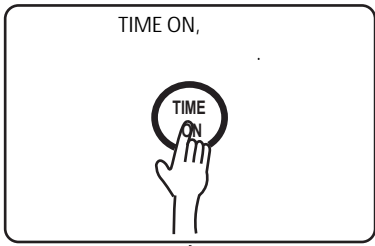

LA

-7

20

-7

LA

ALARM,

ALARM


















ALARM

CANCEL

ALARM

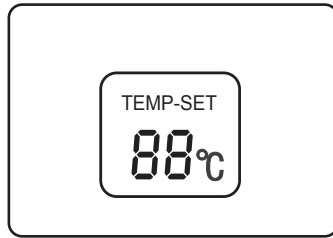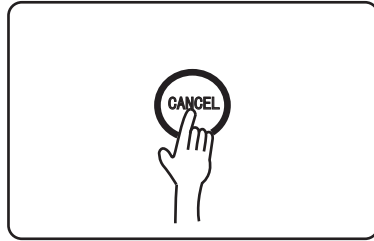

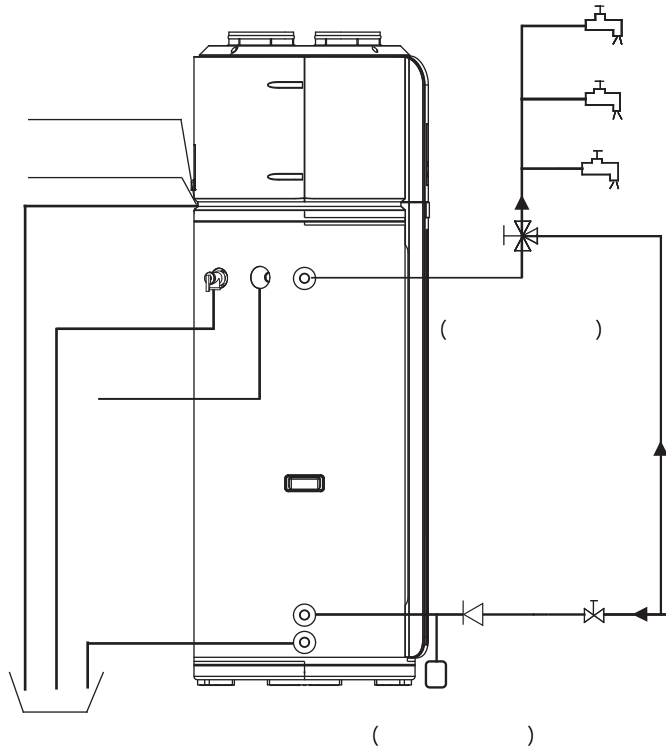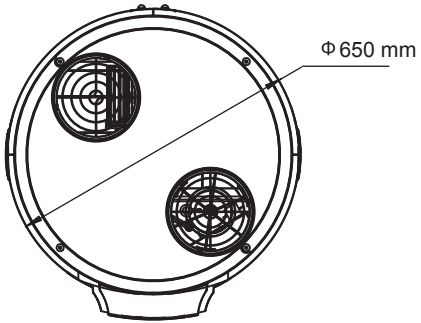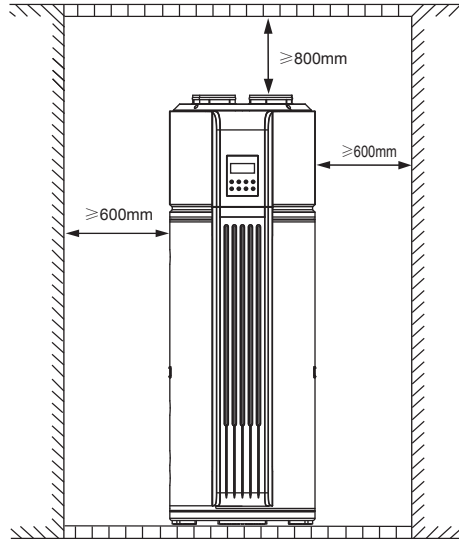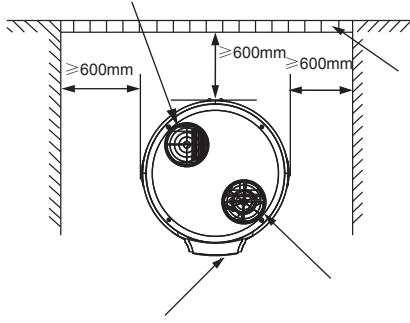
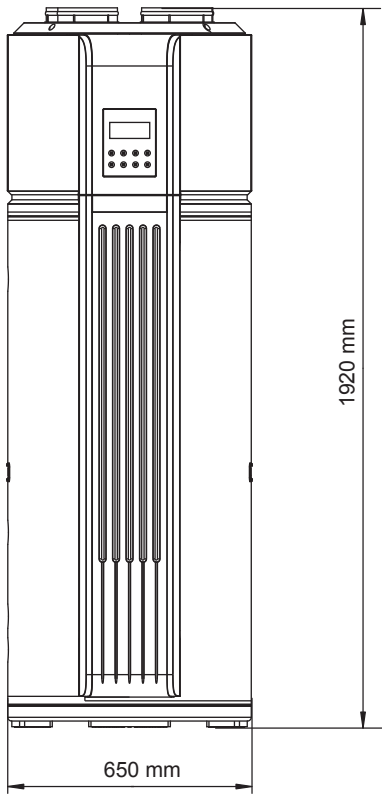


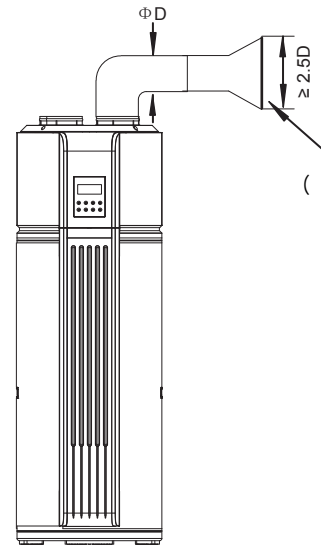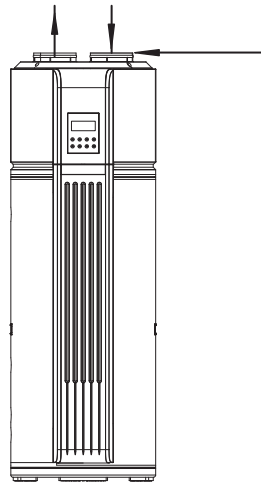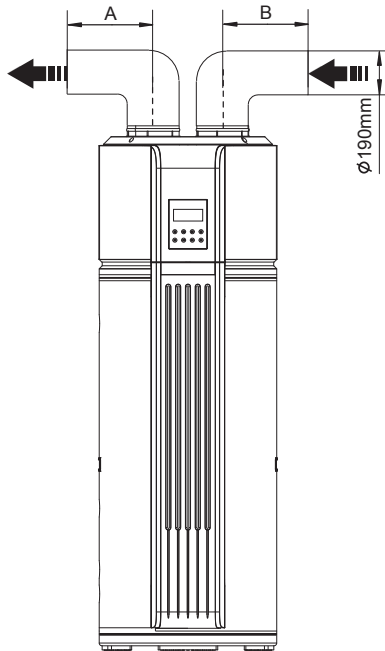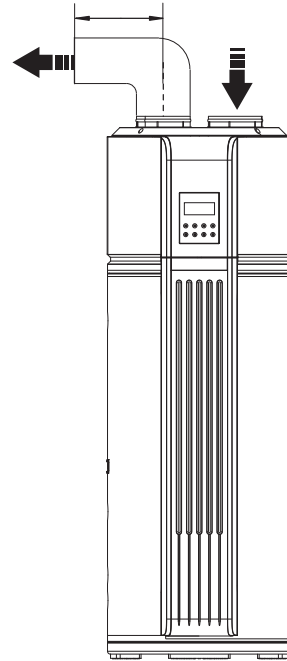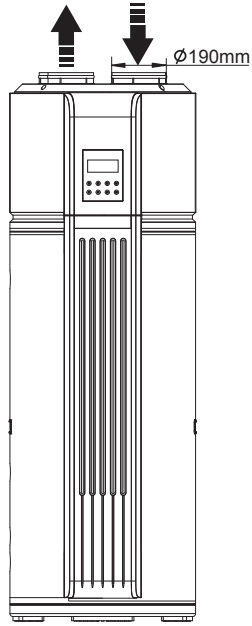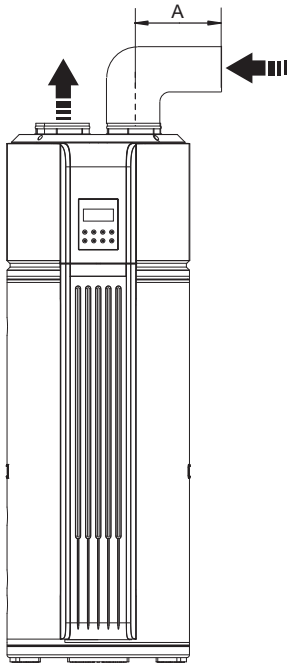


1,2

!

()	$\phi 190$	190X190	
(/)	≤ 2	≤ 2	
(/)	≤ 10	≤ 10	
(/)	≤ 2	≤ 2	
-	≤ 5	≤ 5	

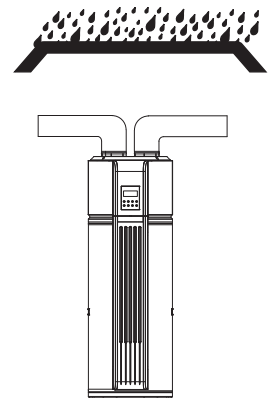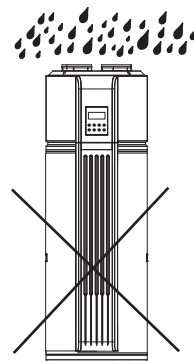

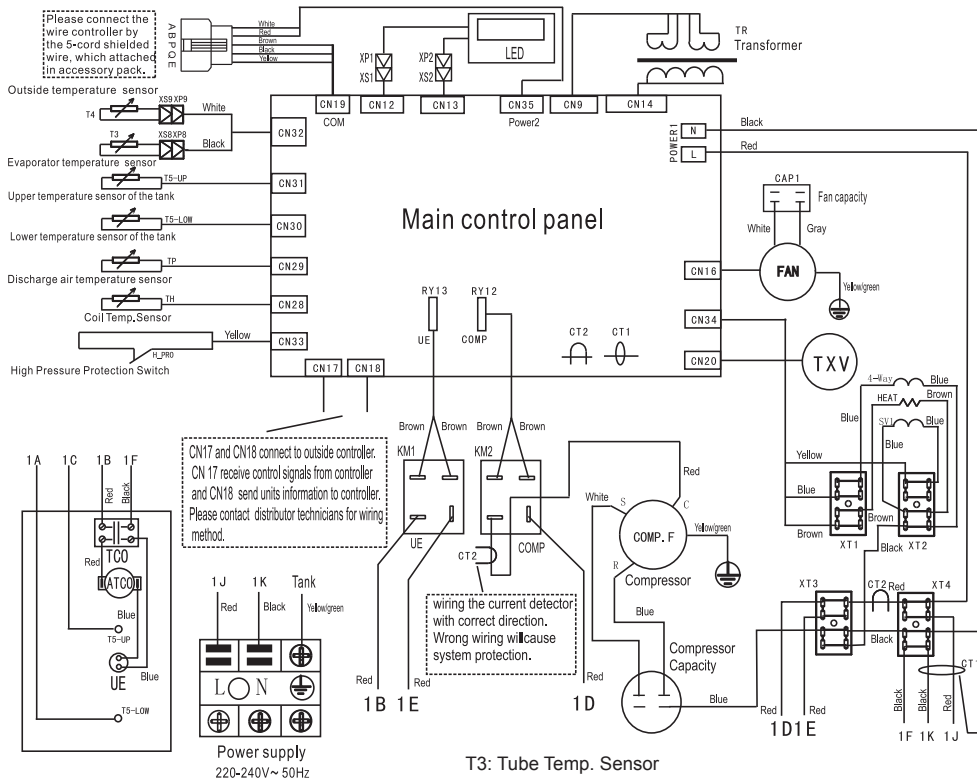

Item	Content
CAP1	Fan capacity
CN1-35	Terminal base
TR	Transformer
1A-1C, 1F	Connected wires inside of the tank
CT2	AC mutual inductor
CT1	Zero-phase electrolytic mutual inductor
XS1, XS2	Butt plug
XP1, XP2	Butt plug
P0D	Pressure switch
RY12, 13	Relay connecting wires
KM1-2	Relay
T0D	Temperature protective switch
UE	Upper electric heater of the tank
ATCO	Anticold temperature recovery switch
XT1-XT4	Mid terminal base
TXV	ELECTRIC EXPANSIVE VALVE

SW2	
Model selection (User never allow to alter the factory settings)	
1	With Memory Recovery Domestic Sale Model
2	Without Memory Recovery Domestic Sale Model
3	With Memory Recovery Export Sale Model
4	Without Memory Recovery Export Sale Model

SW3	
Model selection (User never allow to alter the factory settings)	
2	With Electric Heater Model / Without Electric Heater Model

- T3: Tube Temp. Sensor
 - T4: Ambient Temp. Sensor
 - T5U: Tank Temp. Sensor (upper)
 - T5L: Tank Temp. Sensor (lower)
 - TP: Discharge Temp. Sensor(upper)
 - TH: Return air temperature sen
- ⏏ Earthing

E0	T5U
E1	T5L
E2	/
E4	
E5	
E6	
E7	
E8	Electric leakage protection
E9	
P1	
P2	
P3	
P4	
P8	
P9	
LA	()

	RSJ-35/300RDN3-B
	220-240V~50Hz
	(), 2
	(), 2
	/ ()
	30 mA ≤0.1sec

RSJ(i)-35/300RDN3-B			
		+	
	3000W	3000W	3000W
/	1500W/6.5A	4300W/18.7A	3000W/13.0A
	220-240V~ 50Hz		
	/		
	850W		
	3000W		
	R134a(1200g)		
	55	,	38 60
	/ ,		
	DN20		
	DN20		
	DN20		
	DN20		
	DN20		
	DN20		
	1.0MPa		
	80W		
	Φ650×1920mm		
	300L		
	123kg		
15/12 (/) : +15 +45			