


- ⊕ -L1-N Mains voltage
- Watch! Phase sensitive
- 1-3 Lockout input
- 4-5 Boiler enable
- 6-7 Direct hot water sensor
- 8-9 External influence 0-5V
- 10-11 Scom bus
- 12-13 PWM pump

- *1 By connection remove jumper.
- *2 Optional, for order see parts list.
- *3 Along with option weather compensated regulation.

A	01-12-2003 RL	Wiring diagram Serie R30 type 100	DAT. 18-11-2003		B3100E02	Page 1 - 2						
B	24-11-2004 RL		GET. RL.									
C	13-01-2005 RL		GEC. E.H.									
					A	B	C					

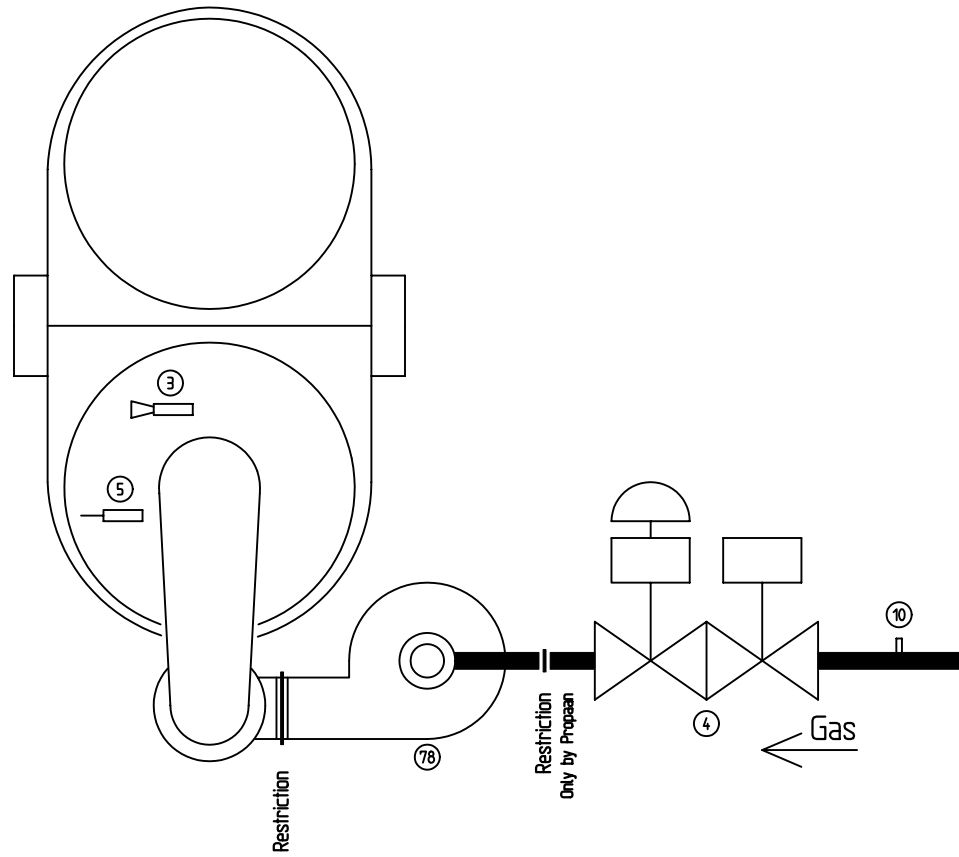

A	01-12-2003 R.L.	Gas train Serie R30 type 100	DAT. 18-11-2003	B3100E02	Page						
B	24-11-2004 R.L.		GET. R.L.		2 - 2						
C	13-01-2005 R.L.		GEC. R.L.		A	B	C				
		