
# Библиотека СОК <u>г</u>

# **CVB**



Instrucciones de montaje
Instruction leaflet
Notice de montage
Montageanweisungen
Montage-en gebruiksaanwijzing
Instrucções para a montagem
Istruzioni per l'installazione
Instrukcja obslugi



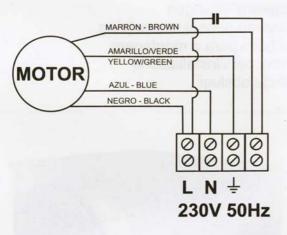

# **ENGLISH**

#### Cabinet fans CVB

The cabinet fans CVB have been manufactured to the rigorous standards of production and quality control as laid down by the international Quality Standard ISO 9001. All the components have been checked and all the final products have been tested at the end of the manufacturing process. We recommend that you check the following when receiving this product:

That is the correct size and model.

That the details on the rating label are those you require; voltage, frequency, performance...

## IMPORTANT SAFETY INFORMATION

 The installation should always be carried out in accordance with all current applicable Standards to the country in which it is installed.

The installation should always be carried out by a suitably qualified and competent person(s).

 These fans are not for stand-alone use. They are designed to be incorporated into ducted systems, machines or where safe operation has been ensured by providing applicable protection to moving parts.

The air temperature through the fan must not be lower than -15°c or higher than

+40°

Do not use this product in, or to extract from, potentially hazardous or explosive atmospheres.

#### FITTING

The cabinet fans CVB must be installed away from weather conditions.

Check that the impeller turns freely

Be sure after fitting that the door giving access to the fan can open easily The fan should be installed to ensure minimum vibration and noise transmission to surrounding ductwork and building frames.

The fan should always be installed so that safe operation and maintenance can be ensured.

ensureu.

## **ELECTRICAL WIRING**

 Before wiring the CVB, ensure that the main supply is disconnected and the values of voltage and frequency of main supply are compatible with those indicated on the rating label of the appliance (max. variation ± 5%)

For the electrical connection, follow the wiring diagram provided with the appliance.

- Check that the earth connection has been done correctly.

#### MAINTENANCE

 Before inspection or repair, ensure that the unit is disconnected from the mains electrical supply.

 Avoid excessive accumulation of dust and dirt on the motor. The fan impeller should be cleaned at least once (1) a year to ensure trouble free operation.

 Do not clean the unit with strong detergents or cleaning fluids. Use a damp (not wet) cloth only for cleaning.

(S&P reserves the right to alter specifications without notice)