

# Ufly BOX

TOUCH CONTROL

INSTALLATION AND SERVICING MANUAL



# 1

## Description

### 1.1 - Reading Icons



Buttons and symbol (outline + filled color area)  
This service is in operation at that time

 
 
 
Buttons and symbol (outline + empty color area)  
Present and active service but not in operation at that time



Buttons and symbol (outline in dark grey no filled area)  
Disabled or switched off service but present or installed

Buttons and symbol (outline in light grey no filled area)  
No service or not installed

### 1.2 - Part description

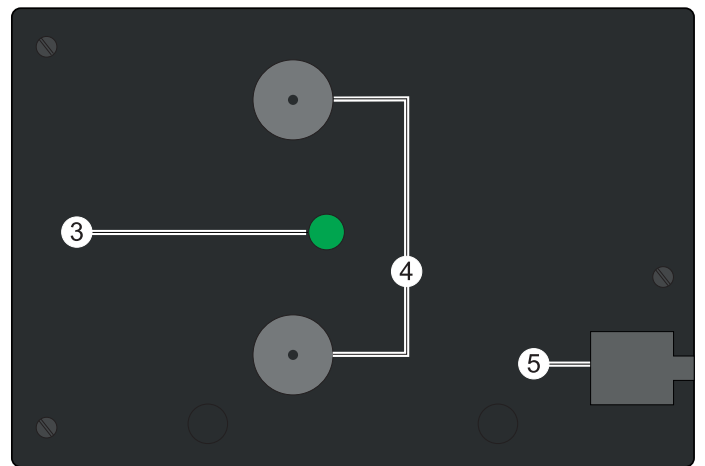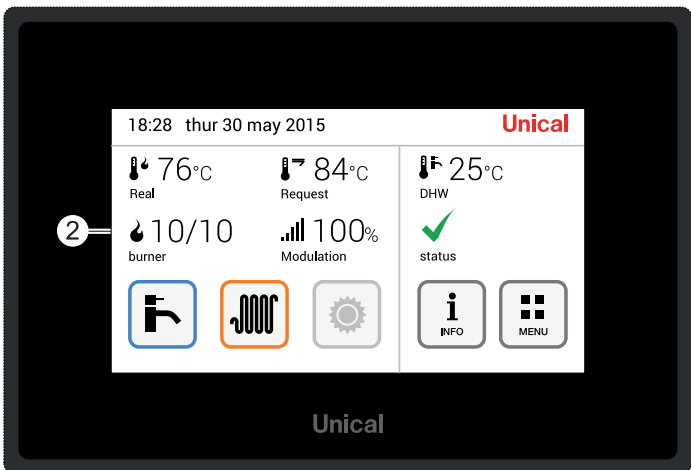


KEY		
1		RJ cable for wiring to BMM boiler.
2		Display Touch
3		Led di stato

	green	In operation OK (fixed light)
	red	Failure deyected (flashing light)
4		Magnets for fixing
5		RJ plug



## 2 Display and functions description
 
### 2.1 - Display mode

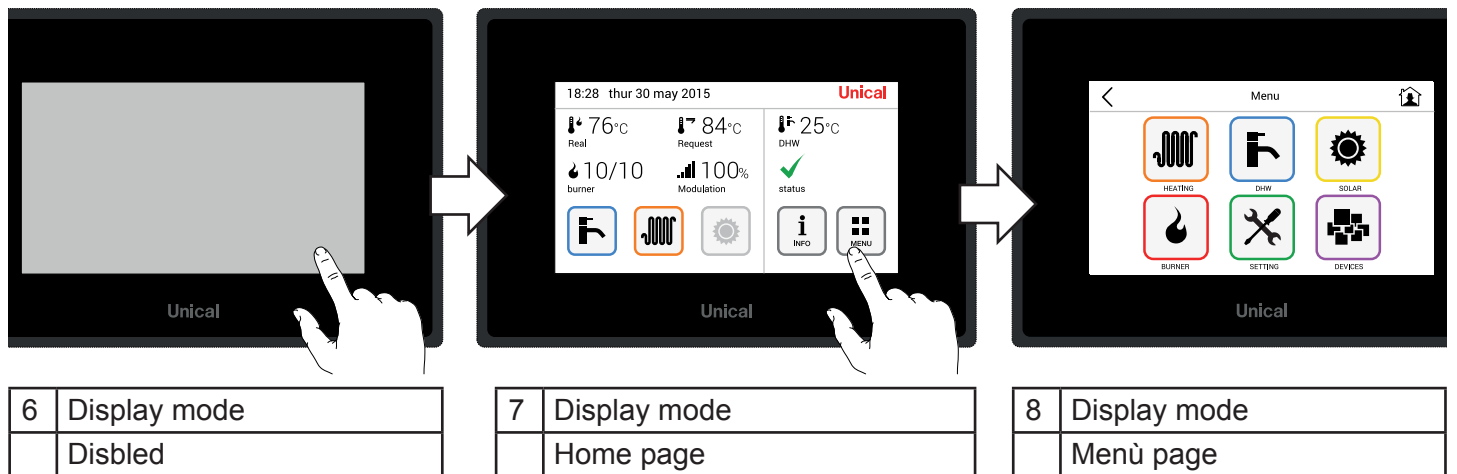

### 2.2 - Button One page back and Button Home


 
 
### 2.3 - Display in Home page

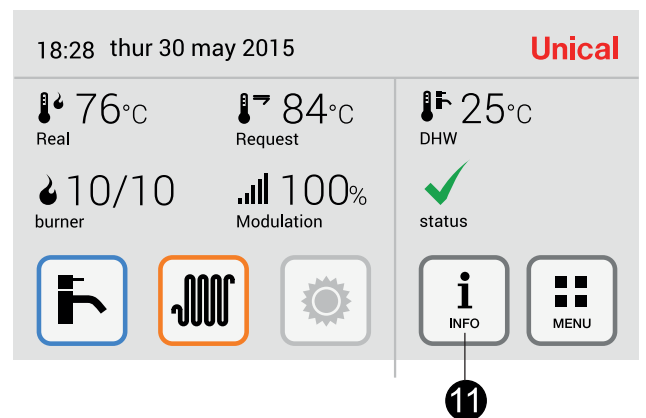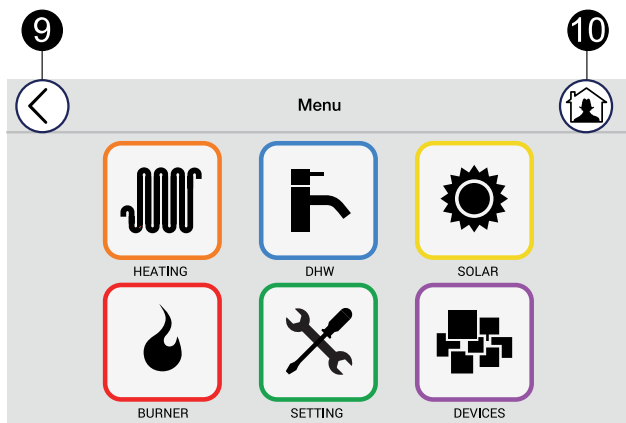





9	<	One page back
10	🏠	Return always to Home page

11	INFO: see at page 26
----	----------------------



## 2.4 - Menù Set up

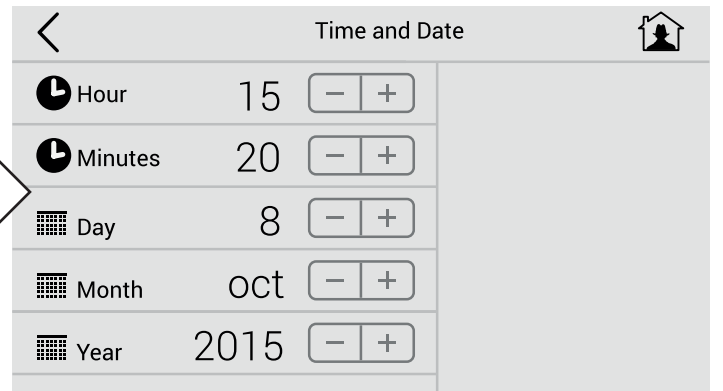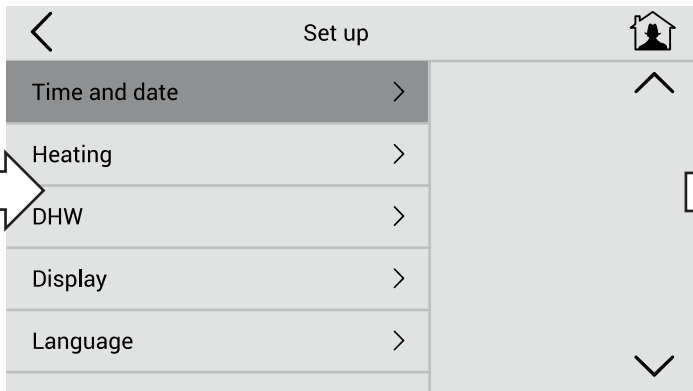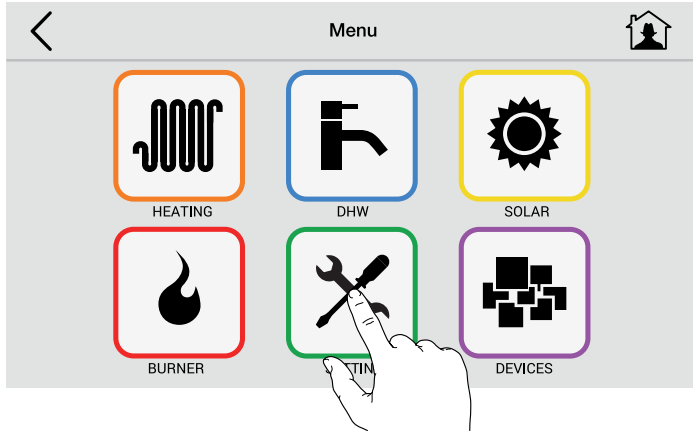   






# Menù Set up

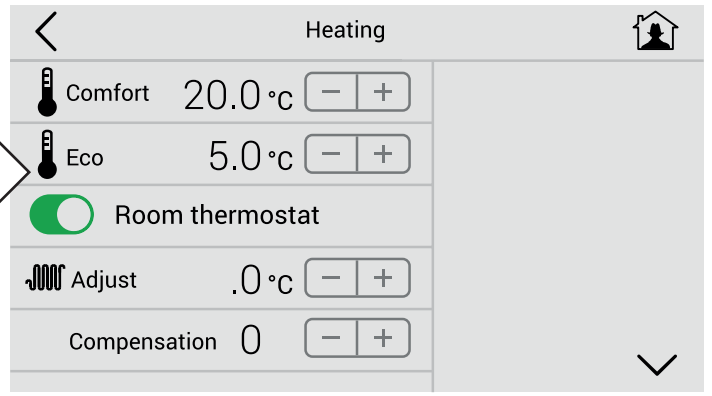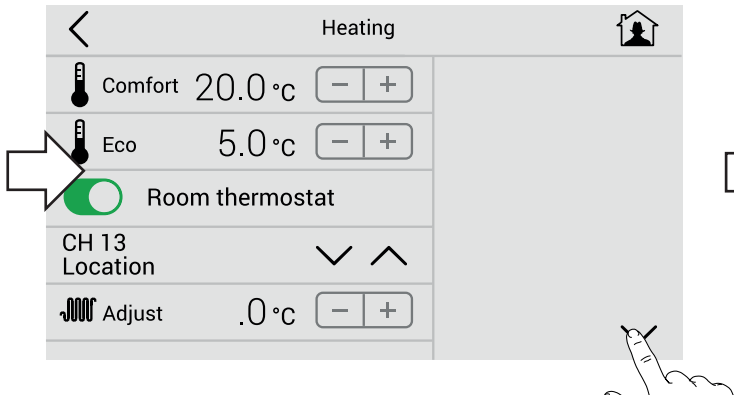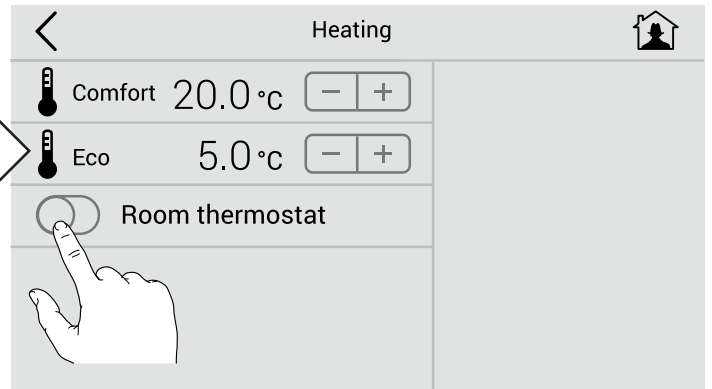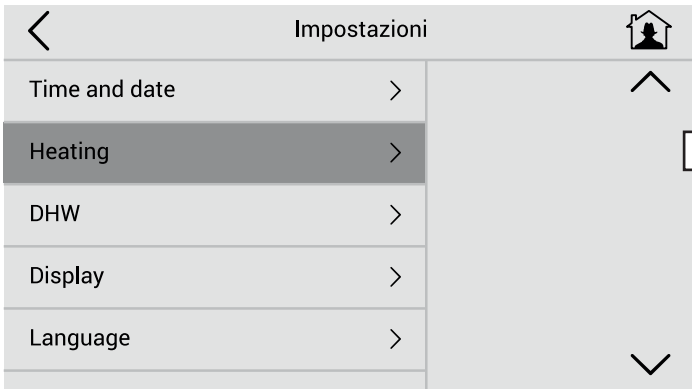    

# Menù Set up

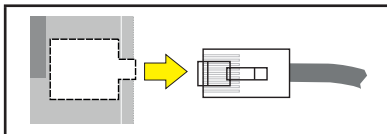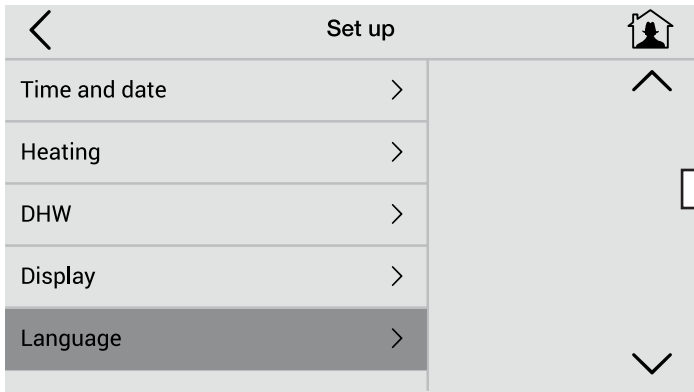  


 
 
 
 
 
If change language, it is necessary to remove and insert RJ plug, to store changes.

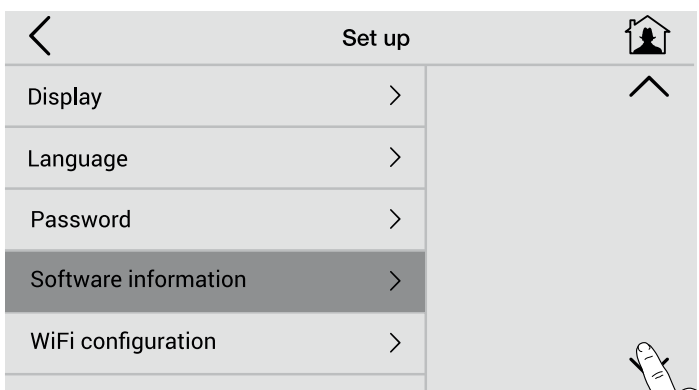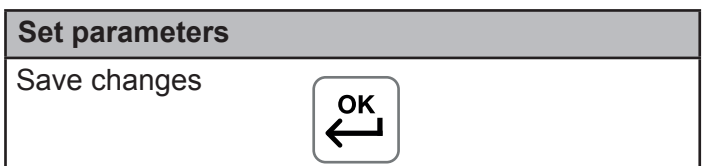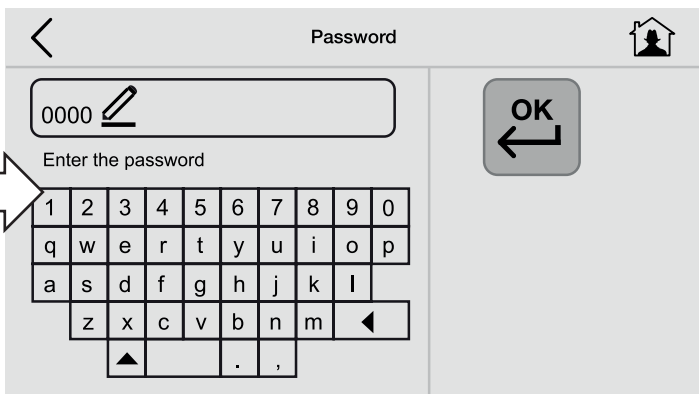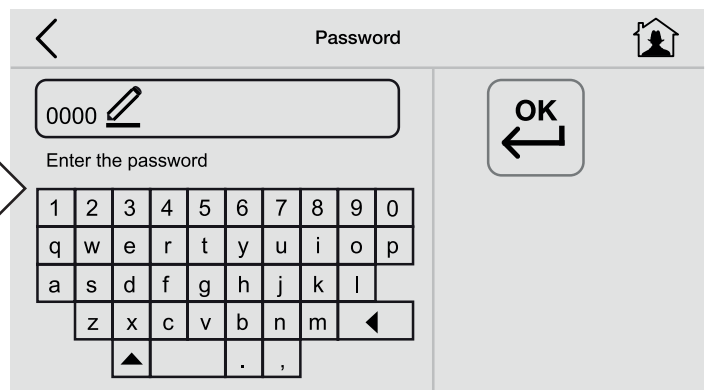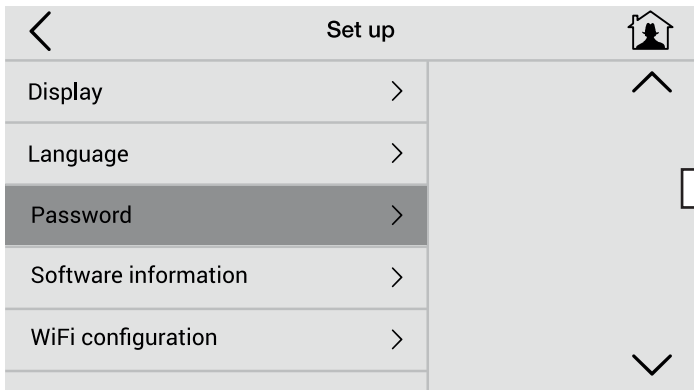

# Menù Set up



      Ufly APP (\*)


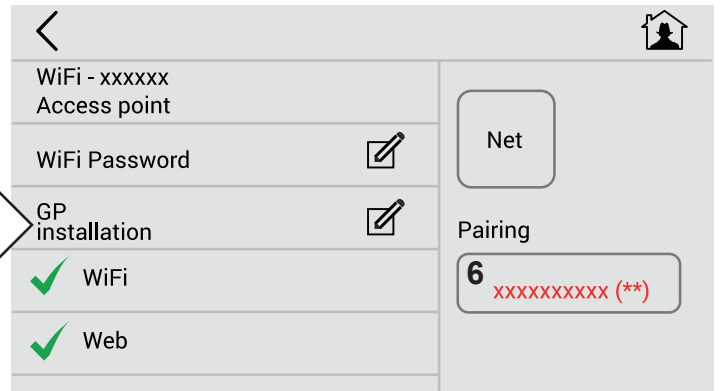
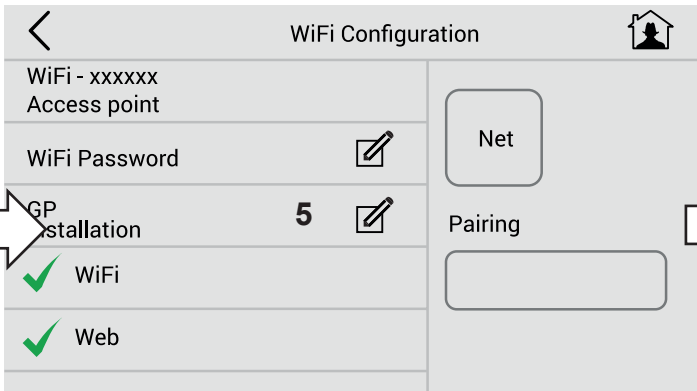
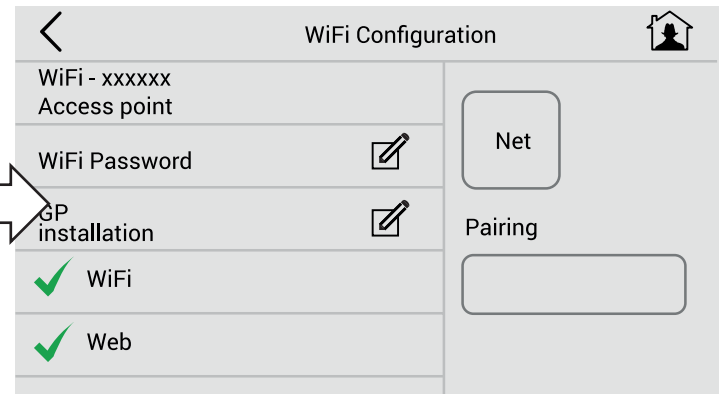
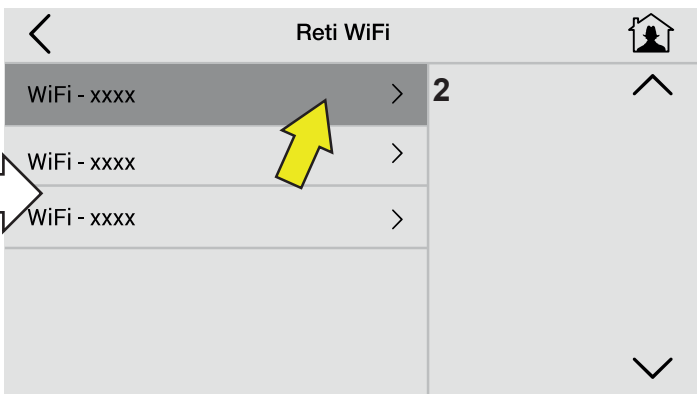
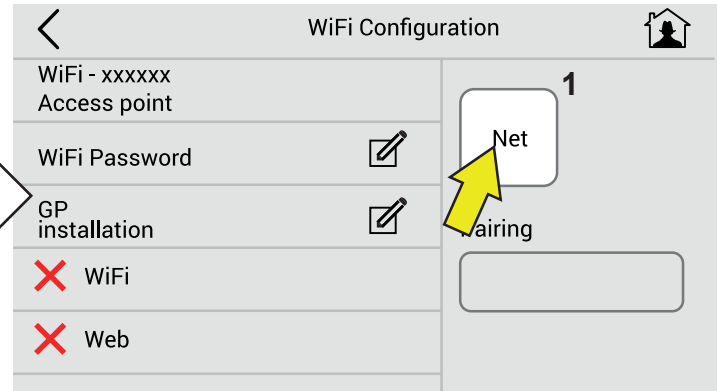
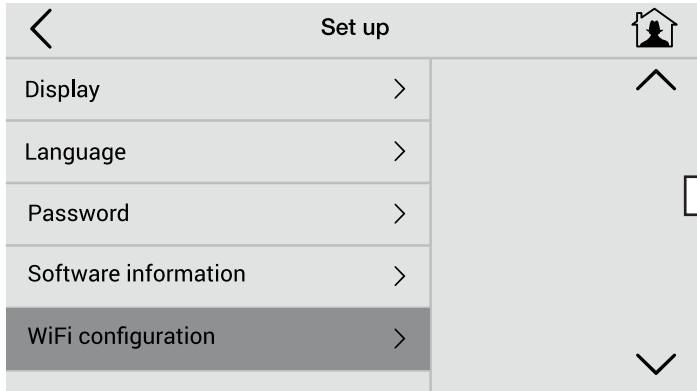


1	Connecting to the net (select Icon Net)
2	Wait and select the defined Net
3	Wait for connection to defined Net, access to WI-FI Password and digit.
	Wait for  WiFi - Web The serial number (GP) is already set at the bench testing boiler
<b>link Uflybox to smartphones (Wifi device)</b>	
4	Once installed and start Ufly APP (*) from WiFi device,
5	Link Serial Number of the boiler indicated in Ufly BOX on WiFi device.

6	Wait few seconds, on the display of Ufly BOX will show a random code <b>xxxxxxx (**)</b> in the box Pairing.
7	This code must be reported on the WiFi device. At this point my WiFi device is correctly linked to the boiler
(*)	<b>Ufly APP</b> at the moment is in testing phase, It is released on demand from post-sales office. Soon it will be available on the Store and Unical site.



## 2.5 - Menù Device

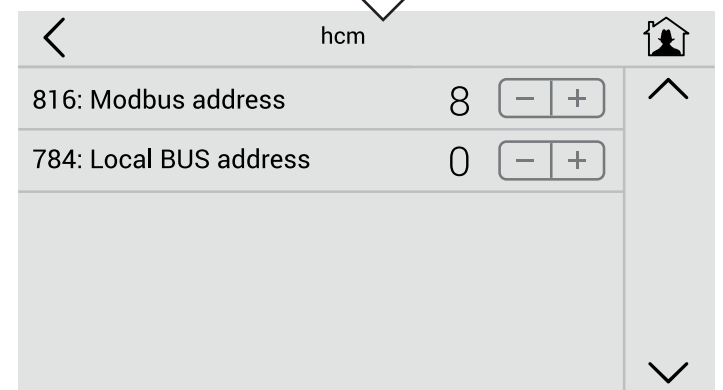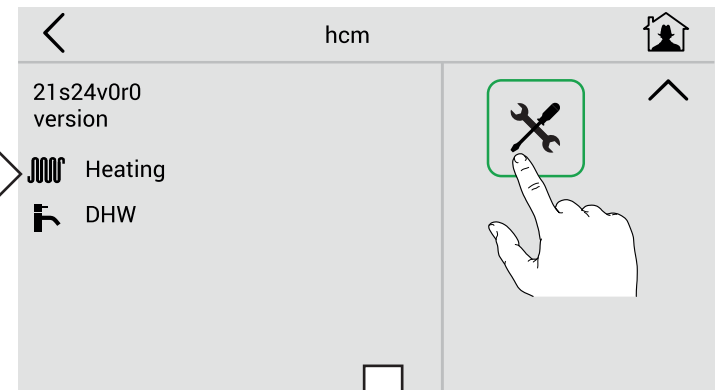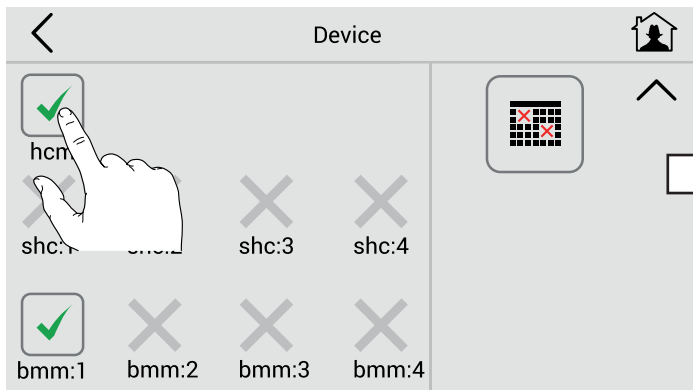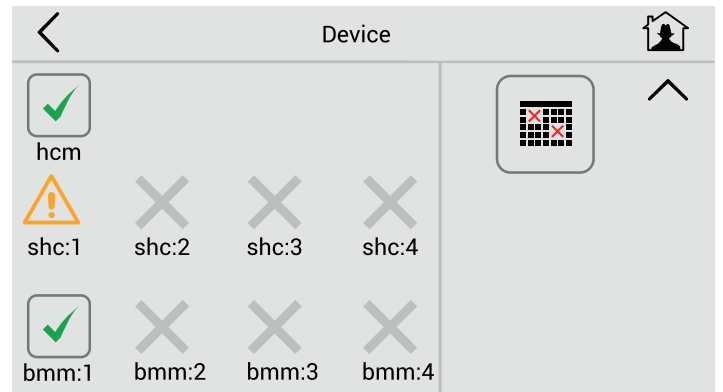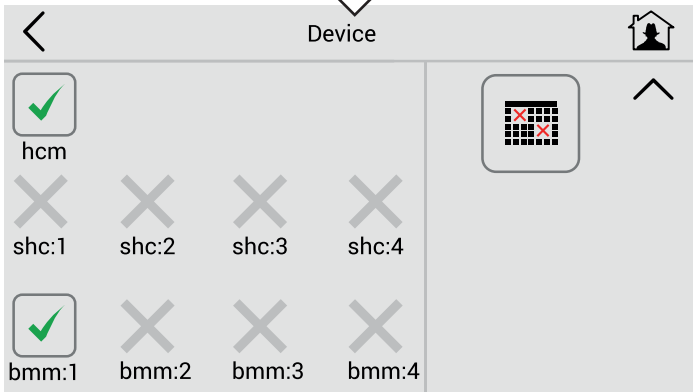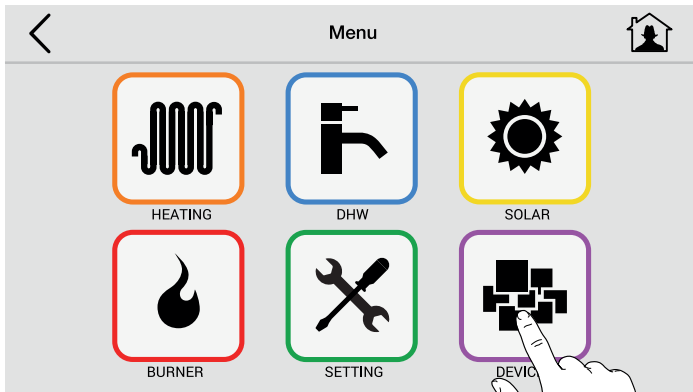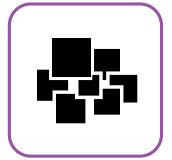       

At every boiler lighting, UFLY BOX scans devices, if new devices are recognized, such as:





<b>hcm / bcm</b>	Heating / Burner Control Manager System manager / Cascade
<b>shc</b>	Slave Heating Controller Multifunction module
<b>bmm</b>	Burner Modul Manager

They are displayed on the next screen, and is prompted to save the new configuration.



	Icon scanning devices
	Icon save new configuration

	Detected Device
	Not installed device
	Device previously detected, but not detected at the moment .


# Menù Device

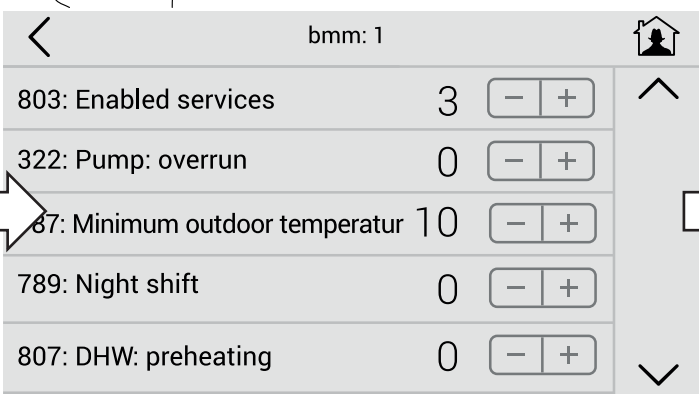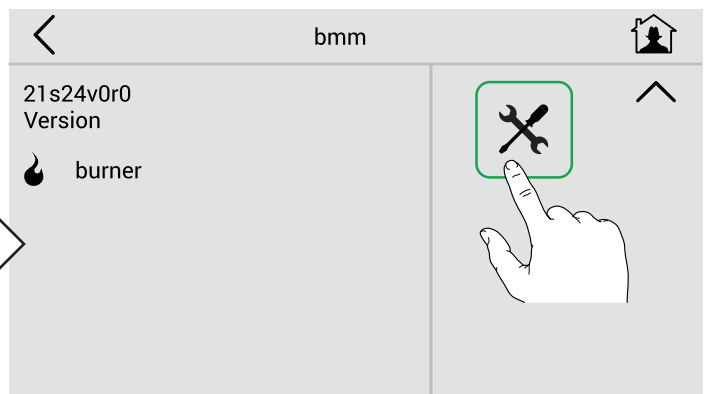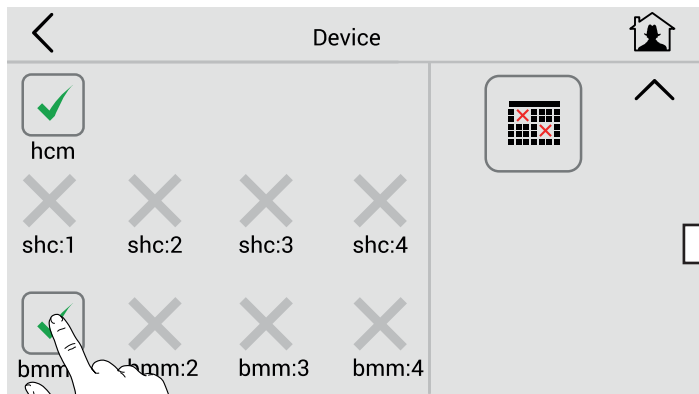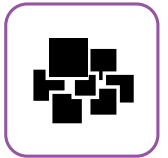    

 
 
**BMM / HCM Parameter**  
 List of parameter in par. 4.2 instruction manual of the boiler  
 To change the parameters is required password.

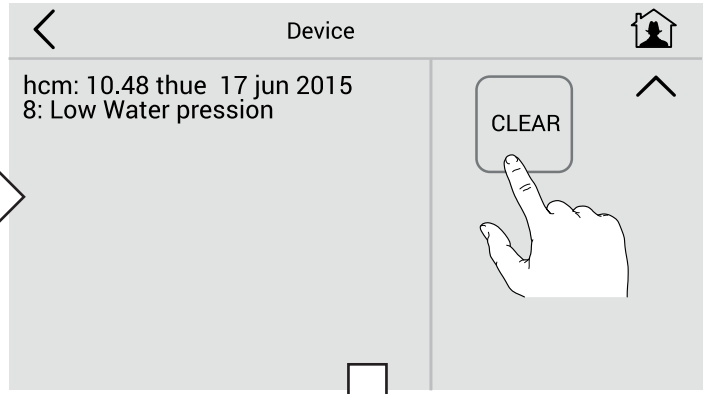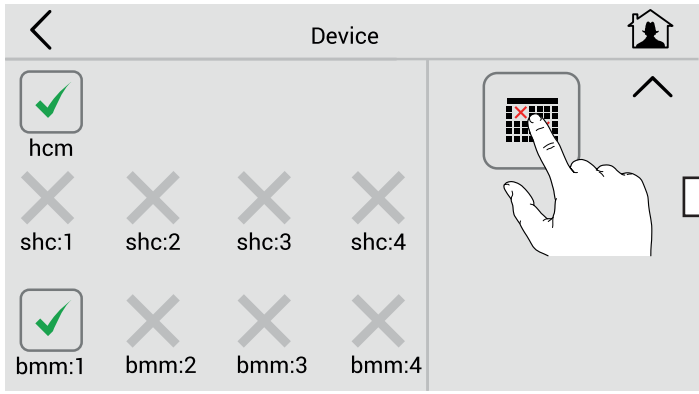




 
**Hystorical Error**  
 Clean display with Button Clear.

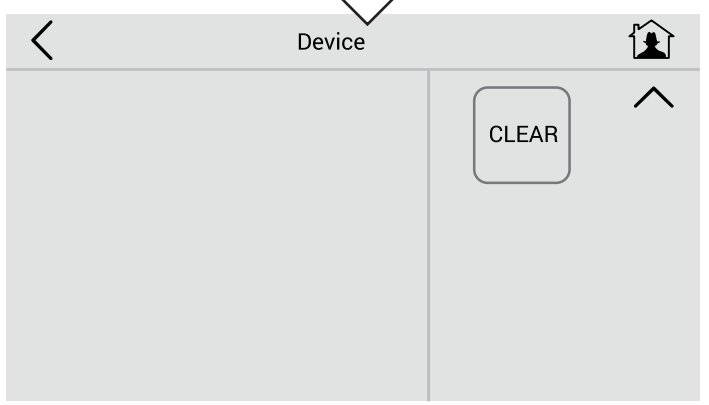


## 2.6 - Menù Heating

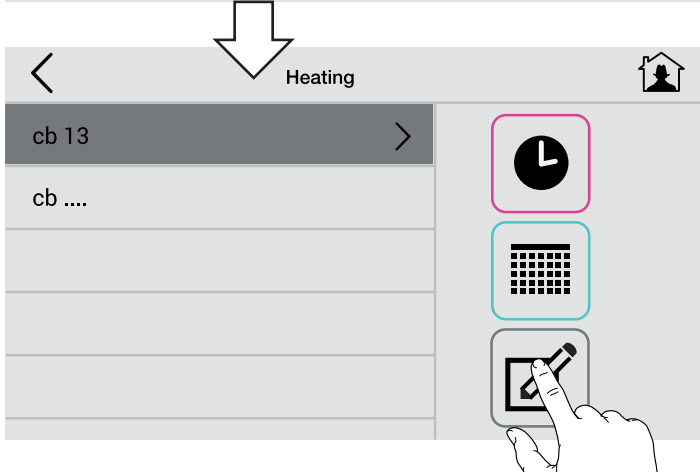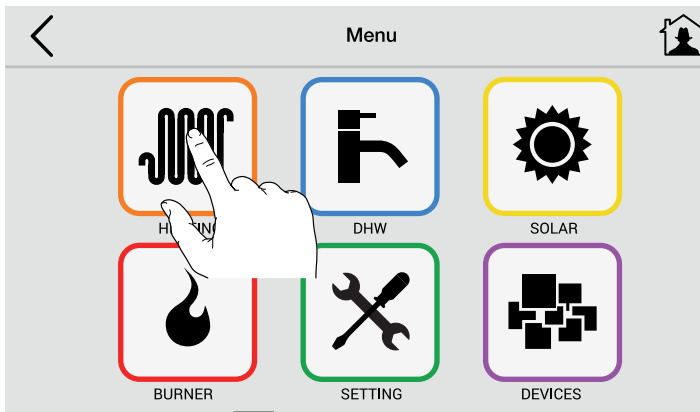  

    **Selection circuit CH**  
Change name to circuit and Save.

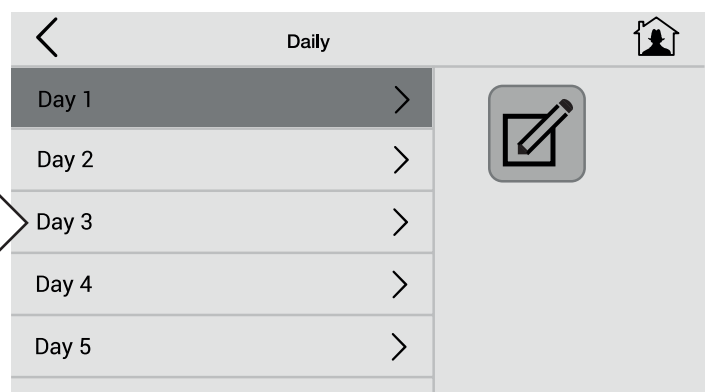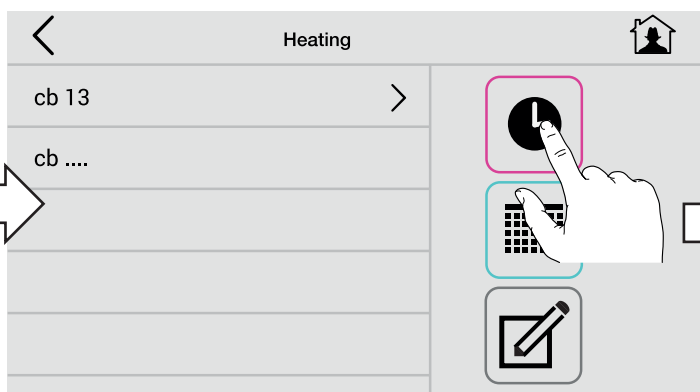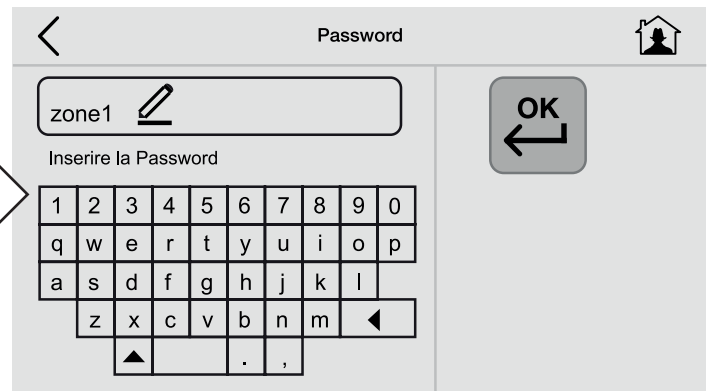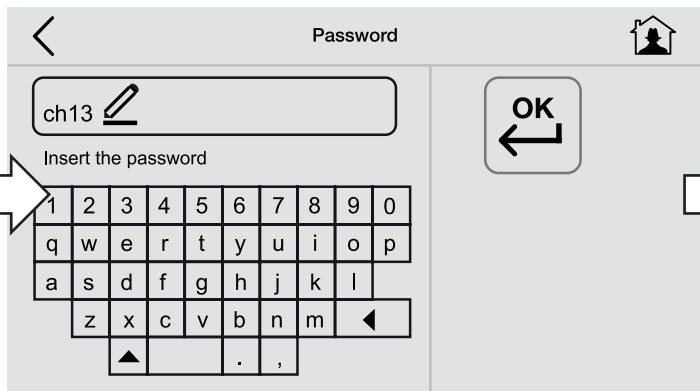

 **Set Day Type**  
Eventually rename Day 1 Day 5 .....  
example: Working day, Weekday, Festive.

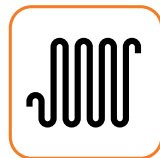

**Set periods**  
3 Time slots.


**Set Week Type (1)**  
Eventually rename Week 1.....Week 3  
example: Autumn, Winter, Jolly.

Insert day of the week **separately**  
(mon-tue-wed.-thu.-fri.-sat-sun) the day type  
Day1.....Day5.

**Set Week Type (2)**  
Insert day of the week **join the day**  
(mon-fri-sat-sun) the day type Day1.....Day5

Day 1	Day 1	Day 1	Day 1
Monday	✓	^	Saturday
Tuesday	✓	^	Sunday
Wednesday	✓	^	Join holidays
Thursday	✓	^	Join working
Friday	✓	^	

Day 1	Day 1	Day 1	Day 1
Monday	✓	^	Saturday
Tuesday	✓	^	Sunday
Wednesday	✓	^	Join holidays
Thursday	✓	^	Join working
Friday	✓	^	

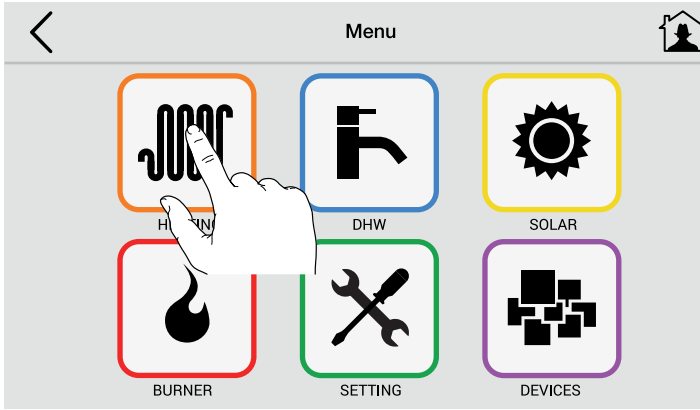 

### Select circuit to show set program

Standby







Comfort







Eco

Week1



Week2

            Week3

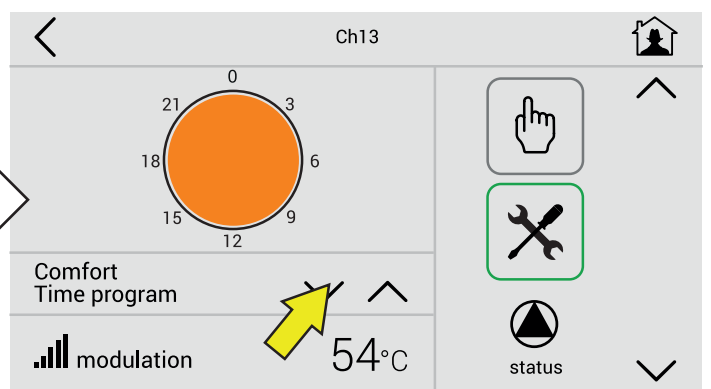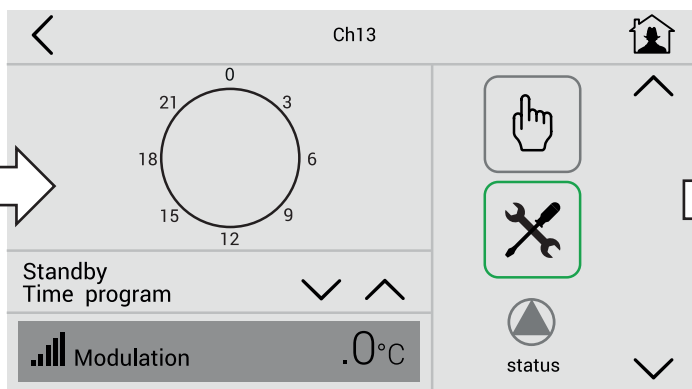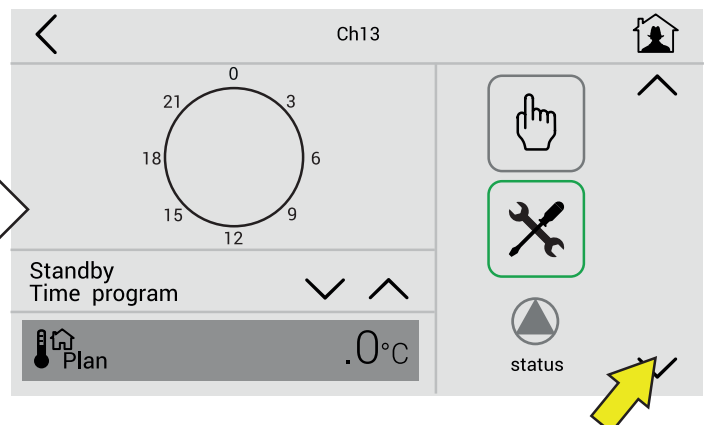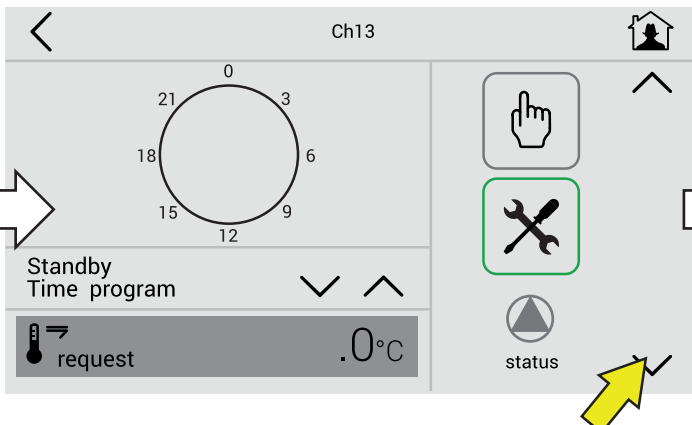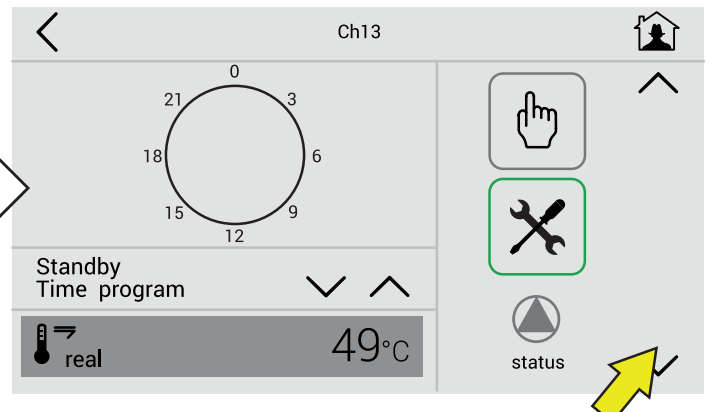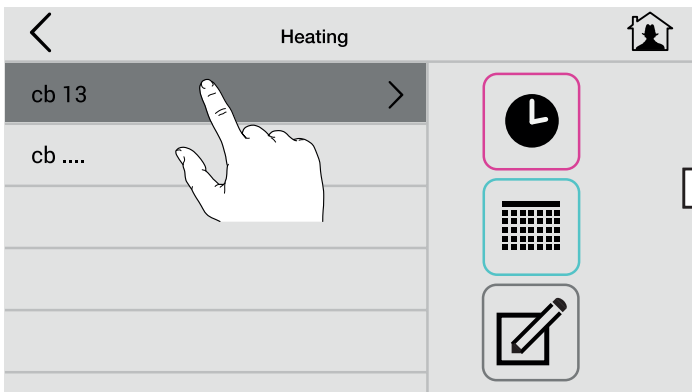


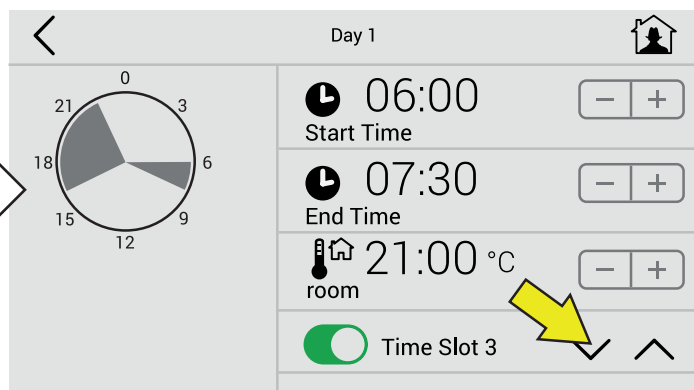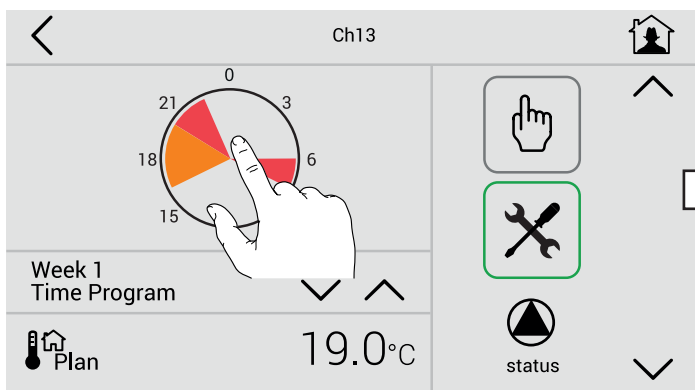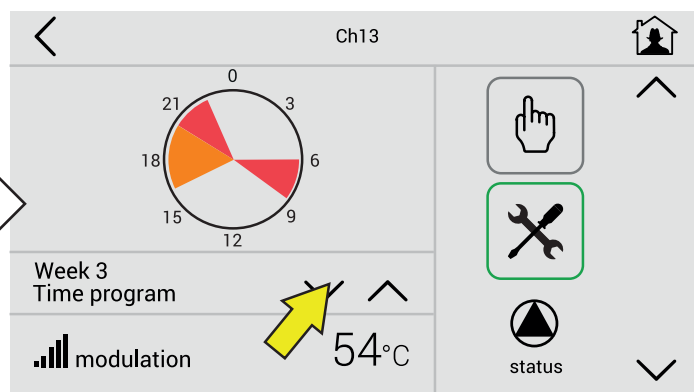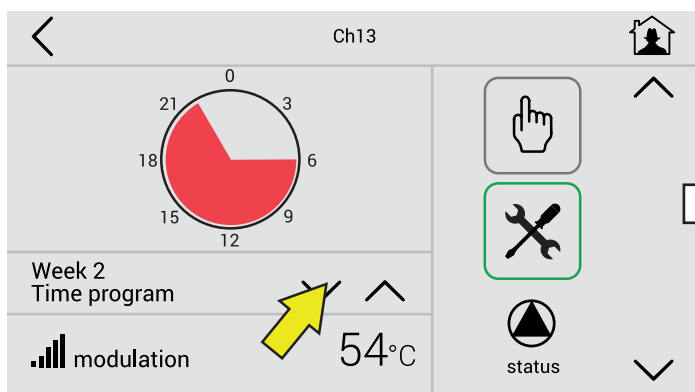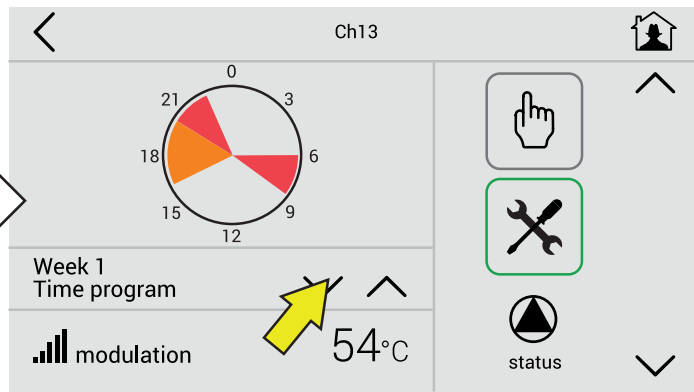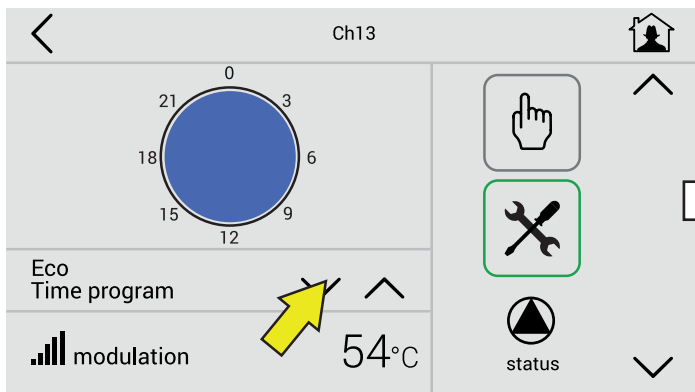

  **Touching the icon**  
 It shows only the details of the program in the 1-2-3 ... period.

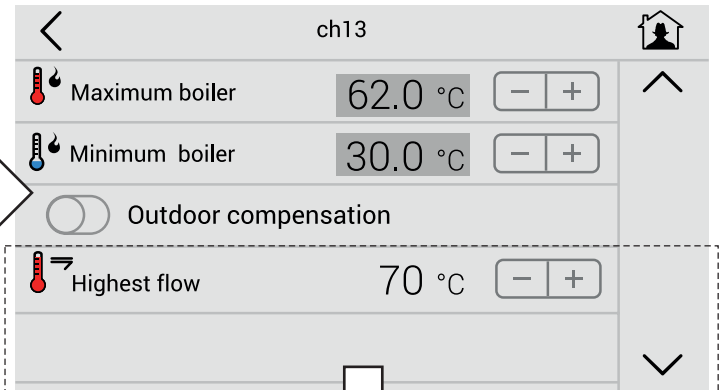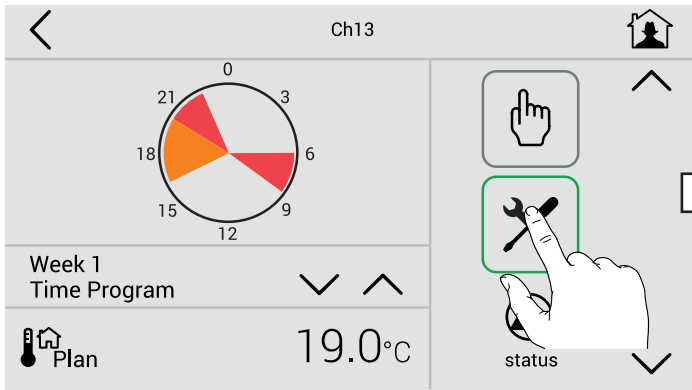


 
**Edit Parameters Heating circuit.**  
 Touching Settings icon you can change the highlighted parameter. **It is required password.** For other parameters you need **not** password.

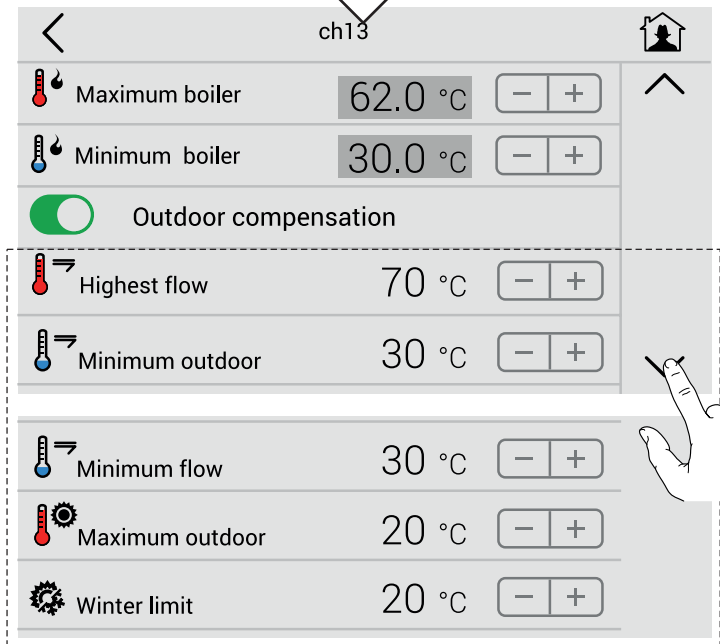

The parameters displayed are relative to the heating program.


Note:

  - To change the heating parameters is not necessary to go in the DEVICES menu.
- The psw remains active until you return to the MENU'.

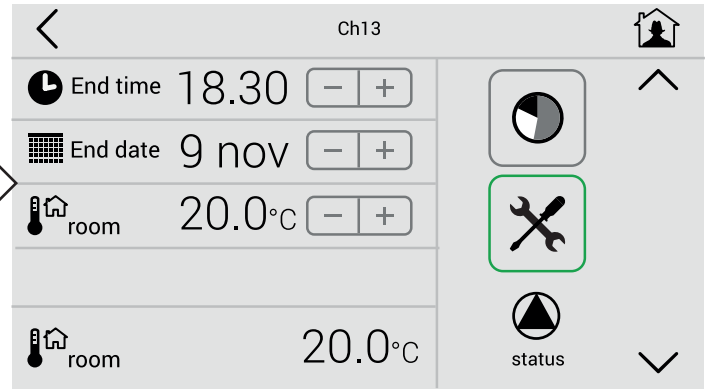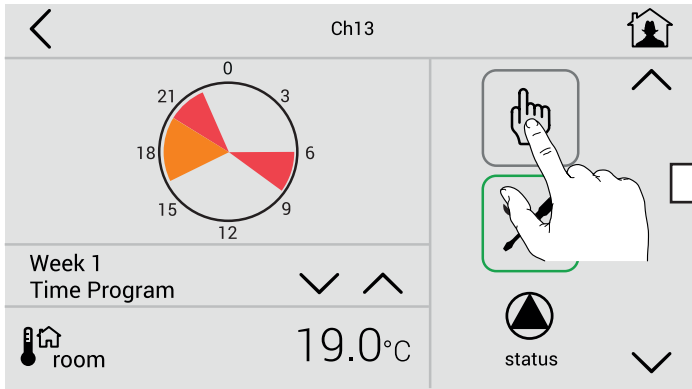


Activation in Working Manual

 
Working Manual set the parameter

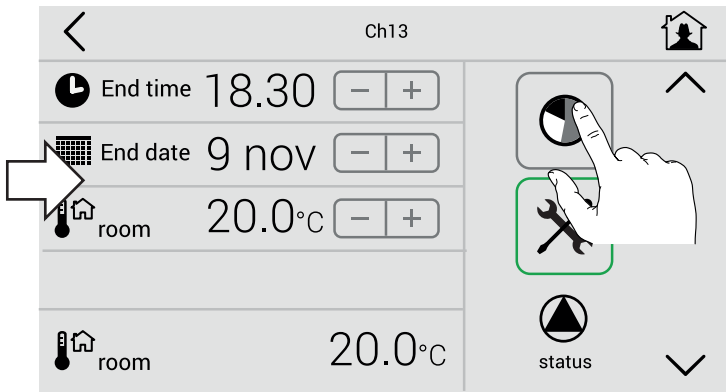

 
Return to operation with the set program (automatic).

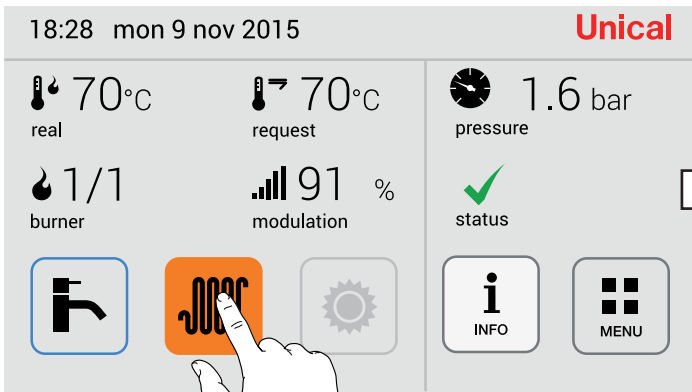

From Home Page

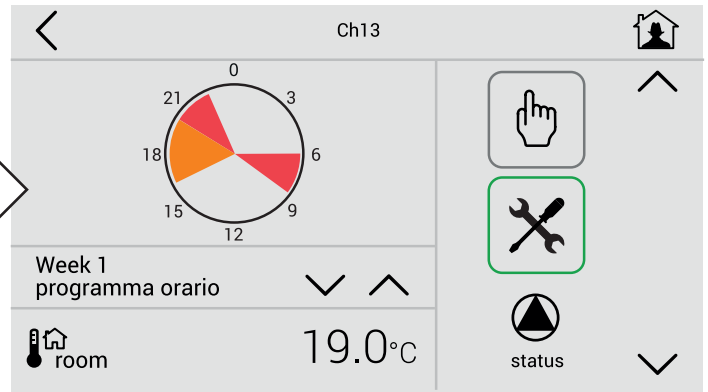 




 
Is it possible View and Modify program and HEATING parameters

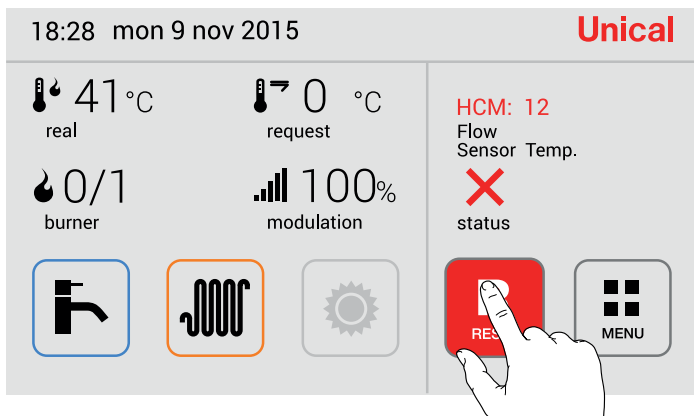

Example Boiler in Error (Block):  
Reset the boiler with R button






## 2.7 - Menù DHW

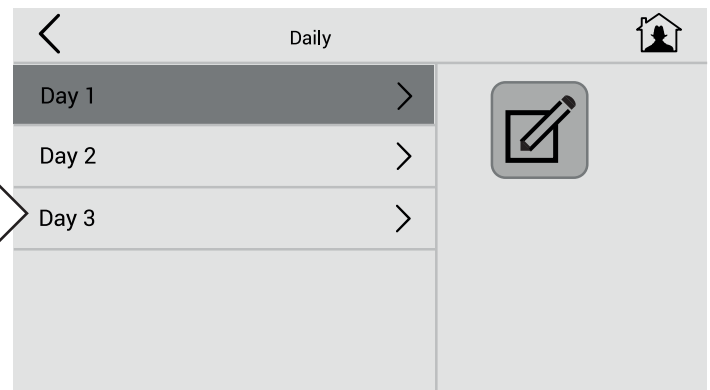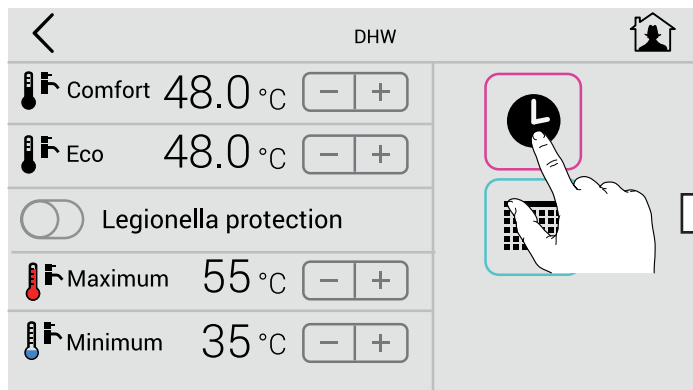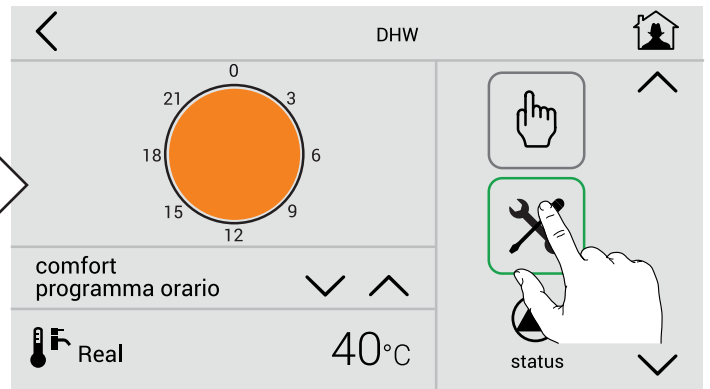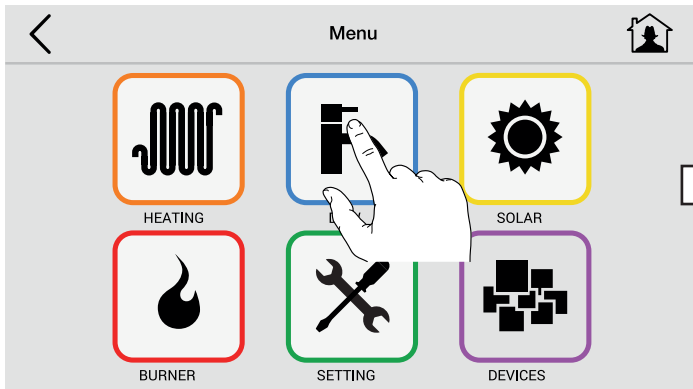    

### Set Day Type

   
Eventually rename Day 1.....Day5  
example: Working time, Weekday, Festive.

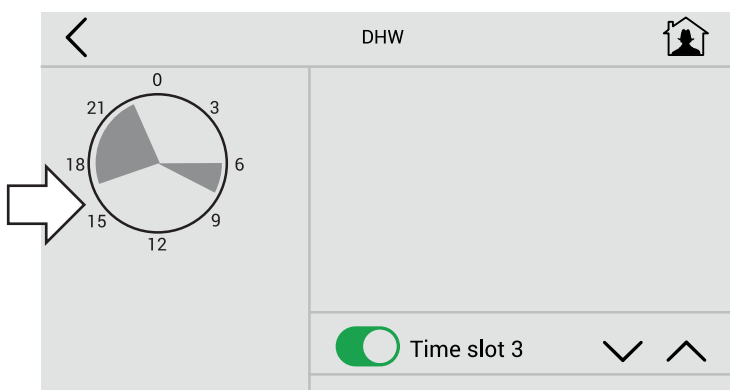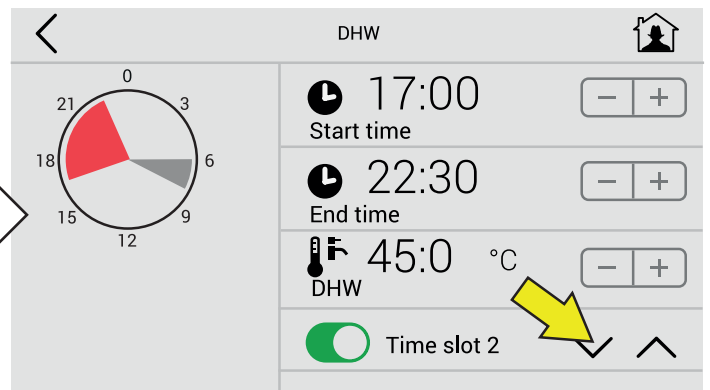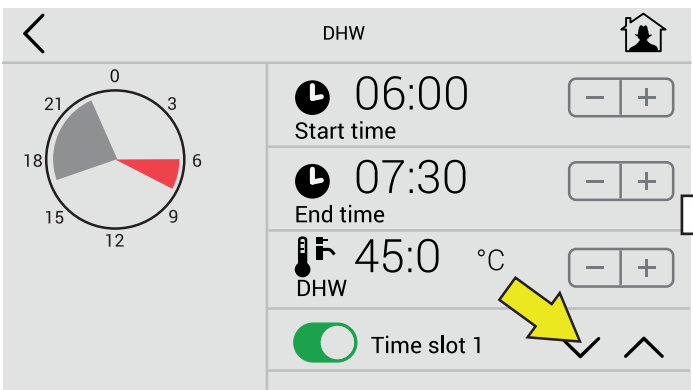



### Set periods

3 Time slots.





← DHW 



 Comfort 48.0 °C [-] [+]


 Eco 48.0 °C [-] [+]

Legionella protection

 Maximum 55 °C [-] [+]

 Minimum 35 °C [-] [+]


 

← Weekly 

Week 1 >

Week 2 >

Week 3 >



← Weekly 

Day 1 Monday	∨ ∟ ▲	Day 1 Saturday	∨ ∟ ▲
Day 1 Tuesday	∨ ∟ ▲	Day 1 Sunday	∨ ∟ ▲
Day 1 Wednesday	∨ ∟ ▲	<input type="checkbox"/> Join holidays	
Day 1 Thursday	∨ ∟ ▲	<input type="checkbox"/> Join working	
Day 1 Friday	∨ ∟ ▲		


**Set Week Type (1)**

Eventually rename Week 1.....Week 3  
example: Autumn, Winter, Jolly.

Insert day of the week **separately**  
(mon-tue-wed.-thu.-fri.-sat-sun) the day type  
Day1.....Day5.


**Set Week Type (2)**

Insert day of the week **join the day**  
(mon-fri-sat-sun) the day type Day1.....Day5

← Weekly 

 
 
Day 1 Monday	∨ ∟ ▲	Day 1 Saturday	∨ ∟ ▲
Day 1 Tuesday	∨ ∟ ▲	Day 1 Sunday	∨ ∟ ▲
Day 1 Wednesday	∨ ∟ ▲	<input type="checkbox"/> Join holidays	
Day 1 Thursday	∨ ∟ ▲	<input type="checkbox"/> Join working	
Day 1 Friday	∨ ∟ ▲		









← Weekly 



Day 1 Monday	∨ ∟ ▲	Day 1 Saturday	∨ ∟ ▲
Day 1 Tuesday	∨ ∟ ▲	Day 1 Sunday	∨ ∟ ▲
Day 1 Wednesday	∨ ∟ ▲	<input type="checkbox"/> Join holidays	
Day 1 Thursday	∨ ∟ ▲	<input checked="" type="checkbox"/> Join working	
Day 1 Friday	∨ ∟ ▲		

# Menù DHW

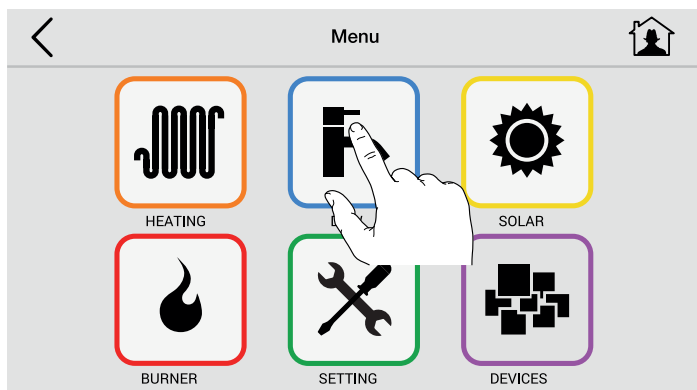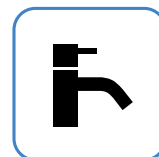

       
 
Select circuit to show set program
Standby
Comfort
Eco
Week1
Week2
Week3

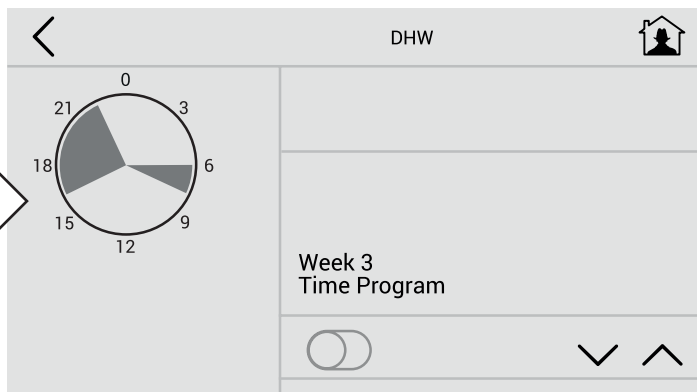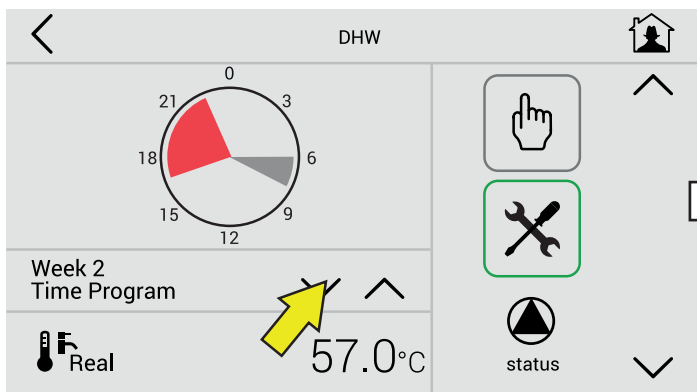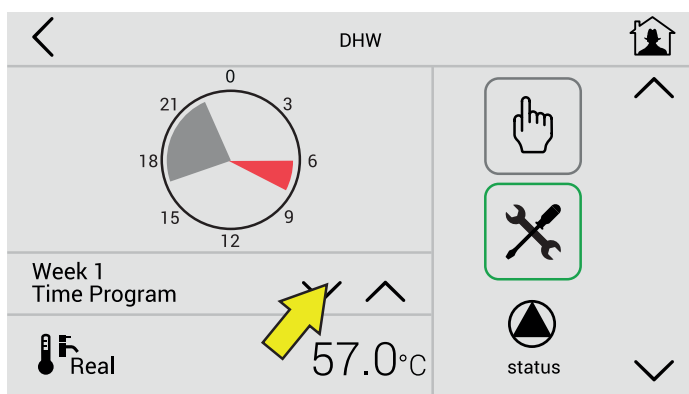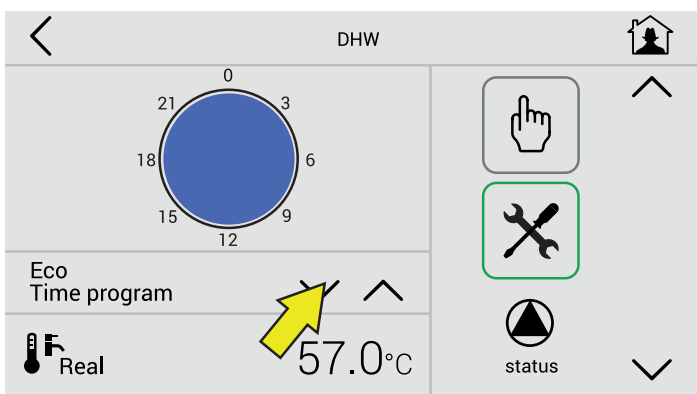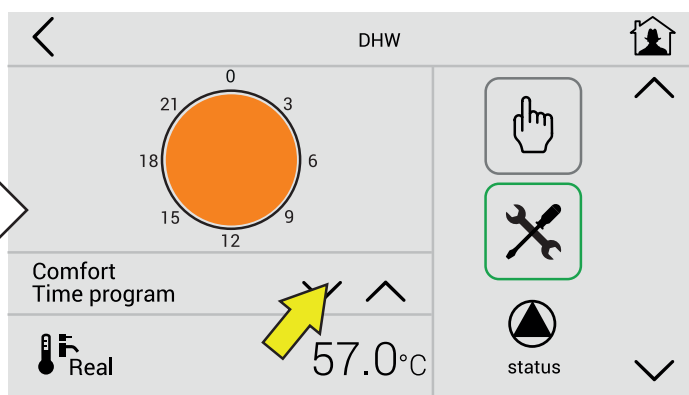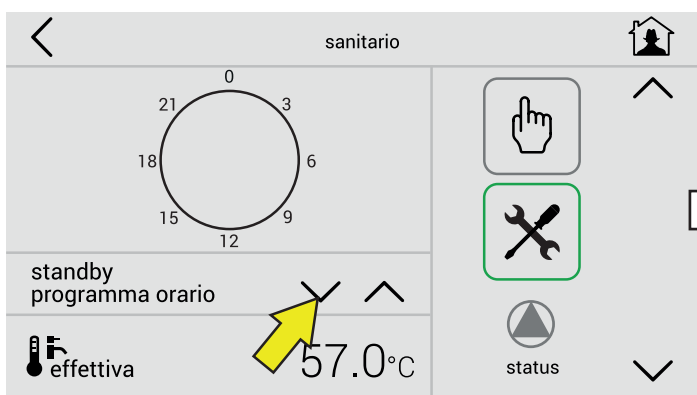

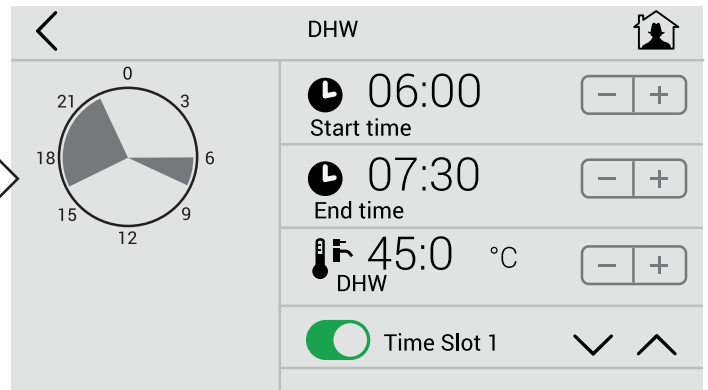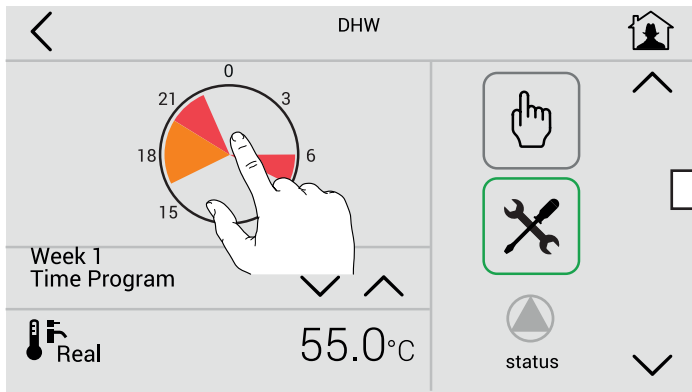

**Touching the icon**

  It shows only the details of the program in the 1-2-3 ... period.

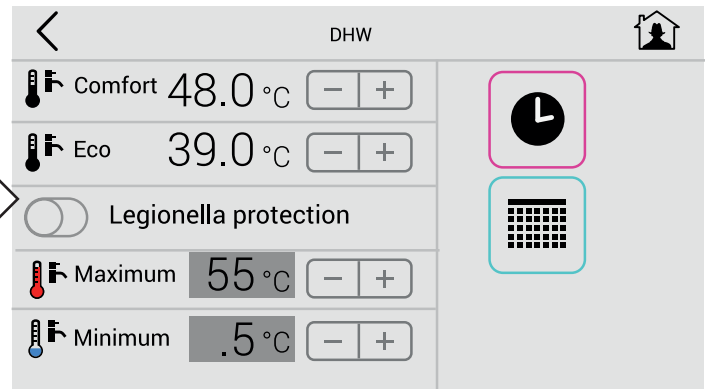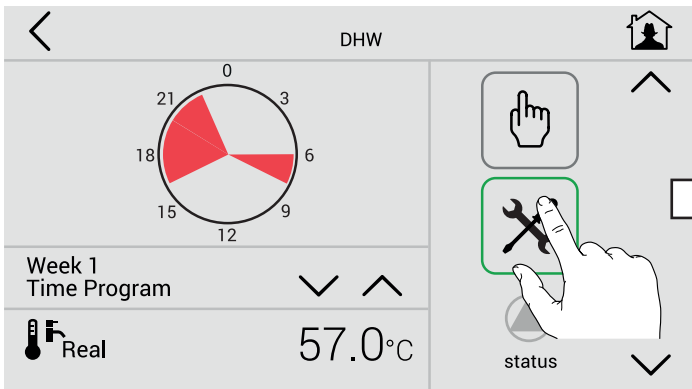


**Edit Parameters DHW**

Touching Settings icon you can change the highlighted parameter. **It is required password.** For other parameters you need **not** password.


The parameters displayed are relative to the heating program.  
 Note:  
 - To change the heating parameters is not necessary to go in the DEVICES menu.  
 - The psw remains active until you return to the MENU'.

**Legionella protection activation**

 
# Menù DHW

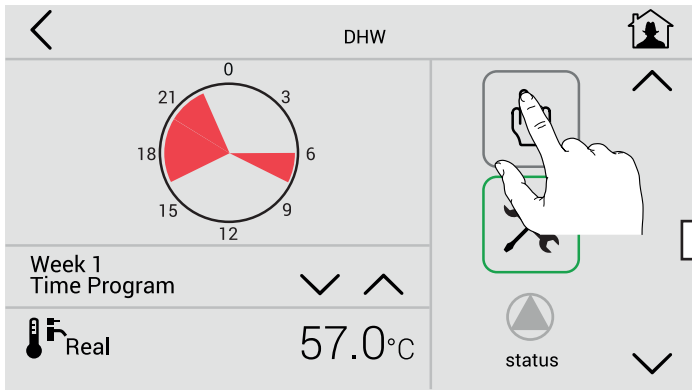


Activation in Working Manual

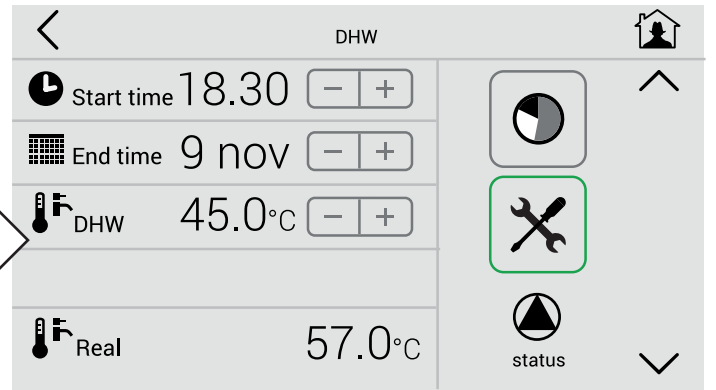 


Working Manual set the parameter

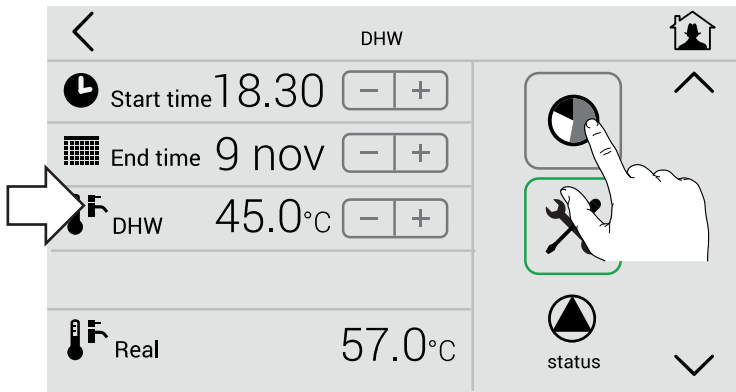 

 
Return to operation with the set program (automatic).

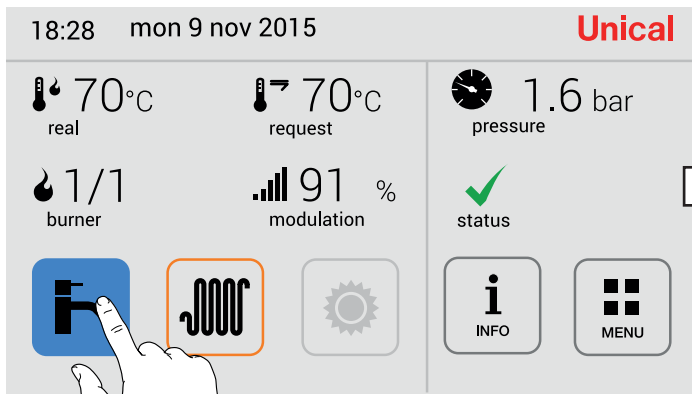

From Home Page

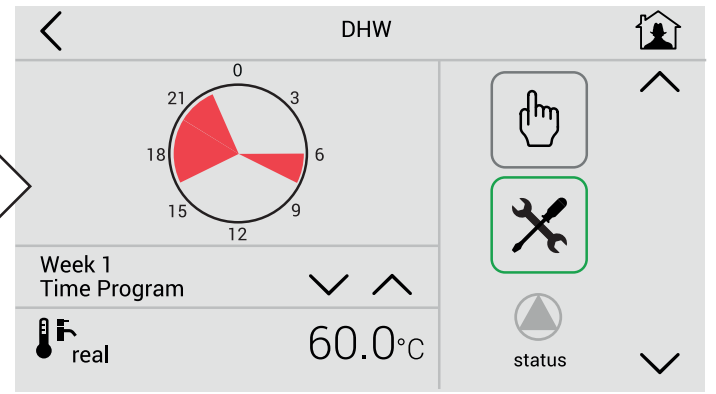 


 
Is it possible View and Modify program and DHW parameters

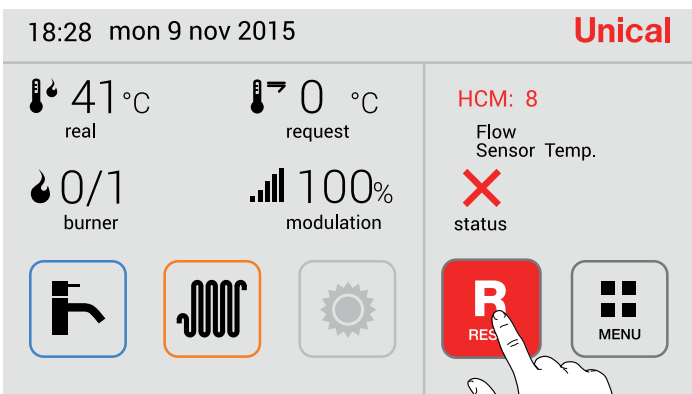

Example Boiler in Error (Block): Reset the boiler with R button

## 2.8 - Menù Solar

  NOT ACTIVE

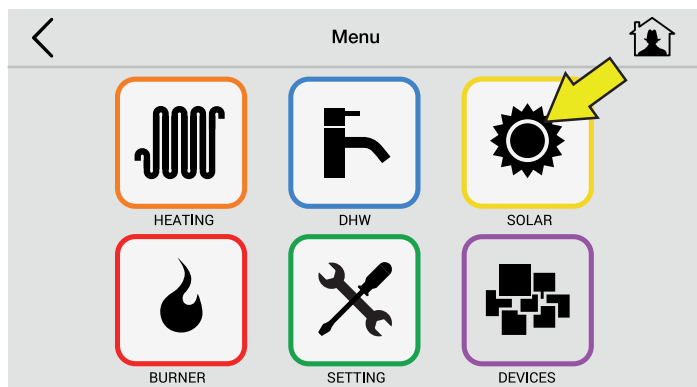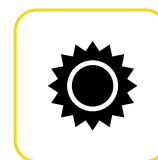

## 2.9 - Menù Burner



**WARNING!**  
Function reserved exclusively to authorized service centers.

1 - Insert psw and select sweeper again

2 - Activation  
3 - Choice boiler/burner available indicated by eg: usually 1 / MODULEX 1-8

4 - Activation

# Menù Burner



Burner#1  
 Real: 78°C, Request: 79°C  
 Modulation: 100%  
 Request: 100%  
 Activate (ON)

5 - Boiler operating with modulation max 100%

Boiler  
 Real: 71°C, Request: 70°C  
 Modulation: 55%  
 Request: 10%  
 Activate (ON)

6 - Change % of modulation to the minimum 10% and select the boiler/burner

Burner#1  
 Real: 56°C, Request: 90°C  
 Modulation: 0%  
 Ignition: 3  
 Inactivate (ON)

7 - Boiler operating with modulation min.

Burner#1  
 Real: 55°C, Request: 79°C  
 Modulation: 0%  
 Ignition: 3  
 Activate (OFF)

 
 
8 - Disable SWEEPER function.

Boiler  
 Real: 71°C, Request: 70°C  
 Modulation: 59%  
 Inactivate (ON)

Maximum boiler	84.0 °C	- +
Minimum boiler	25.0 °C	- +
Maximum control	100 °C	- +
Minimum control	40 °C	- +
Overrun	0.0 °C	- +




This displayed parameter are relevant to burner  
 Note:  
 - To change burner parameters is not necessary to go in the DEVICES menu.  
 - The psw remains active until you return to the MENU'. w





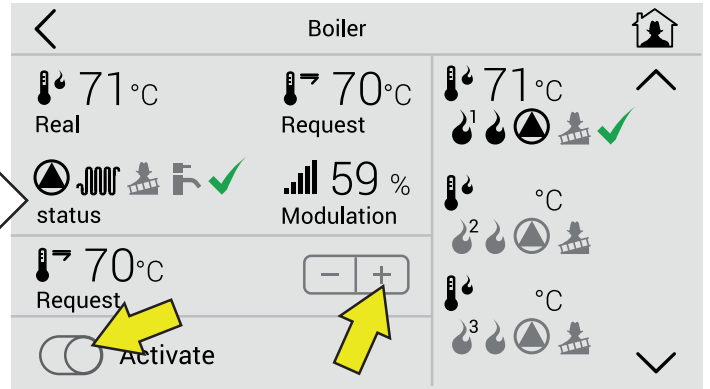
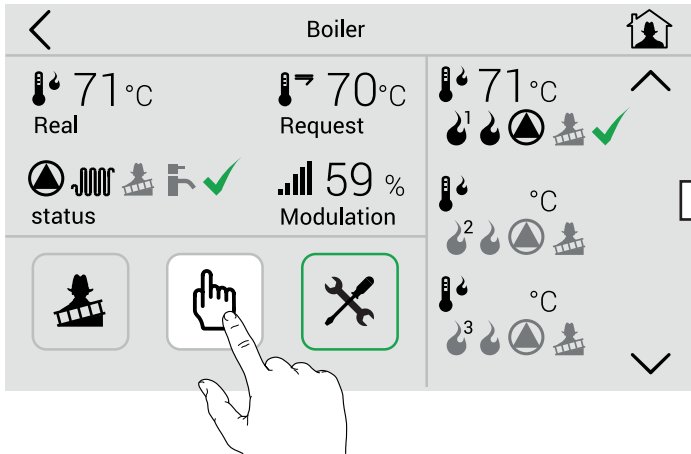


**Manual Activation of Boiler**

   Touching indicated Icon, you manually activate the boiler, without possibility to set the time.

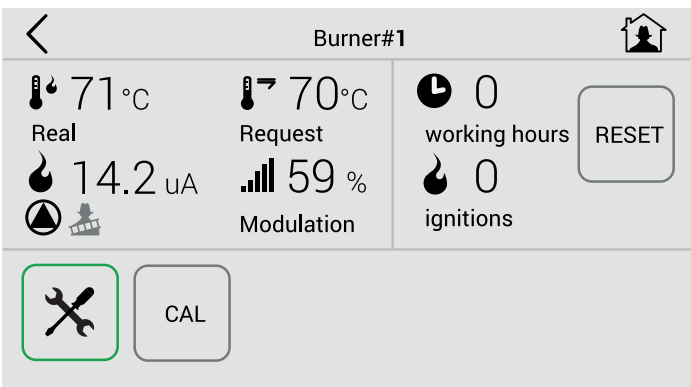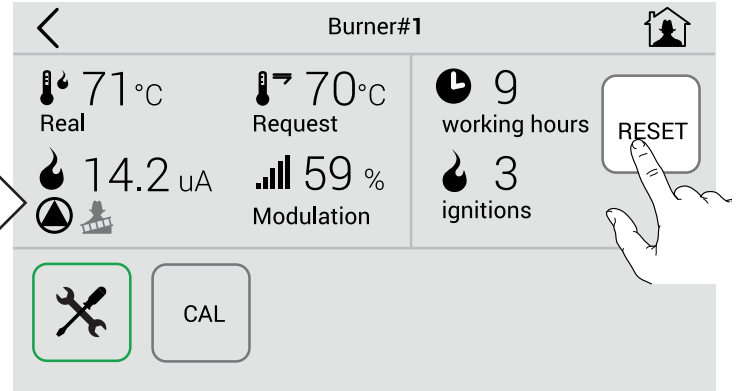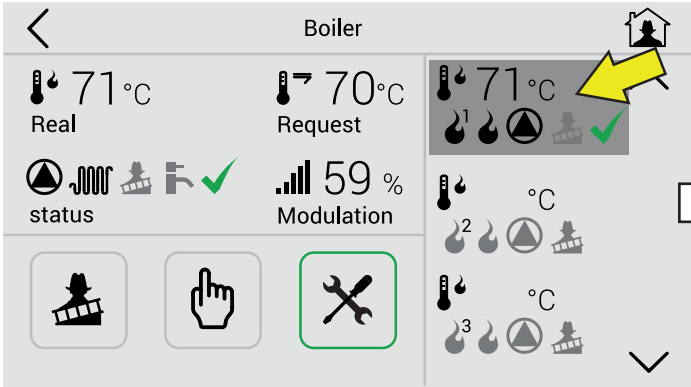




Reset to clear the counters.

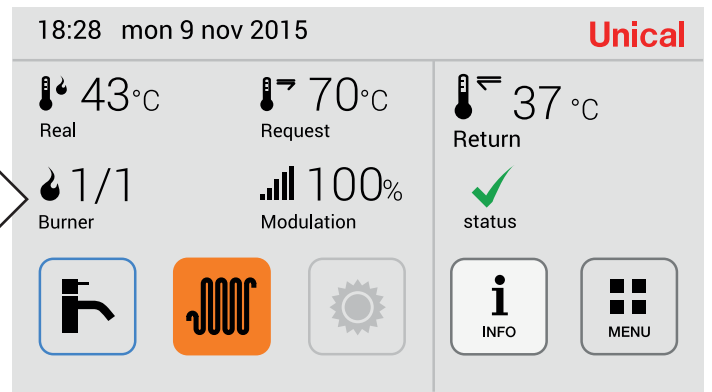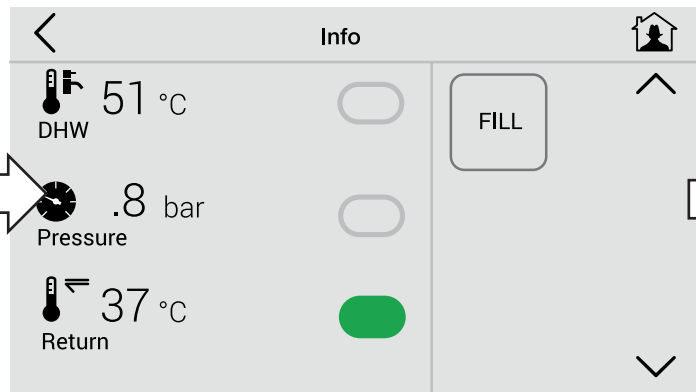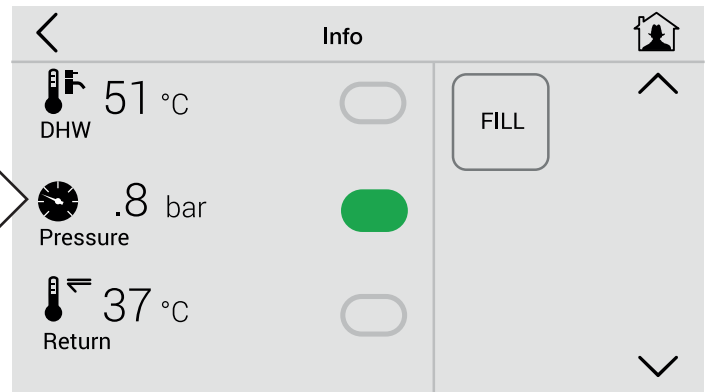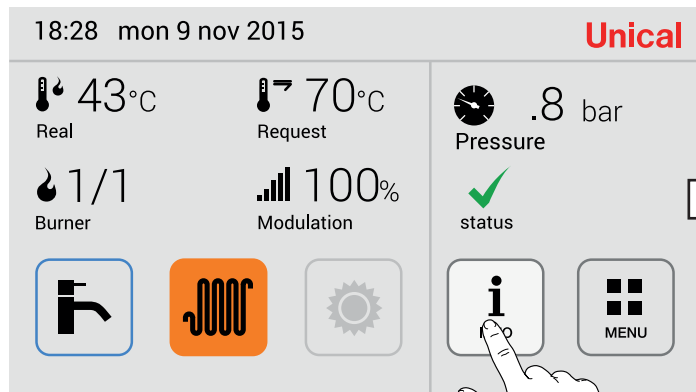    

**INFO**

Touching indicated icon, you can select the parameter to be displayed in the HOME page.  
 eg:  
 changed from a value **Pressure** to **Return** temp.
   
## Screen Calibration (To be made in event of difficulties in use of buttons)

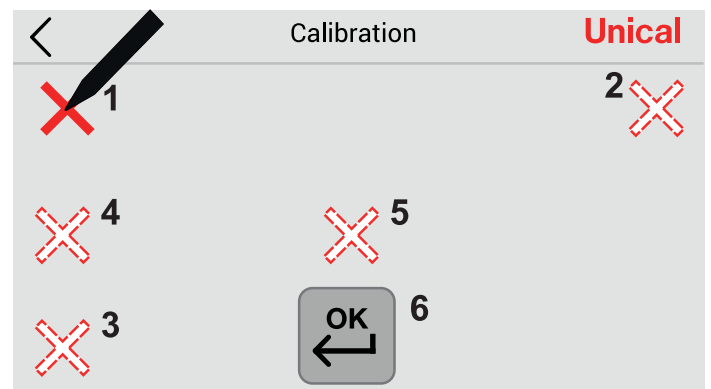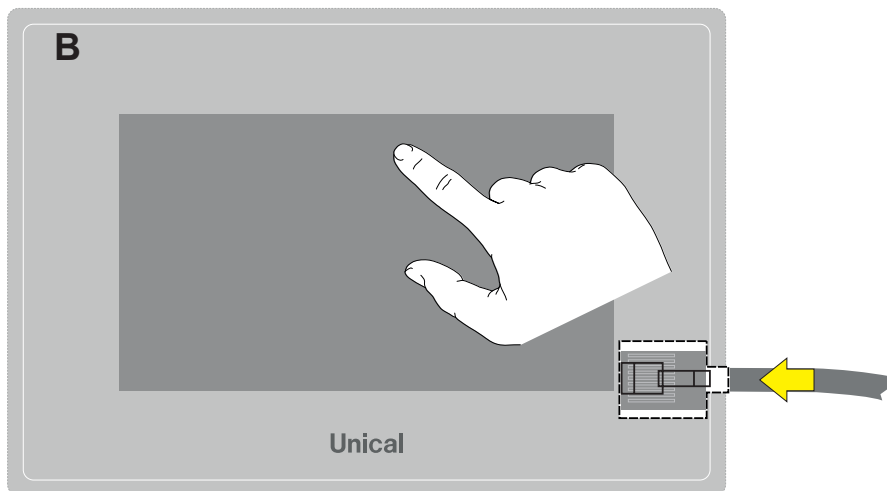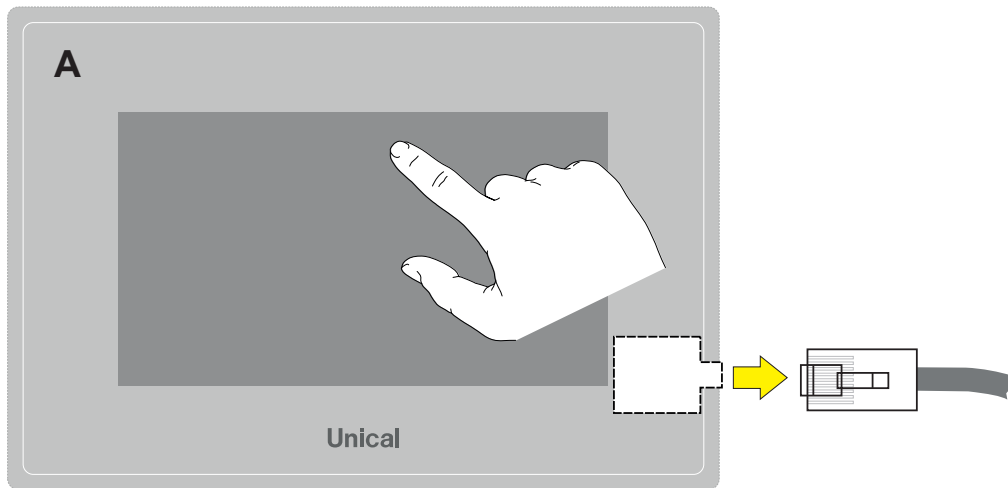

A	Touch display and at the same time disconnect the RJ cable from UFLY BOX
B	Always touching the screen, insert the RJ in UFLY BOX
C	Wait display activation
D	Operation Display log: every time you see the X on the display, touch with a pencil the center of the X (1 to 5) and press OK
After these operations, the display is calibrated	

# Unical<sup>®</sup>



[www.unical.eu](http://www.unical.eu)

00336311 - 1ª edizione 05/16

**Unical** AG S.p.A. 46033 casteldario - mantova - italia - tel. +39 0376 57001 - fax +39 0376 660556  
info@unical-ag.com - export@unical-ag.com - www.unical.eu

Unical declines every responsibility for the possible inaccuracies if owed to errors of transcript or press.

Also reserves the right to bring those changes that it will hold necessary to its own products or profits, without jeopardizing its essential characteristics.