


# An overview of



The protection of information is an important aspect: a user name and password are required to access the following pages.

Each user configured has a password that defines the level of authorisation and sections that can be accessed.

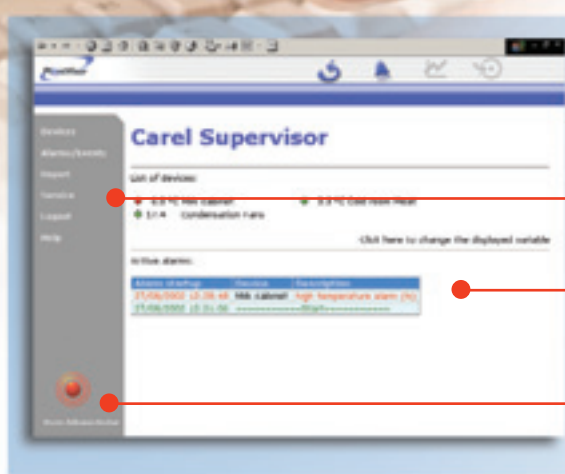


PlantVisor Enhanced Local summary page: all the utilities and their operating conditions are shown.

Navigation menu

Utilities in alarm status

General installation alarm

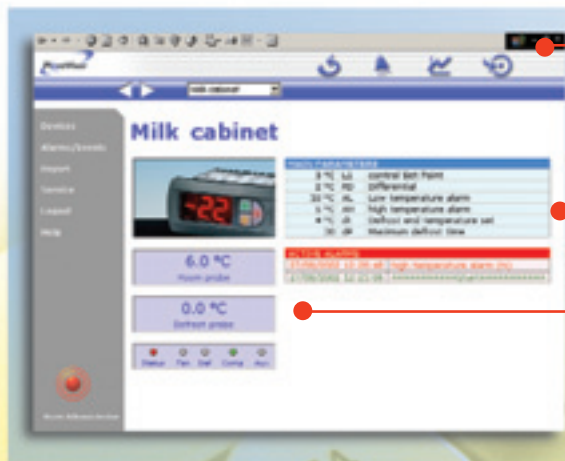


Main utility page

Specific menu

Main parameters

Utility status

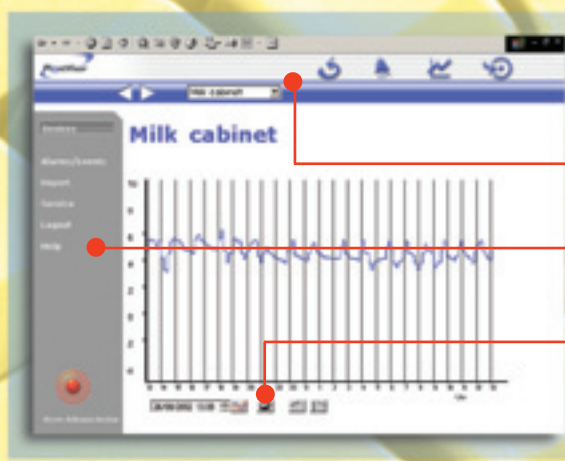

Page of the graphs on the utility

Quick selection of the utility

On-line help always available

Configuration of the graphs