

# User manual

## CLIMATIC™ 40



- Providing indoor climate comfort



| <b>CONTENTS</b>                              | <b>PAGE</b> |
|--|-------------|
| • INDEX                                      | 1           |
| • DESCRIPTION OF CONTROLS                    | 2-3         |
| 1.- CLIMATIC 40 CONTROL                      | 4-6         |
| 2.- DC40 REMOTE TERMINAL (AIRCOOLAIR)        | 7-8         |
| • MENU                                       |             |
| • REGULATION                                 | 9           |
| 1.- AIRCOOLAIR /COMPACTAIR / FLATAIR         | 9           |
| 2.- AIRCUBE                                  |             |
| • ADVANCED FUNCTIONS                         | 10          |
| 1.- REMOTE ON/OFF                            | 10          |
| 2.- REMOTE WINTER / SUMMER CHANGEOVER        | 10          |
| 3.- DYNAMIC SET POINT                        | 11-13       |
| 4.- BMS COMUNICATIONS                        | 14          |
| 5.- LOW NOISE                                | 14          |
| 6.- ANALOGUE / DIGITAL INPUT                 | 15          |
| 7.- TIMING AND DELAYS                        | 16          |
| 8.- DEFROST                                  | 16-17       |
| 9.- CONDENSER FAN SPEED CONTROL              | 17-18       |
| 10.- FREE COOLING                            | 19          |
| • PARAMETERS                                 | 20-22       |
| • SAFETY DEVICES                             | 23          |
| • INSTRUCTIONS FOR ASSEMBLY AND INSTALLATION | 24          |
| • ALARMS                                     | 25-28       |

# DESCRIPTION OF CONTROLS


## 1.- CLIMATIC 40 CONTROL

Climatic 40 control, is an electronic device that controls Aircoolair / Compactari / Flatair units (air-air units) and Aircube units (condensing units).

The thermostat allows the following operations:


- Unit ON/OFF.
- Select system operating mode.
- Set point adjustment.
- Alarm signal relay.
- Display temperature, status of unit and pending alarms.
- Programming of time bands.
- BMS communications.
- Possibility of remote ON/OFF.

### AIRCOOLAIR / COMPACTAIR / FLATAIR

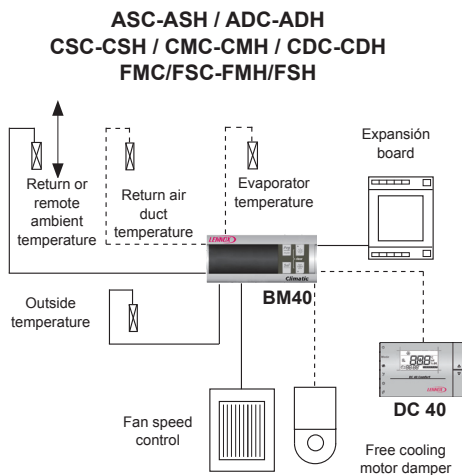

### AIRCUBE

#### KSCM/KSHM

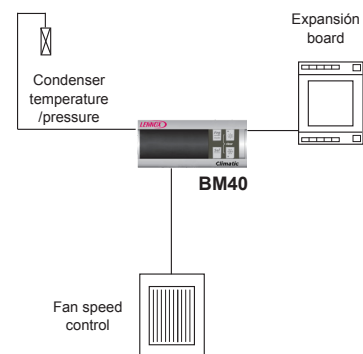

Return / remote ambient, evaporator, temperature/pressure condenser and outdoor temperature probes.

Condenser temperature/pressure probes.

Proportional regulation based on remote ambient /return temperature (cooling, heating and automatic mode).

Regulation based on remote free voltage contacts.

Defrost cycle (heat pump units), with pressure transducer.

Defrost cycle (heat pump units), with pressure transducer.

Condensing pressure control with temperature probe or pressure transducer.

Condensing pressure control with temperature probe or pressure transducer.

Antifreeze, high and low pressure protections.

High and low pressure protections.

Compressors, indoor and outdoor fans, electrical heater and freecooling (optional) management.

Compressors, indoor (optional) and outdoor fans.


## DESCRIPTION OF CONTROLS

### CLIMATIC 40 CONTROL

The figure and the table below show the symbols present on the display and on the keypad, together with their meanings:

The main screen shows:

- Ambient temperature for AIRCOOLAIR / COMPACTAIR / FLATAIR.
- Unit status (On/Off) for AIRCUBE.

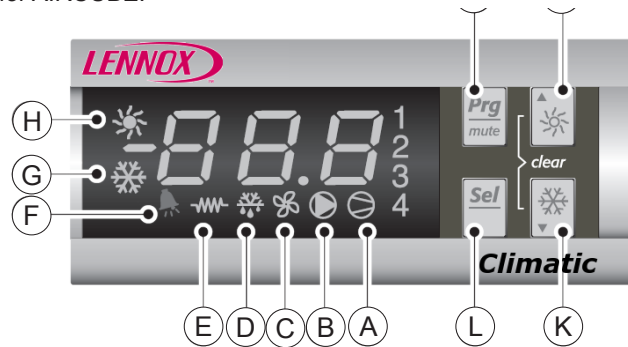

| SYMBOL | DESCRIPTION                            |                          |
|--------|--|--------------------------|
|        | LED ON                                 | LED FLASHING             |
| 1 or 2 | Compressor 1 and /or 2 (circuit 1) ON. | Start up request.        |
| 2 or 3 | Compressor 3 and /or 4 (circuit 2) ON. | Start up request.        |
| A      | At least 1 compressor ON.              |                          |
| B      | Indoor fan ON.                         | Start up request.        |
| C      | Condenser fan ON.                      |                          |
| D      | Defrost active.                        | Start up request.        |
| E      | Electrical heater ON.                  | Start up request.        |
| F      | Alarm active.                          |                          |
| G      | Cooling mode.                          | Cooling mode request.    |
| H      | Heat pump mode.                        | Heat pump mode. Request. |

| BUTTON | DESCRIPTION  | TIME          |
|--------|--|---------------|
| I      | Go up a sub-group inside the programming area.   | Press once    |
| L      | Access the direct parameters.  | Press for 5 s |
|        | Select item inside the programming area / confirm changes to the parameters.               | Press once    |
| I+L    | Program parameters afters entering password.   | Press for 5 s |
| J      | Select top item inside the programming area.   | Press once    |
|        | Increase value.  | Press once    |
|        | Switch from standby to heat pump mode and vice-versa.                                      | Press for 5 s |
| K      | Provides immediate access to the condenser and evaporator pressure and temperature probes. | Press once    |
|        | Select bottom item inside the programming area.  | Press once    |
|        | Decrease value.  | Press once    |
|        | Switch from stand-by to chiller mode and vice-versa.                                       | Press for 5 s |
| J+K    | Provides immediate access to the condenser and evaporator pressure and temperature probes. | Press once    |
|        | Manual alarm reset.  | Press for 5 s |
| J+K    | Immediately reset the hour counter (inside the programming area).                          | Press for 5 s |
|        | Force manual defrost on both circuits.   | Press for 5 s |

#### 1.1.- AIRCUBE

##### 1.1.1.- TURN ON/OFF THE UNIT

The unit is turned on by closing the On/Off contact and turned off by opening it (see section 1, *advanced functions*, for more details).

The heating mode is selected by opening the remote changeover contact while the cooling mode is selected by closing it (see section 2, *advanced functions*, for more details).


#### NOTE

There are no set points to be made for Aircube units because the compressors are directly controlled by remote contacts.

## DESCRIPTION OF CONTROLS

### 2.- DC40 REMOTE TERMINAL (AIRCOOLAIR / COMPACTAIR / FLATAIR)

The illustration and the table below show the symbols that appear on the display and on the keypad and their meanings. OFF appears in the main field of the display if the machine is off. or the set point if the machine is working.

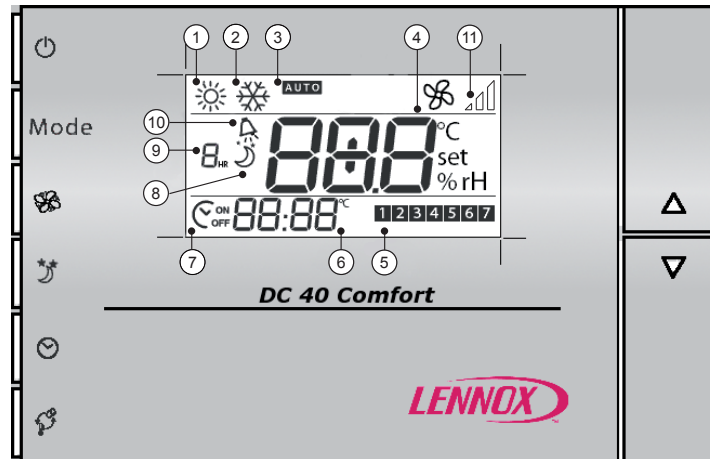

| BUTTON | NAME    | DESCRIPTION  |
|--------|---------|--|
|        | POWER   | Switch from stand-by to ON and vice-versa.                             |
| Mode   | MODE    | Change operating mode (cooling, heating, automatic).                   |
|        | FAN     | Switch the indoor fan from automatic mode to always ON and vice-versa. |
|        | SLEEP   | ActivateS/deactivateS the sleep mode.                                  |
|        | CLOCK   | ActivateS/deactivateS the time bands.                                  |
|        | TEMP.   | ShowS the set point when the unit is OFF.                              |
|        | UP/DOWN | Set the temperature.   |

Secondary functions:

| BUTTON | BUTTON PRESS | FUNCTION   |
|--------|--------------|--|
|        | 3 seconds    | Sets sleep differential value of the current operating mode. |
|        | 3 seconds    | Sets the time bands (hour, day, set point).                  |
|        | 5 seconds    | Clock setting.   |
|        | 3 seconds    | Reset alarms.  |

Display symbols:

| SYMBOL | MEANING                             | SYMBOL | MEANING                 |
|--------|-------------------------------------|--------|-------------------------|
| 1      | Heating mode.                       | 7      | On/Off time bands.      |
| 2      | Cooling mode.                       | 8      | Sleep mode.             |
| 3      | Automatic mode.                     | 9      | Duration or sleep mode. |
| 4      | Set point.                          | 10     | Alarm.                  |
| 5      | Day of the week (weekday, weekend). | 11     | Indoor fan mode.        |
| 6      | Hour/Temperature.                   |        |                         |

---

## DESCRIPTION OF CONTROLS

### 2.1.- TURN ON/OFF THE UNIT WITH REMOTE CONTROL DC40 (AIRCOOLAIR / COMPACTAIR / FLATAIR)

To **turn on** the unit press the “” button.


The display shows current operating mode.


### 2.2.- SELECTING THE UNIT'S OPERATING MODE

Once the unit is turned on, you can select Cooling, Heating or Automatic mode just pressing the “**Mode**” button. In the automatic mode you just choose the set point and the system automatically switches from cooling to heating mode, depending on the position of the ambient temperature with respect to the set point.

### 2.3.- SELECTING DESIRED ROOM TEMPERATURE

If unit is working, the “ ” buttons allow the desired room temperature to be select (set-point).

 
The “” button allows the current set point to be increased by 0.5°C.


The “” button allows the current set point to be decreased by 0.5°C.

### 2.4.- SELECTING THE FAN OPERATING MODE (Aircoolair)

In order to be able to select a fan operating mode, the unit's operating mode (cooling, heating or auto) must be selected.

Pressing the side button “” scrolls through the following modes: FAN CONSTANTLY ON, or AUTO

FAN CONSTANTLY ON: Fan is ON continuously and the “” symbol will appear.

AUTO: Fan on and off together with the compressor or with the freecooling, the “” symbol will appear.



NOTE: For units without remote control DC40, fan operating mode can be selected with parameter H05=1 (continuous operating mode) or H05=2 (automatic operating mode).

### 2.5.- SLEEP FUNCTION


This function increases (in cooling mode) or decreases (in heating mode) the operating set point according to the lower level of comfort required during the night.

Not possible with time bands program.

#### ACTIVATION

Press “” button once. The display shows “” symbol with “1<sub>HR</sub>” flashing.

In this way, sleep function will work for 1 hour.


If you want it to work for longer, press “” button repeatedly while “1<sub>HR</sub>” is still flashing (each press of the button increases by 1 hour, till max 9 hours).




Finally, the display shows the “” symbol with the number of hours you choose.

#### DEACTIVATION

Press the “” button once and the sleep function will be deactivated (if it was activated before). The “” symbol disappears from the display.

#### DIFFERENTIAL SETTINGS

Press “” button for 3 seconds. The sleep differential (the value by which you increase or decrease the comfort set point) appears on the display.



Use the “ ” buttons to set the value, then press the “” button to accept.

Note that cooling and heating modes have different sleep differential values, so you can modify only the current operating mode's value.



### 2.6.- CLOCK SETTINGS

To set current time:


1. Press the “” button for 6 seconds. “rtc” and current time appears on the display (hours are flashing).


2. Set the hour using the “ ” buttons.

3. Press the “” button to accept. Minutes start flashing on the display.

4. Set the minutes using the “ ” buttons.

5. Press the “” button to accept. “day” and the number of the day of the week appear on the display (Monday=1, Tuesday=2 etc.)

6. Set the day by using the “ ” buttons.

7. Press the “” button to accept.

### 2.7.- TIME BANDS PROGRAM


This function allows you to programme time bands during the week, each one with a different set point. In this way you can adapt the cooling/heating provided by the unit according to each moment of the day.

You can set two time bands for the weekdays and another two for the weekend.


# DESCRIPTION OF CONTROLS

## CONFIGURATION

a) Enter time bands menu.

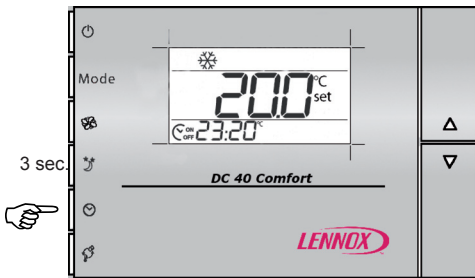


b) Set 1<sup>ST</sup> time band for weekday start hour.

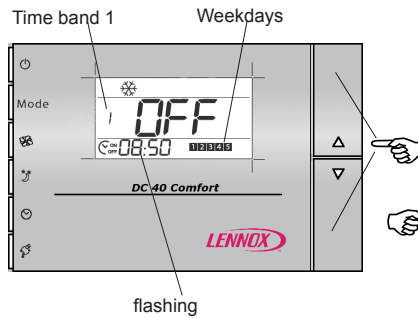

c) Accept.




d) Set 1<sup>ST</sup> time band of weekday start minutes.

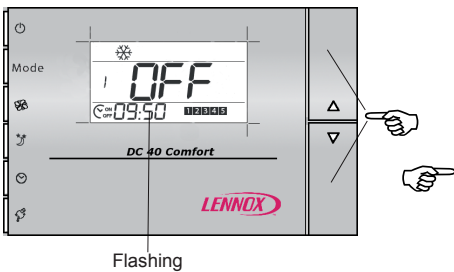


e) Accept.




f) Set 1<sup>ST</sup> time band of weekday set point (on/off/temperature).

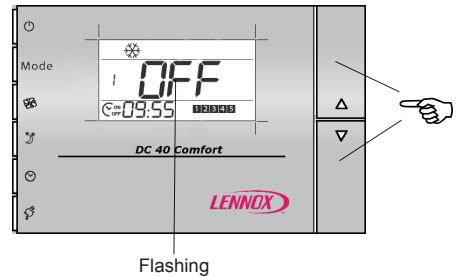


g) Accept.

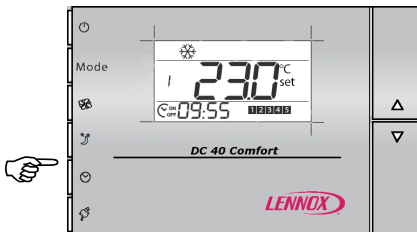


h) Repeat steps b-c-d-e-f-g to programme 2<sup>nd</sup> time band for weekdays.

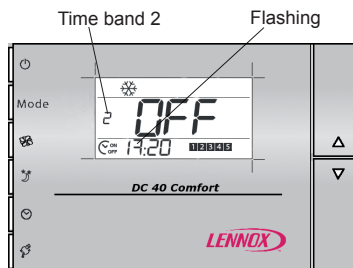

i) Repeat steps b-c-d-e-f-g-h to programme the two time bands for weekends.

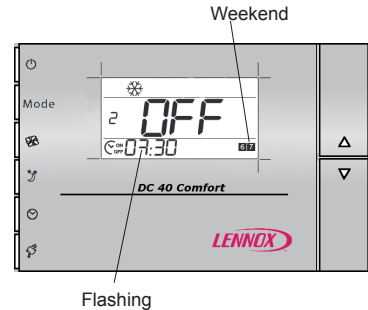


## ACTIVATION

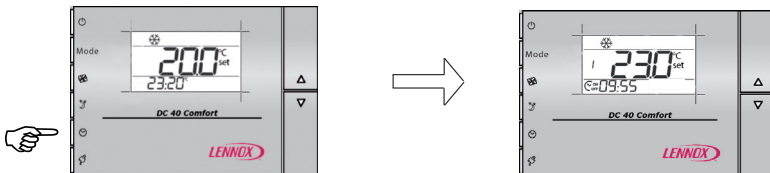

EXAMPLE IN SUMMER

## DEACTIVATION

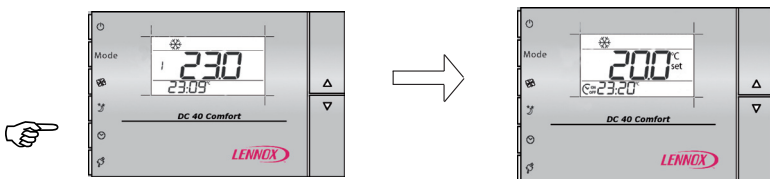

| Hour                | Weekdays | Weekend |
|---------------------|----------|---------|
| 8:00 (Time band 1)  | 23°C     | OFF     |
| 18:00 (Time band 2) | 23°C     | OFF     |

NOTE: You must set the DC40 clock before programming time bands.

Time bands programs keep current operating mode (if it was in cool mode, it keeps working in cool mode; if it was in auto matic mode, it keeps working in automatic mode, etc.).

# MENU

Access to the menu:

## A) PROBES DISPLAY MENU



1 sec.

Press the “” button to enter probes display menu. “b01” or “b02”, appears on the display (depending on the unit's configuration). Once the probe is selected, after a few seconds, “b01” turns into its temperature/pressure measure.


## B) SETPOINT SETTINGS AND OPERATING HOURS DISPLAY MENU



5 sec.

Press “Sel” button for 5 seconds. “—┐—”, appears on the display. Move inside the menu as explained below.

## C) PARAMETERS EDITING MENU

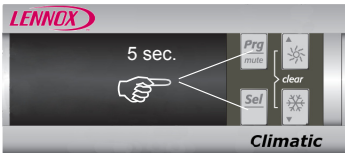

5 sec.

a) Press “Pgr” and “Sel”, at the same time, for 5 seconds.



b) Set password “22” by the “” and “” buttons.




c) Press “Sel”, to accept.



d) Press “Sel”, to enter parameters Editing menu.


To go to different values in the menu, proceed as above, the:

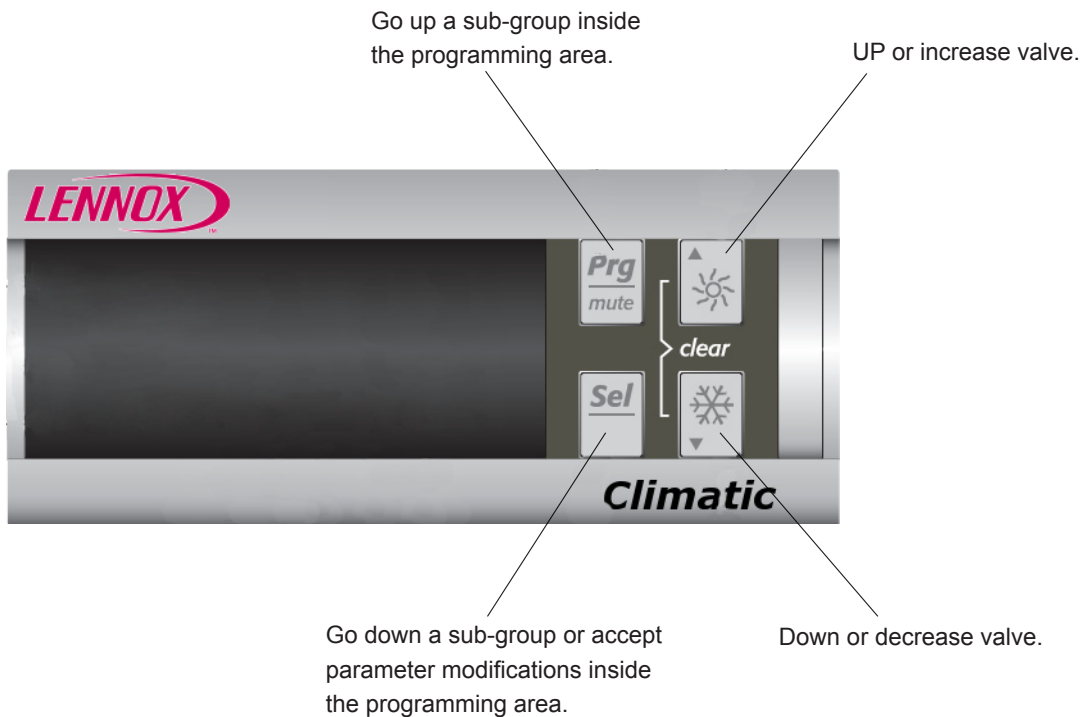



# MENU

## MENU TREE

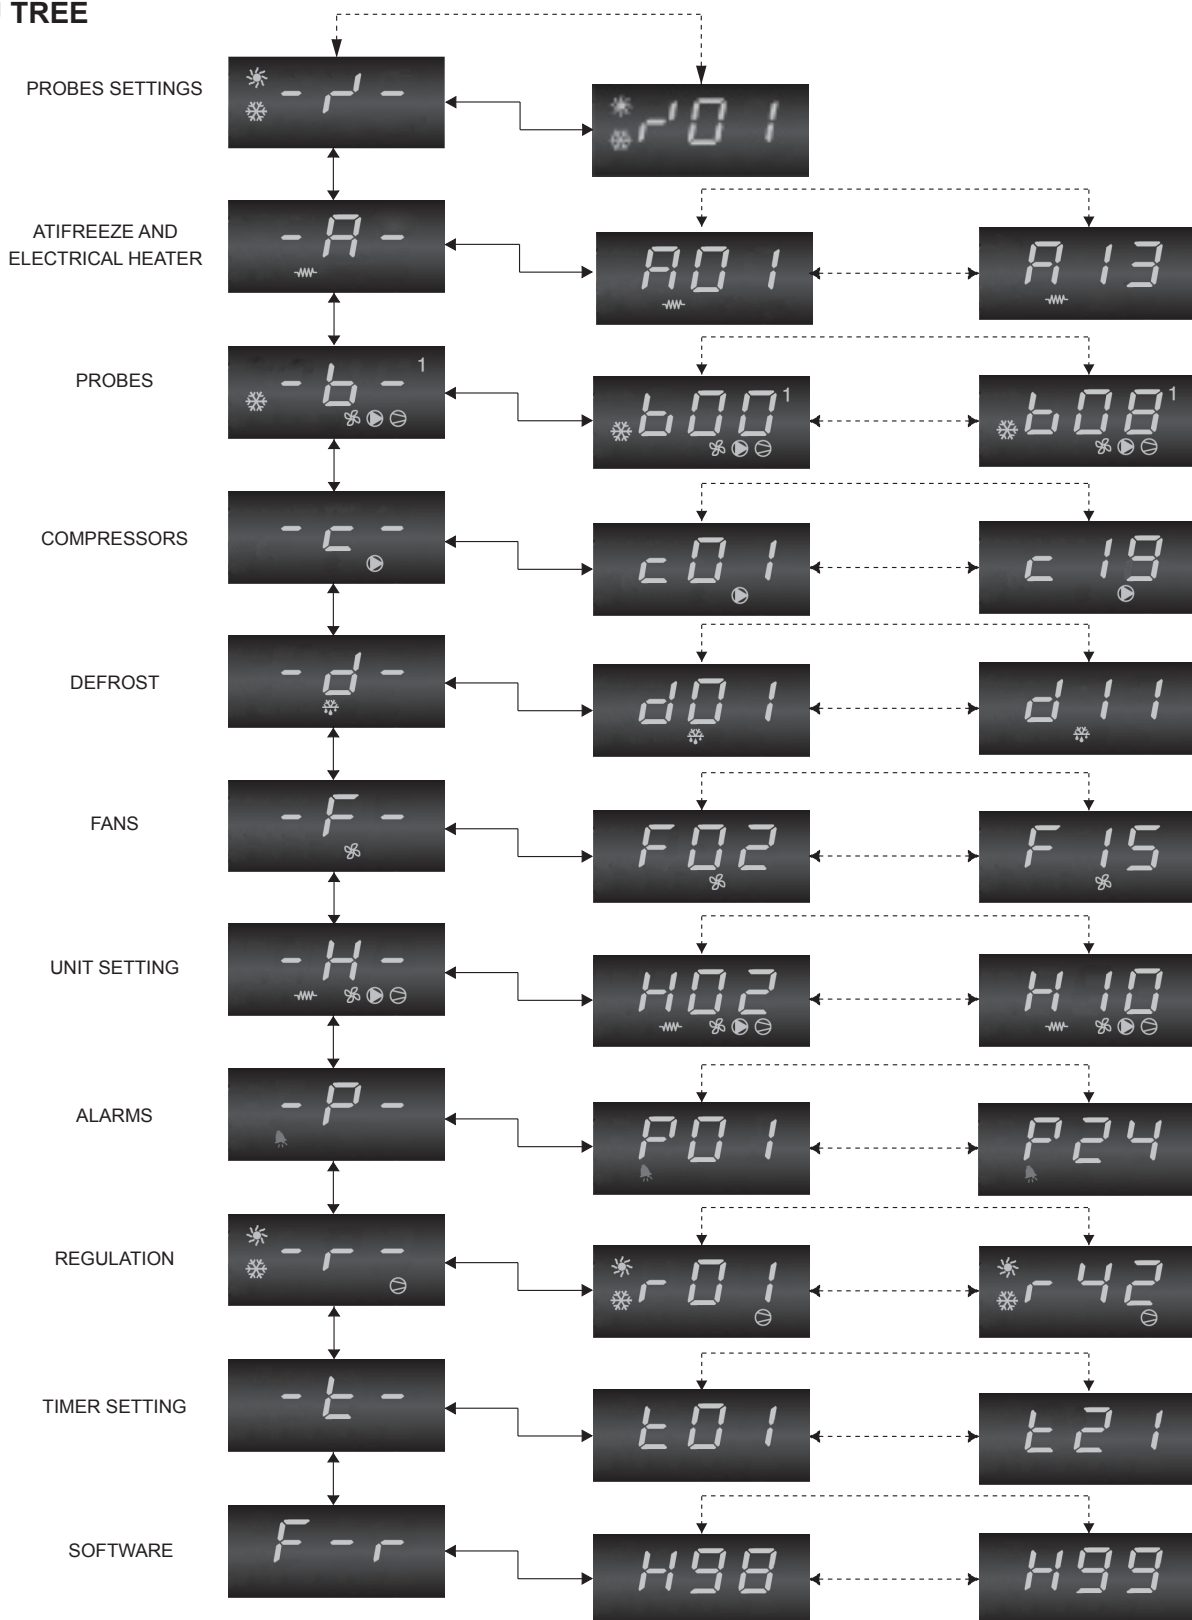

### NOTES:


- Parameters that have been modified without being confirmed using the "Sel" button will return to their previous value.
- After confirming a modification, escape up to the main menu to save it; otherwise, modifications will be cancelled.
- If no operations are performed on the keypad for 60 seconds, the controller exits the parameter editing menu on timeout and any changes are cancelled.

## REGULATION


### 1.- AIRCOOLAIR / COMPACTAIR / FLATAIR

Ambient (or return air duct) temperature is thermostatically controlled via set point and tolerance range (differential) as shown in the following diagrams:

#### 1.1- AUTOMATIC MODE (with DC40) (Heat pump)

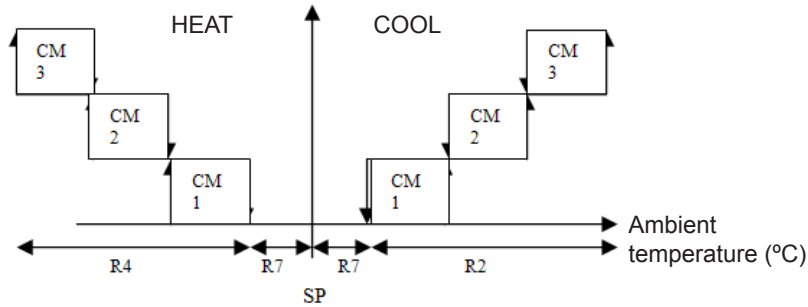

#### 1.2- AUTOMATIC MODE (Cooling only+Electrical heater)

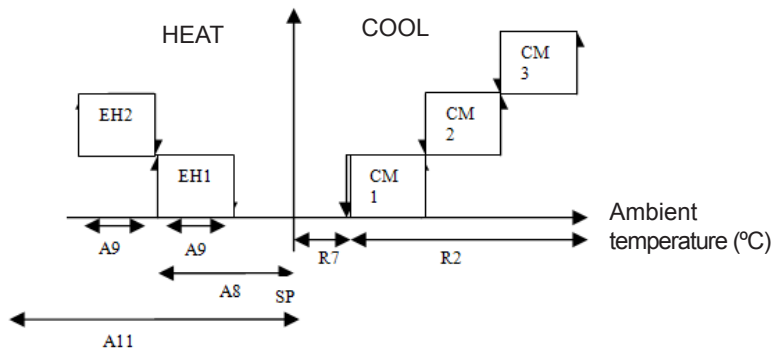

NOTE: With option Modbus, set point SP is managed through communications instead of DC40 (see table for Modbus parameters)

#### 1.3- AFFECTED PARAMETERS

| Par. | DESCRIPTION                               | UNIT 1 COMPRESSOR |      |         | UNIT 2 COMPRESSORS |      |         | UNIT 3 COMPRESSORS |      |         |
|------|---|-------------------|------|---------|--------------------|------|---------|--------------------|------|---------|
|      |   | MIN.              | MAX. | DEF.    | MIN.               | MAX. | DEF.    | MIN.               | MAX. | DEF.    |
| SP   | Set point (DC40).                         | 8                 | 32   | 23      | 8                  | 32   | 23      | 8                  | 32   | 23      |
| r2   | Cooling differential.                     | 0.3               | 50   | 1       | 0.3                | 50   | 2       | 0.3                | 50   | 3       |
| r4   | Heating differential.                     | 0.3               | 50   | 1       | 0.3                | 50   | 2       | 0.3                | 50   | 3       |
| r7   | Dead zone.                                | 0.3               | 50   | 0.5     | 0.3                | 50   | 0.5     | 0.3                | 50   | 0.5     |
| A8   | SP E.H. 1 stage (cooling only/heat pump)  | 0                 | 20   | 1.5/2.5 | 0                  | 20   | 1.5/3.5 | 0                  | 20   | 1.5/4.5 |
| A9   | Differential E.H.                         | 0.3               | 50   | 1       | 0.3                | 50   | 1       | 0.3                | 50   | 1       |
| A11  | SP E.H. 2 stages (cooling only/heat pump) | 0                 | 20   | 2.5/3.5 | 0                  | 20   | 2.5/4.5 | 0                  | 20   | 4.5     |

### 2.- AIRCUBE

Aircube is regulated by digital input. (see section 7, *advanced functions*, for more details).

## ADVANCED FUNCTIONS

### 1.- REMOTE ON/OFF

This function allows you to turn the unit on/off by a simply remote contact (contacts 95-96 in AIRCOOLAIR /COMPACTAIR / FLATAIR units;contacts 88-89 in AIRCUBE units).

Close contact = ON; Open contact = OFF.

### 2.- REMOTE CHANGEOVER WINTER/SUMMER

On heat pump units (also in Aircoolair / Compactair / Flatair cooling only + electrical heater), cooling or heating mode can be selected by a remote contact (contacts 97-98 in Aircoolair and contacts 95-98 in Compactair and Flatair).

Close contact = Cooling.; Open contact = Heating.

To activate this function set parameters **P09=10** and **H06=1**.



#### WARNING

On Aircoolair units, remote changeover doesn't work if the automatic mode has been selected by DC40.

### 3.- DYNAMIC SET POINT


It is possible a better unit operating mode through dynamic set point function.

With this function the set point can be changed, (going up/down) according to the external conditions in order to save energy.

To activate this function, the custome should configurate the parameters explained in the picture below:



\*To activate P09 use password 66.

#### AIRCOOLAIR / COMPACTAIR / FLATAIR

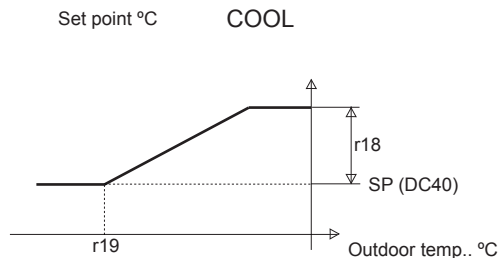


$$SP = SP(DC40) + (T.ext. - r19) \times r17$$

EXAMPLE

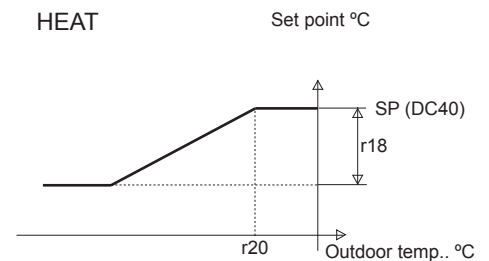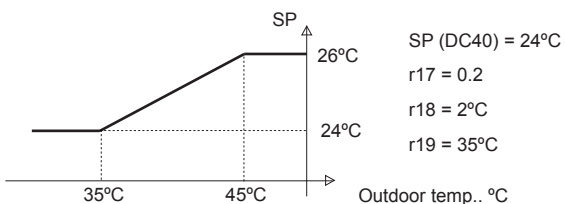

$$SP = SP(DC40) + (T.ext. - r20) \times r31$$

EXAMPLE

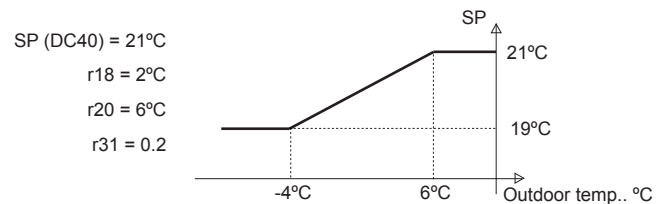

## ADVANCED FUNCTIONS

### 4.- BMS COMMUNICATIONS

**OPTION**

BMS (Building Management Systems) are systems to integrate all technological functions of a building, including access control, security, detection of fires, lights, elevators and air conditioning.

Given the growing and unstoppable trend towards Building Automation, the Climatic 40 controller offers the possibility of communicating with Building Management Systems (BMS) via Modbus protocol. The Modbus standard interface is integrated into the control, so you do not need any sort of gateway, router, etc.

LENNOX units with Modbus protocol use parametrization below:


|                          |                               |
|--------------------------|-------------------------------|
| <b>Serial port</b>       | RS485 (EIA/ TIA-485 standard) |
| <b>Transmission mode</b> | RTU (Terminal of remote unit) |
| <b>Speed</b>             | 9600 Baudios                  |
| <b>Bits of data</b>      | 8 bits                        |
| <b>Parity</b>            | None                          |
| <b>Stop bits</b>         | 2 bit                         |
| <b>Addresses</b>         | Base 0                        |

#### 4.1 – MODBUS NET CONFIGURATION

With option Modbus communication, Climatic 40 controller is delivered configured and ready for communications. The only parameter which is needed to adjust is the device address (**H10**).

Without option Modbus communication change parameters H23=1 and H24=0 to enable the option.

Connect the net like in figure below:

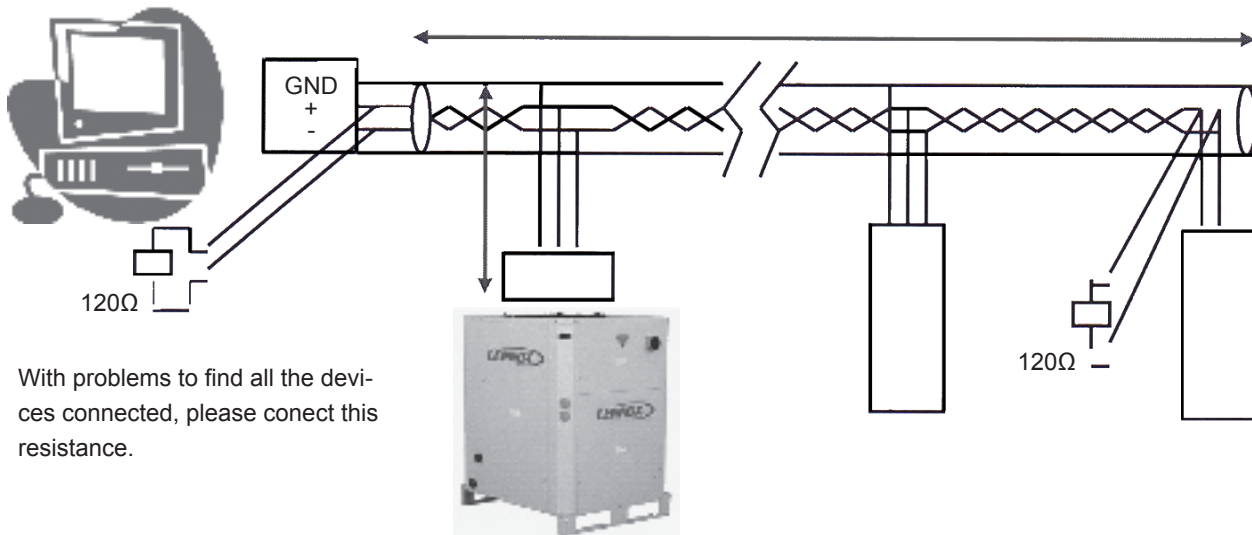

- Right connection order in the electrical box for LENNOX units should be respected 90= GND ; 91= + ; 92= —.
- According to the electromagnetic compatibility standard, it is needed to use a pair of specific shielded cables for data transmission with RS485.
- With several units connected into the same Modbus net, secondary of the transformer has not to be earthed for each unit.

## ADVANCED FUNCTIONS

### 4.2 - PARAMETERS TABLE

U.O.M.= Measurement unit

Resol. = Solution

R/W = Reading/ Writing

| Parameters and description         | min.    | máx. | U.O.M.    | resol. | R/W | Modbus address | Type of variable |
|------------------------------------|---------|------|-----------|--------|-----|----------------|------------------|
| <b>ALARMS</b>                      |         |      |           |        |     |                |                  |
| Circuit 1 alarm                    | 0       | 1    | Flag      | 1      | R   | 41             | Digital          |
| Circuit 2 alarm                    | 0       | 1    | Flag      | 1      | R   | 42             | Digital          |
| Indoor fan alarm/ Water pump alarm | 0       | 1    | Flag      | 1      | R   | 45             | Digital          |
| Alarm sensor                       | 0       | 1    | Flag      | 1      | R   | 46             | Digital          |
| Alarm reset                        | 0       | 1    | Flag      | 1      | R/W | 78             | Digital          |
| <b>INPUTS AND OUTPUTS</b>          |         |      |           |        |     |                |                  |
| Digital input 1                    | 0       | 1    | Flag      | 1      | R   | 53             | Digital          |
| Digital input 2                    | 0       | 1    | Flag      | 1      | R   | 54             | Digital          |
| Digital input 3                    | 0       | 1    | Flag      | 1      | R   | 55             | Digital          |
| Digital input 4                    | 0       | 1    | Flag      | 1      | R   | 56             | Digital          |
| Digital input 5                    | 0       | 1    | Flag      | 1      | R   | 57             | Digital          |
| Digital output 1                   | 0       | 1    | Flag      | 1      | R   | 59             | Digital          |
| Digital output 2                   | 0       | 1    | Flag      | 1      | R   | 60             | Digital          |
| Digital output 3                   | 0       | 1    | Flag      | 1      | R   | 61             | Digital          |
| Digital output 4                   | 0       | 1    | Flag      | 1      | R   | 62             | Digital          |
| Digital output 5                   | 0       | 1    | Flag      | 1      | R   | 63             | Digital          |
| Digital input 6                    | 0       | 1    | Flag      | 1      | R   | 66             | Digital          |
| Digital input 7                    | 0       | 1    | Flag      | 1      | R   | 67             | Digital          |
| Digital input 8                    | 0       | 1    | Flag      | 1      | R   | 68             | Digital          |
| Digital input 9                    | 0       | 1    | Flag      | 1      | R   | 69             | Digital          |
| Digital input 10                   | 0       | 1    | Flag      | 1      | R   | 70             | Digital          |
| Digital output 6                   | 0       | 1    | Flag      | 1      | R   | 72             | Digital          |
| Digital output 7                   | 0       | 1    | Flag      | 1      | R   | 73             | Digital          |
| Digital output 8                   | 0       | 1    | Flag      | 1      | R   | 74             | Digital          |
| Digital output 9                   | 0       | 1    | Flag      | 1      | R   | 75             | Digital          |
| Digital output 10                  | 0       | 1    | Flag      | 1      | R   | 76             | Digital          |
| <b>SENSORS</b>                     |         |      |           |        |     |                |                  |
| Sensor value B1                    | - / 400 | 800  | °C        | 0,1    | R   | 102            | Analogic         |
| Sensor value B2                    | - / 400 | 800  | °C        | 0,1    | R   | 103            | Analogic         |
| Sensor value B3                    | - / 400 | 800  | °C / Dbar | 0,1    | R   | 104            | Analogic         |
| Sensor value B4                    | - / 400 | 800  | °C        | 0,1    | R   | 105            | Analogic         |
| Sensor value B5                    | - / 400 | 800  | °C        | 0,1    | R   | 106            | Analogic         |
| Sensor value B6                    | - / 400 | 800  | °C        | 0,1    | R   | 107            | Analogic         |
| Sensor value B7                    | - / 400 | 800  | °C        | 0,1    | R   | 108            | Analogic         |
| Sensor value B8                    | - / 400 | 800  | °C / Dbar | 0,1    | R   | 109            | Analogic         |
| Sensor value DC40                  | - / 400 | 800  | °C        | 0,1    | R   | 128            | Analogic         |

## ADVANCED FUNCTIONS

### 4.2 - PARAMETERS TABLE.

| Parameters and description   | min. | máx. | U.O.M. | resol. | R/W | Modbus address | Type of variable |
|--|------|------|--------|--------|-----|----------------|------------------|
| <b>UNIT CONTROL</b>  |      |      |        |        |     |                |                  |
| Unit status (1=ON ó 0=standby)   | 0    | 1    | Flag   | 1      | R/W | 64             | Digital          |
| Status auto /manual (0=Manual ó 1=Automatic)   | 0    | 8    | Flag   | 1      | R/W | 291            | Analog           |
| Status cooling / heating (1=Cooling or 0=Heating )<br>(Writting is possible only with auto/manual = 0 manual)  | 0    | 1    | Flag   | 1      | R/W | 65             | Digital          |
| CL40 cooling setpoint (with auto/manual = 0 manual)  | *    | *    | °C     | 0.1    | R/W | 41             | Analog           |
| CL40 heating setpoint (with auto/manual = 0 manual)  | *    | *    | °C     | 0.1    | R/W | 43             | Analog           |
| <b>CL40 Auto setpoint (with auto/manual = 1 auto)</b>  | *    | *    | °C     | 0.1    | R/W | 61             | Analog           |
| <b>CL40 Second cooling setpoint</b>  | *    | *    | °C     | 0.1    | R/W | 55             | Analog           |
| <b>CL40 Second heating setpoint</b>  | *    | *    | °C     | 0.1    | R/W | 56             | Analog           |
| <b>Fan indoor operation mode</b><br>1 = always ON 2 = Automatic 3 = Anti-stratification<br><b>WARNING: Do not change this value into 0, otherwise fan will be deactivated</b>  | 0    | 5    | Flag   | 1      | R/W | 263            | Analog           |
| <b>Defrost status</b><br>0= Without defrost cycle           1= Defrost cycle 1<br>2= Defrost cycle circuit 2        3= Defrost cycle 1 y 2<br>5= Fan in defrost cycle circ.1   10= Fan in defrost cycle. circ.2<br>15= Fan in defrost cycle circ.1 and 2 | 0    | 255  | Flag   | 1      | R   | 341            | Analog           |
| <b>Low noise activation</b><br>0= disabled           1= enable in cooling<br>2= enable in heating   3= enable in cooling and heating   | 0    | 3    | Flag   | 1      | R/W | 292            | Analog           |
| <b>Minimum configuration of fresh air</b><br>0= disabled   1= with freecooling enable<br>6= with freecooling disabled   7= always<br>8= cooling mode   9= heating mode   | 0    | 9    | Flag   | 1      | R/W | 326            | Analog           |
| Minimum fresh air %  | 0    | 100  | %      | 1      | R/W | 327            | Analog           |
| <b>CLOCK CONFIGURATION</b>   |      |      |        |        |     |                |                  |
| Real time : hours  | 0    | 23   | h      | 1      | R/W | 336            | Analog           |
| Real time : minutes  | 0    | 59   | min    | 1      | R/W | 337            | Analog           |
| Real time: day   | 0    | 31   | día    | 1      | R/W | 338            | Analog           |
| Real time : month  | 0    | 12   | mes    | 1      | R/W | 339            | Analog           |
| Real time: year  | 0    | 99   | año    | 1      | R/W | 340            | Analog           |
| Start hours for 2nd set point in cooling   | 0    | 23   | h      | 1      | R/W | 299            | Analog           |
| Start minutes for 2nd set point in cooling   | 0    | 59   | min    | 1      | R/W | 300            | Analog           |
| End hours for 2nd set point in cooling   | 0    | 23   | h      | 1      | R/W | 301            | Analog           |
| End minutes for 2nd set point in cooling   | 0    | 59   | min    | 1      | R/W | 302            | Analog           |
| Start houts for 2nd set point in heating   | 0    | 23   | h      | 1      | R/W | 303            | Analog           |
| Start minutes for 2nd set point in heating   | 0    | 59   | min    | 1      | R/W | 304            | Analog           |
| End hours for 2nd set point in heating   | 0    | 23   | h      | 1      | R/W | 305            | Analog           |
| End minutes for 2nd set point in heating   | 0    | 59   | min    | 1      | R/W | 306            | Analog           |
| Start hours for 2nd set point low noise cooling  | 0    | 23   | h      | 1      | R/W | 307            | Analog           |
| Start minutes for 2nd set point low noise cooling  | 0    | 59   | min    | 1      | R/W | 308            | Analog           |
| End hours for 2nd set point low noise cooling  | 0    | 23   | h      | 1      | R/W | 309            | Analog           |
| End minutes for 2nd set point low noise cooling  | 0    | 59   | min    | 1      | R/W | 310            | Analog           |
| Start hours for 2nd set point low noise heating  | 0    | 23   | h      | 1      | R/W | 311            | Analog           |
| Start minutes for 2nd set point low noise heating  | 0    | 59   | min    | 1      | R/W | 312            | Analog           |
| End hours for 2nd set point low noise heating  | 0    | 23   | h      | 1      | R/W | 313            | Analog           |
| End minutes for 2nd set point low noise heating  | 0    | 59   | min    | 1      | R/W | 314            | Analog           |

## ADVANCED FUNCTIONS

### 5.- LOW NOISE

Available for models with proportional fan pressure regulation.


It moves the condensing pressure set point in order to lower the fan speed and thus reduce noise (specifically at night). If low noise is active during cooling, the condenser control set points are increased by 5° bar. If low noise is active in heating, the set points are reduced by 1° bar.

Set **F15=3** to active this function.

Also set the following parameters:

| COOLING     |                           |              | HEATING     |                           |              |
|-------------|---------------------------|--------------|-------------|---------------------------|--------------|
| TIME        |                           | FAN          | TIME        |                           | FAN          |
| Rest of day |                           | Standard     | Rest of day |                           | Standard     |
| Start       | (hour:minutes)<br>t14:t15 | LOW<br>NOISE | Start       | (hour:minutes)<br>t18:t19 | LOW<br>NOISE |
| End         | (hour:minutes)<br>t16:t17 |              | End         | (hour:minutes)<br>t20:t21 |              |

Low noise cooling mode shift is illustrated in the following picture.

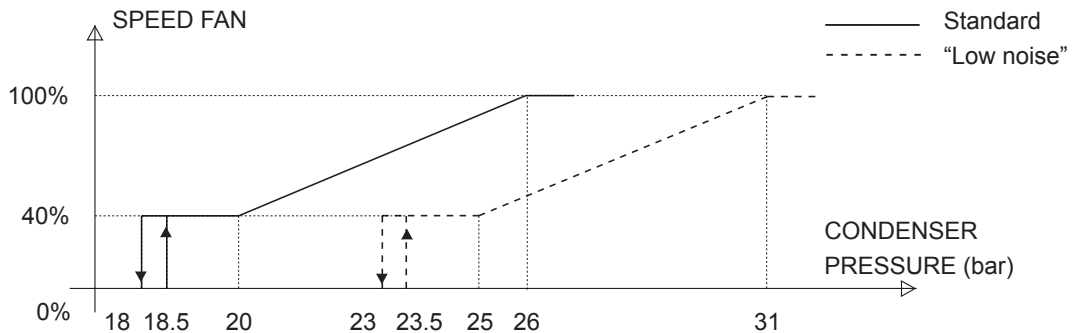

BM40:  $\square$  =1; B00=0; R23=1;

DC40: En05=1

Programming mode:

Press and then during seconds to select the value. Press continuously to confirm and leave programming mode. programación

7.- ANALOGIC / DIGITAL INPUT

| PROBES     | AIRCOOLAIR                                   |  |  |                                  | COMPACTAIR                                   |                                  |  |                                  | AIRCUBE                               |                                  |                                     |                                  | FLATAIR 2                                    |                                 |
|------------|--|--|--|----------------------------------|--|----------------------------------|--|----------------------------------|---------------------------------------|----------------------------------|-------------------------------------|----------------------------------|--|---------------------------------|
|            | 20...85                                      |  | 100...140                                    |                                  | 020...040                                    |                                  | 045...100                                    |                                  | 22...86                               |                                  | 112...246                           |                                  | 10...30                                      |                                 |
|            | ASC  | ASH                                    | ASC  | ASH                              | CMC  | CMH                              | CMC  | CMH                              | KSCM                                  | KSHM                             | KSCM                                | KSHM                             | FMCI/FSC                                     | FMH/FSH                         |
| DC40 (b21) | Ambient probe                                |  | Ambient probe                                |                                  | Ambient probe                                |                                  | Ambient probe                                |                                  |                                       |                                  |                                     |                                  | Ambient probe                                |                                 |
| b1         | (AS/RS) Remote ambient probe/ Return probe * |  | (AS/RS) Remote ambient probe/ Return probe * |                                  | (AS/RS) Remote ambient probe/ Return probe * |                                  | (AS/RS) Remote ambient probe/ Return probe * |                                  |                                       |                                  |                                     |                                  | (AS/RS) Remote ambient probe/ Return probe * |                                 |
| b2         | (IS1) Indoor coil probe 1                    |  | (IS1) Indoor coil probe 1                    |                                  | (IS1) Indoor coil probe 1                    |                                  | (IS1) Indoor coil probe 1                    |                                  |                                       |                                  |                                     |                                  | (IS)Indoor coil probe 1                      |                                 |
| b3         | (TS1) Conden-<br>sing temp. 1                | (OS) Outdo-<br>or T <sup>a</sup> probe | (OS) Outdoor T <sup>a</sup> probe            |                                  | (OS) Outdoor T <sup>a</sup> probe            |                                  | (OS) Outdoor T <sup>a</sup> probe            |                                  | (TS1) Outdoor<br>T <sup>a</sup> probe |                                  |                                     |                                  | (OS)Outdoor T <sup>a</sup> probe             |                                 |
| b4         | (OS) Outdo-<br>or T <sup>a</sup> probe       | (PT1) Conden-<br>sing pressure 1       | (PT1) Conden-<br>sing pressure 1             | (PT1) Conden-<br>sing pressure 1 | (PT1) Conden-<br>sing pressure 1             | (PT1) Conden-<br>sing pressure 1 | (PT1) Conden-<br>sing pressure 1             | (PT1) Conden-<br>sing pressure 1 | (PT1) Conden-<br>sing pressure 1      | (PT1) Conden-<br>sing pressure 1 | (PT1) Conden-<br>sing pressure 1    | (PT1) Conden-<br>sing pressure 1 | (PT) Conden-<br>sing pressure 1              | (PT) Conden-<br>sing pressure 1 |
| b6         | (IS2) Indoor coil probe 2                    |  | (IS2) Indoor coil probe 2                    |                                  |  |                                  | (IS2) Indoor coil probe 2                    |                                  |                                       |                                  |                                     |                                  |  |                                 |
| b7         | (TS2) Conden-<br>sing temp. 2                |  |  |                                  |  |                                  |  |                                  | (TS2) Conden-<br>sing temp. 2         |                                  |                                     |                                  |  |                                 |
| b8         |  | (PT2) Conden-<br>sing pressure 2       | (PT2) Conden-<br>sing pressure 2             | (PT2) Conden-<br>sing pressure 2 |  |                                  | (PT2) Conden-<br>sing pressure 2             | (PT2) Conden-<br>sing pressure 2 | (PT2) Conden-<br>sing pressure 2      |                                  |                                     | (PT2) Conden-<br>sing pressure 2 |  |                                 |
| INLETS     |  |  |  |                                  |  |                                  |  |                                  |                                       |                                  |                                     |                                  |  |                                 |
| ID1        | (F7) Thermal protection<br>Indoor fan        |  | (F7) Thermal protection<br>Indoor fan        |                                  | (F7) Thermal protection<br>Indoor fan        |                                  | (F7) Thermal protection<br>Indoor fan        |                                  | (F7) Térmico<br>ventilador interior   |                                  | (F7) Térmico<br>ventilador interior |                                  | (F7) Térmico<br>ventilador interior          |                                 |
| ID2        | Cooling/<br>Heating                          |  | Cooling/<br>Heating                          |                                  | Cooling/<br>Heating                          |                                  | Cooling/<br>Heating                          |                                  | Cooling/<br>Heating                   |                                  | Cooling/<br>Heating                 |                                  | Cooling/<br>Heating                          |                                 |
| ID3        | HIGH PRESSURE<br>circuit 1                   |  | HIGH PRESSURE<br>circuit 1                   |                                  | HIGH PRESSURE<br>circuit 1                   |                                  | HIGH PRESSURE<br>circuit 1                   |                                  | HIGH PRESSURE<br>circuit 1            |                                  | HIGH PRESSURE<br>circuit 1          |                                  | HIGH PRESSURE<br>circuit 1                   |                                 |
| ID4        | (LP1) LOW PRESSURE<br>circuit 1              |  | (LP1) LOW PRESSURE<br>circuit 1              |                                  | (LP1) LOW PRESSURE<br>circuit 1              |                                  | (LP1) LOW PRESSURE<br>circuit 1              |                                  | (LP1) LOW PRESSURE<br>circuit 1       |                                  | (LP1) LOW PRESSURE<br>circuit 1     |                                  | LOW PRESSURE<br>circuit 1                    |                                 |
| ID5        | ON / OFF                                     |  | ON / OFF                                     |                                  | ON / OFF                                     |                                  | ON / OFF                                     |                                  | STEP 1                                |                                  | STEP 1                              |                                  | ON / OFF                                     |                                 |
| ID6        |  |  |  |                                  |  |                                  |  |                                  | STEP 2                                |                                  | STEP 2                              |                                  |  |                                 |
| ID7        |  |  |  |                                  |  |                                  |  |                                  |                                       |                                  | STEP 3                              |                                  |  |                                 |
| ID8        | HIGH PRESSURE<br>circuit 2                   |  | HIGH PRESSURE<br>circuit 2                   |                                  |  |                                  | HIGH PRESSURE<br>circuit 2                   |                                  |                                       |                                  | HIGH PRESSURE<br>circuit 2          |                                  |  |                                 |
| ID9        | (LP2) LOW PRESSURE<br>circuit 2              |  | (LP2) LOW PRESSURE<br>circuit 2              |                                  |  |                                  | (LP2) LOW PRESSURE<br>circuit 2              |                                  |                                       |                                  | (LP2) LOW PRESSURE<br>circuit 2     |                                  |  |                                 |
| ID10       |  |  |  |                                  |  |                                  |  |                                  |                                       |                                  | STEP 4                              |                                  |  |                                 |

NOTE: Some probes can change, according to the options selected with the unit.  
\* Option.




## ADVANCED FUNCTIONS

### 8.- TIMING AND DELAYS

#### COMPRESSOR


In order to protect compressors from destructively cycling on and off, following protection delays have been set:

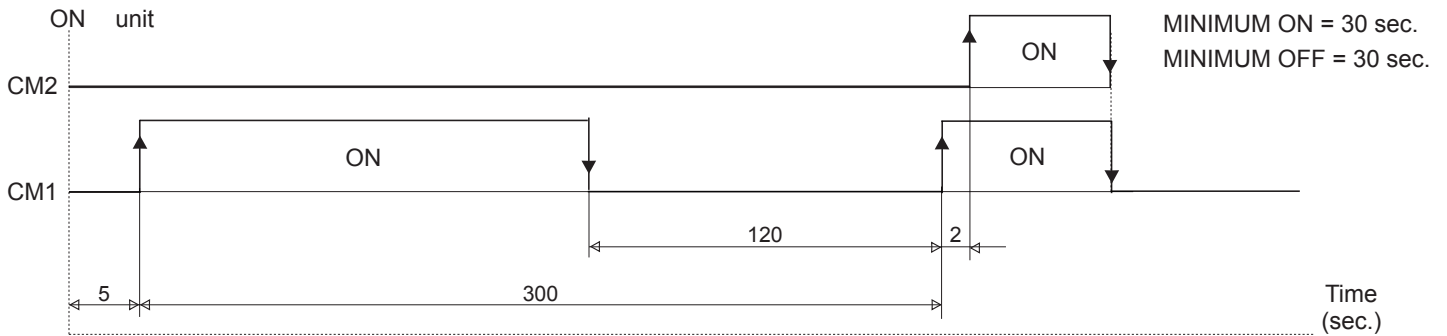

### 9.- DEFROST

The defrosting process is activated during heating mode in the heat pump units, when the outside temperature is low and the outdoor coil is likely to be frozen. To melt the ice, the defrosting function will switch the unit to cooling operation for a short period. During defrosting mode, the low pressure is at minimum level, so the pressure switch is disabled in this mode. The defrost cycle is illustrated in the following picture.


#### 9.1 - DEFROST CYCLE

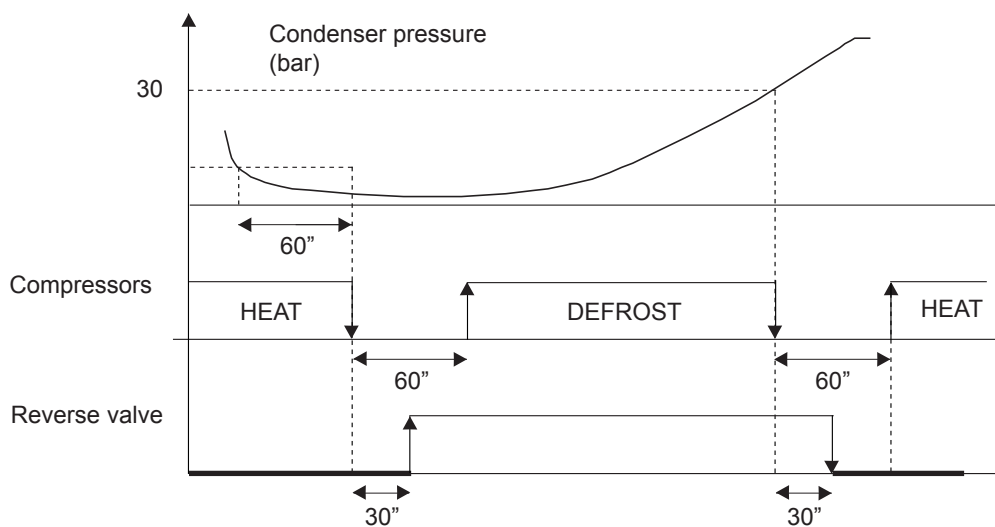

## ADVANCED FUNCTIONS

### 9.2 - DYNAMIC DEFROST

Dynamic defrosting cycle starting ( according to outdoor temperature) allows to reduce the number and time of defrosting cycles in winter to achieve better unit efficiency.

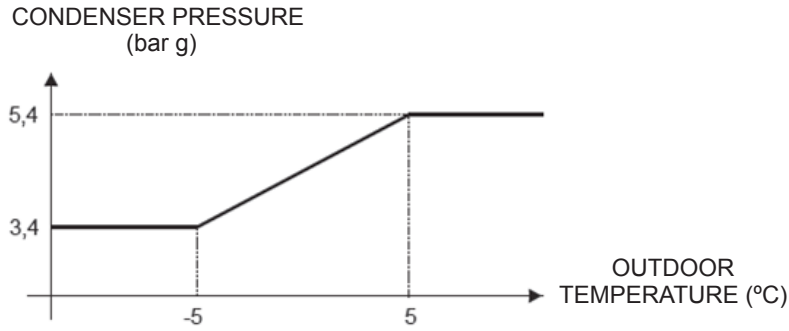



## 10.- CONDENSER FAN SPEED CONTROL

### 10.1.- PROPORTIONAL CONTROL BASED ON PRESSURE

Models:

AIRCOOLAIR (ASC + kit -15°C) and (ASHM) 20-85  
AIRCUBE (KSCM + kit -15°C) and (KSHM 22E-86D)  
(KSCM + kit -15°C 112-214)


FLATAIR (FSC/FMC y FSH/FMH) + kit -15°C  
COMPACTAIR (CSC/CMC, CSH/CMH) + kit -15°C  
AIRCOOLAIR (ASC+kit -15°C 100-140)

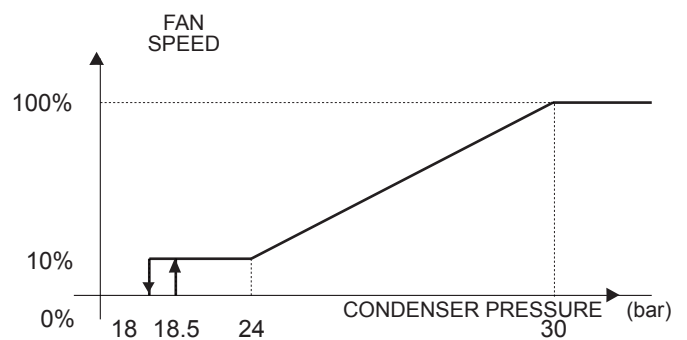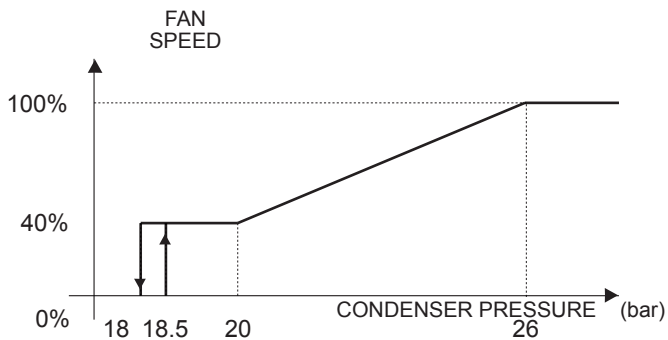

## ADVANCED FUNCTIONS

### 10.2.- PROPORTIONAL CONTROL BASED ON PRESSURE TEMPERATURE

Models: AIRCOOLAIR: ASC 20-85  
AIRCUBE: KSCM 22E-86D

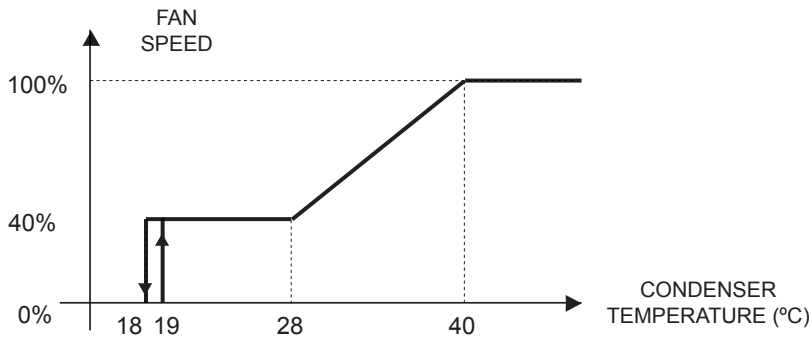


### 10.3.- ON/OFF CONTROL BASED ON PRESSURE

Models: AIRCOOLAIR: ASC/ASH 100-140  
AIRCUBE: KSCM/KSHM 112D-214D

The fans for these models incorporate 2 speeds. The fans work on high or low speed according to:


#### COOLING MODE:

The on/off and low/high fan speed is managed according to the condensing pressure. See the illustration below:


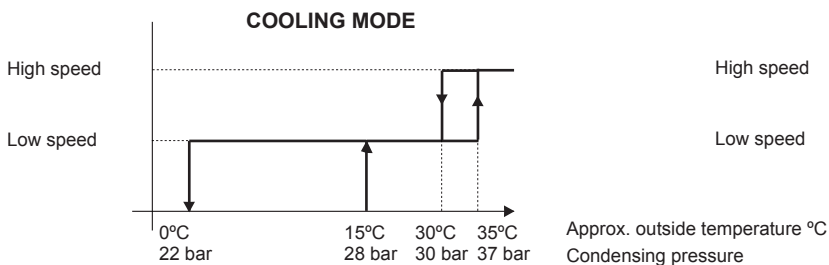


#### HEATING MODE (heat pump units only). The low/high fan speed

is managed according to the outdoor temperature thermostat. See the illustration below:

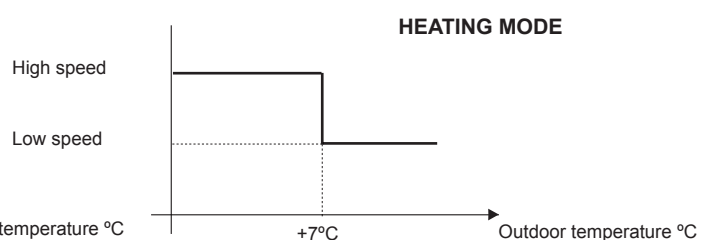

Models: COMPACTAIR: CSC/CMC+kit 0°C CSH/CMH  
FLATAIR: FSC/FMC+kit 0°C, FSH/FMH

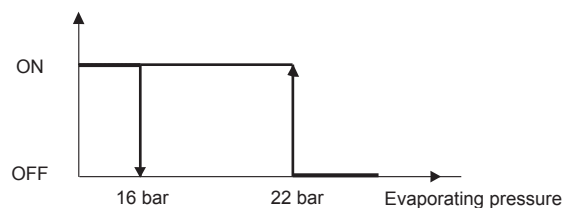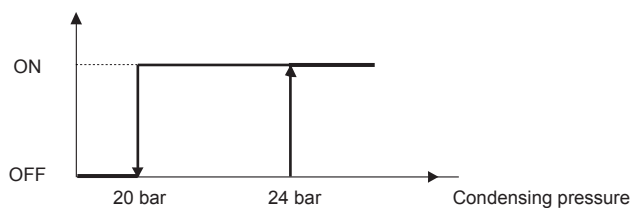

NOTE\*: FLATAIR and COMPACTAIR standard models have not included condensing pressure control ( fan starts with the compressor), for heat pump units control can be activated with parameter F02=2.

## ADVANCED FUNCTIONS

### 11.- FREE COOLING

#### OPTION


This option takes advantage of external conditions for cooling mode.

Freecooling is enabled when outdoor temperature is 1°C lower than indoor temperature; when the former is:

- < 10°C, the compressors are deactivated and the air intake gate fully opened in order to refresh with outdoor air only (sufficient under these conditions).

- >10°C, the air intake gate opens and delays the compressors, which turn on only if there would be insufficient outdoor fresh air to achieve the comfort setpoint.

The illustration below shows freecooling regulation.

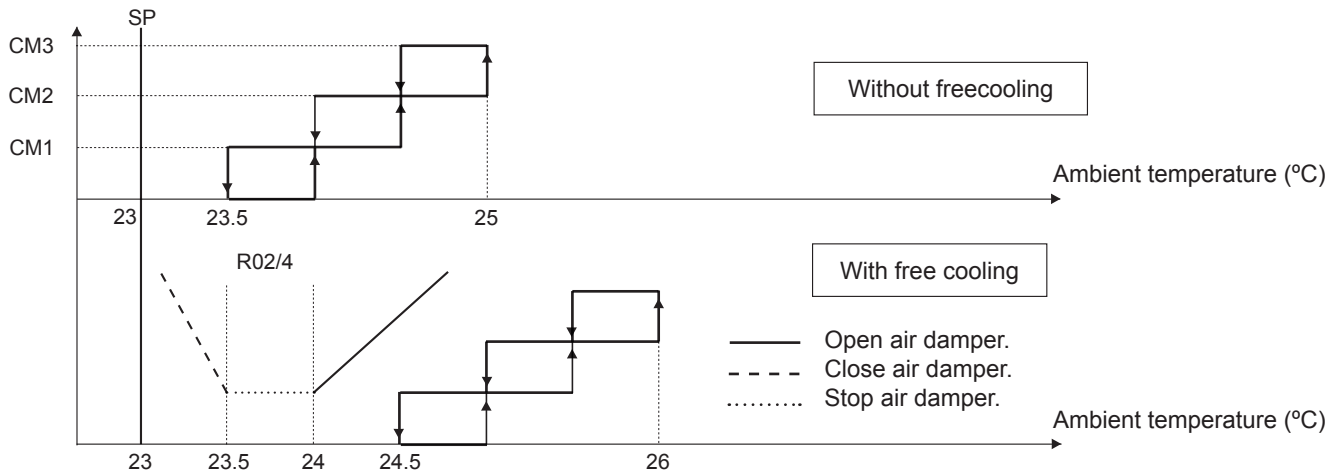

To get a constant air renewal, when freecooling conditions are satisfied, the damper is maintained opened partially (20%), according to the following values.

| Par.                      | DESCRIPTION   | Min. | Max. | Def. |
|---------------------------|---|------|------|------|
| r40                       | This indicates when to carry out the minimum opening of the damper. | 0    | 9    | 1    |
|                           | 0= Never.   |      |      |      |
|                           | 1= with freecooling.  |      |      |      |
|                           | 2= with freeheating.  |      |      |      |
|                           | 3= with freecooling and freeheating                                 |      |      |      |
|                           | 4= always, except with freecooling y freeheating.                   |      |      |      |
|                           | 5= always, except with freeheating.                                 |      |      |      |
|                           | 6= always, except with freecooling.                                 |      |      |      |
|                           | 7= always   |      |      |      |
|                           | 8= only for cooling mode.   |      |      |      |
| 9= only for heating mode. |   |      |      |      |
| r41                       | % minimum percentage opening damper.                                | 0    | 100  | 20   |

## PARAMETERS

| PAR.                                    | DESCRIPTION   | MIN.  | MAX.  | VAR.  | UD.    | BY DEFAULT   |         |            |           |
|---|---|-------|-------|-------|--------|--|---------|------------|-----------|
|   |   |       |       |       |        | AIRCOOLAIR   | AIRCUBE | COMPACTAIR | FLATAIR 2 |
| <b>Antifreeze and electrical heater</b> |   |       |       |       |        |  |         |            |           |
| ┌1                                      |   |       |       |       |        |  |         |            |           |
| A01                                     | Antifreeze alarm set point.   | A7    | A4    | 0.1   | °C     | 2  | -----   | 2          | 2         |
| A02                                     | Antifreeze differential.  | 0,3   | 122   | 0.1   | °C     | 5  | -----   | 5          | 5         |
| A03                                     | By-pass time for antifreeze alarm.  | 0     | 150   | 1     | sec.   | 30   | -----   | 30         | 30        |
| A04                                     | Antifreeze heater set point.  | A1    | R16   | 0.1   | °C     | -----  | -----   | -----      | -----     |
| A05                                     | Antifreeze heater differential.   | 0,3   | 50    | 0.1   | °C     | -----  | -----   | -----      | -----     |
| A08                                     | Auxiliary heater absolute set point (1 <sup>st</sup> step).   | A1    | R16   | 0.1   | °C     | -----  | -----   | -----      | -----     |
|   | Auxiliary heater relative set point (1 <sup>st</sup> step).   | 0     | 20    | 0.1   | °C     | 1.5 (ASC)<br>2,5 (ASH 20-40)<br>3,5 (ASH 45-85)<br>4,5 (ASH 100-140) | -----   | 2,5        | 2,5       |
| A9                                      | Auxiliary heater differential.  | 0     | 20    | 0.1   | °C     | 1  | -----   | 1          | 1         |
| A11                                     | Auxiliary heater absolute set point (2 <sup>nd</sup> step).   | A1    | R16   | 0.1   | °C     | -----  | -----   | -----      | -----     |
|   | Auxiliary heater relative set point (1 <sup>st</sup> step).   | 0     | 20    | 0.1   | °C     | 2.5 (ASC)<br>3,5(ASH 20-40)<br>4,5(ASH 45-85)                        | -----   | 3,5        | 3,5       |
| A13                                     | Lower discharge air temperature in freecooling.   | A7    | R16   | 0.1   | °C     | 7  | -----   | 7          | 7         |
| <b>Probes</b>                           |   |       |       |       |        |  |         |            |           |
| b0                                      | Config. of probe to be shown on the display:<br>0= probe B1.           1= probe B2<br>2= probe B3.           3= probe B4<br>4= probe B5.           5= probe B6<br>6= probe B7.           7= probe B8<br>8= Set point without compensation.<br>9= Dynamic set point with possible compensation.<br>10= Remote ON/OFF digital input status.<br>11= Terminal DC40 probe. | 0     | 11    | 1     | N      | 11   | 10      | 11         | 11        |
| b1                                      | Probe B1.   | ----- | ----- | ----- | °C     |  |         |            |           |
| b2                                      | Probe B2.   | ----- | ----- | ----- | °C     |  |         |            |           |
| b3                                      | Probe B3.   | ----- | ----- | ----- | °C     |  |         |            |           |
| b4                                      | Probe B4  | ----- | ----- | ----- | °C/bar |  |         |            |           |
| b5                                      | Probe B5.   | ----- | ----- | ----- | °C     |  |         |            |           |
| b6                                      | Probe B6.   | ----- | ----- | ----- | °C     |  |         |            |           |
| b7                                      | Probe B7.   | ----- | ----- | ----- | °C     |  |         |            |           |
| b8                                      | Probe B8.   | ----- | ----- | ----- | °C/bar |  |         |            |           |
| b21                                     | Probe DC40.   | ----- | ----- | ----- | °C     |  |         |            |           |
| <b>Timing and delays</b>                |   |       |       |       |        |  |         |            |           |
| C01                                     | Min. compressor ON time.  | 0     | 999   | 1     | sec.   | 30   | 30      | 30         | 30        |
| C02                                     | Min. compressor OFF time.   | 0     | 999   | 1     | sec.   | 30   | 30      | 30         |           |
| C03                                     | Delay between 2 starts of the same compressor.  | 0     | 999   | 1     | sec.   | 300  | 300     | 300        | 300       |
| C04                                     | Delay between starts of the 2 compressor.   | 0     | 999   | 1     | sec.   | 2  | 2       | 2          | 2         |
| C05                                     | Delay between 2 shut-downs of the 2 compressors.  | 0     | 999   | 1     | sec.   | 0  | 0       | 0          | 0         |
| C06                                     | Delay at start up.  | 0     | 999   | 1     | sec.   | 5  | 5       | 5          | 5         |
| C07                                     | Delay in switching on the compressor after switching on the pump.   | 0     | 999   | 1     | sec.   | 2  | 0       | 5          | 5         |
| C08                                     | Delay in switching off the compressor after switching off the pump.   | 0     | 150   | 1     | min.   | 1  | 0       | 1          | 1         |
| C10                                     | Compressor 1 timer.   | 0     | 8000  | 100   | hours  |  |         |            |           |
| C11                                     | Compressor 2 timer.   | 0     | 8000  | 100   | hours  |  |         |            |           |
| C12                                     | Compressor 3 timer.   | 0     | 8000  | 100   | hours  |  |         |            |           |
| C13                                     | Compressor 4 timer.   | 0     | 8000  | 100   | hours  |  |         |            |           |
| C14                                     | Compressor operation timer threshold (0=not used).  | 0     | 100   | 100   | hours  | 0  | 0       | 0          | 0         |
| C15                                     | Evaporator pump timer.  | 0     | 8000  | 100   | hours  |  |         |            |           |
| C17                                     | Minimum time between 2 pump starts.   | 0     | 150   | 1     | min.   | 0  | 0       | 0          | 0         |
| C18                                     | Minimum pump/indoor fan ON time.  | 0     | 150   | 1     | min.   | 1  | 0       | 1          | 1         |
| C19                                     |   |       |       |       |        | 0  | 0       | 0          | 0         |

## PARAMETERS

| PAR.           | DESCRIPTION  | MIN. | MAX. | VAR. | UD.  | BY DEFAULT  |   |            |         |
|----------------|--|------|------|------|------|---|---|------------|---------|
|                |  |      |      |      |      | AIRCOOLAIR  | AIRCUBE   | COMPACTAIR | FLATAIR |
| <b>Defrost</b> |  |      |      |      |      |   |   |            |         |
| d01            | Defrosting cycle activation.   | 0    | 1    | 1    | flag | 1   | 1   | 1          | 1       |
| d03            | Start defrosting pressure.   | 1    | D04  | 0.1  | bar  | 5,4   | 5,7   | 5,4        | 5,4     |
| d04            | End defrosting pressure.   | D03  | /12  | 0.1  | bar  | 30  | 30  | 30         | 30      |
| d05            | Min. time to start a defrosting cycle.   | 10   | 150  | 1    | sec. | 60  | 60  | 60         | 60      |
| d06            | Min. duration of a defrosting cycle.   | 0    | 150  | 1    | sec. | 0   | 0   | 0          | 0       |
| d07            | Max. duration of a defrosting cycle.   | 1    | 150  | 1    | min. | 8   | 8   | 8          | 8       |
| d08            | Delay between 2 defrosting cycle requests with in the same circuit.  | 10   | 150  | 1    | min. | 35  | 40  | 35         | 35      |
| d09            | Defrosting delay between the 2 circuits.   | 0    | 150  | 1    | min. | 10  | 10  | 10         | 10      |
| <b>Fan</b>     |  |      |      |      |      |   |   |            |         |
| F02            | Fan operating mode:<br>0= Always ON.<br>1= Depending on compressor (in parallel operating mode).<br>2= Depending on compressors in ON/OFF control.<br>3= Depending on compressors in speed control mode.                             | 0    | 3    | 1    | int. | 1 (ASC 100-140)<br>2 (ASH 100-140)<br>3 (ASC/H 20-85) | 1 (KSCM 112D-214D)<br>2 (KSHM 112D-214D)<br>3 (KSCM/HM 22E-86D) | 1          | 1       |
| F05            | Temp. value for min. speed cooling.  | -40  | 176  | 0.1  | °C   | 28  | 28  | -----      | -----   |
| F05            | Pressure value for min. speed cooling.   | /11  | /12  | 0.1  | bar  | 20 (F2=3) / 22 (F2=2)                                 | 20 (F2=3) / 22 (F2=2)   | 10         | 10      |
| F06            | Differential value for max. speed in cooling mode (temp).  | 0    | 50   | 0.1  | °C   | 12  | 12  | -----      | -----   |
| F06            | Differential value for max. speed in cooling mode (pres).  | 0    | 30   | 0.1  | bar  | 6   | 6   | 3          | 3       |
| F07            | Fan shut-down differential in cooling mode (temp).   | 0    | 50   | 0.1  | °C   | 10  | 10  | -----      | -----   |
| F07            | Fan shut-down differential in cooling mode (pres).   | 0    | F5   | 0.1  | bar  | 2   | 2   | 2          | 2       |
| F08            | Temperature value for min. speed in heating mode.  | -40  | 176  | 0.1  | °C   | 30  | 30  | -----      | -----   |
| F08            | Pressure value for min speed cooling.  | /11  | /12  | 0.1  | bar  | 12 (F2=3) / 22 (F2=2)                                 | 12 (F2=3) / 22 (F2=2)   | 22         | 22      |
| F09            | Differential value for max. speed in heating mode (temp).  | 0    | 50   | 0.1  | °C   | 1   | 1   | -----      | -----   |
| F09            | Differential value for max. speed in heating mode (pres).  | 0    | 30   | 0.1  | bar  |   |   | 6          | 6       |
| F10            | Fan shut-down differential in heating mode (temp).   | 0    | 50   | 0.1  | °C   | 0   | 0   | -----      | -----   |
| F10            | Fan shut-down differential in heating mode (pres).   | 0    | F8   | 0.1  | bar  | 13  | 13  | 13         | 13      |
| F11            | Fan starting time.   | 0    | 120  | 1    |      | 0   | 0   | 0          | 0       |
| F15            | Activation Low Noise:<br>0= Deactivate.<br>1= Activate only in cooling mode.<br>2= Activate only in heating mode.<br>3= Activate both in cooling and heating mode.   | 0    | 3    | 1    | flag | 0   | 0   | 0          | 0       |
| F16            | Differential Low Noise in cooling mode.  | 0    | 50   | 0.1  | bar  | 5   | 5   | 5          | 5       |
| F17            | Differential Low Noise in heating mode.  | 0    | 50   | 0.1  | bar  | 1   | 1   | 1          | 1       |
| F18            | Maximum outdoor temperature with outdoor fan speed regulation (over maximum speed)   | -40  | 176  | 1    | °C   | 30  | 30  | 30         | 30      |
| <b>Setting</b> |  |      |      |      |      |   |   |            |         |
| H06            | Activate remote change over:<br>0= Deactivate.<br>1= Activate.   | 0    | 1    | 1    | flag | 0   | 0 (KSCM) 1 (KSHM)   | 0          | 0       |
| H07            | ON/OFF remoto:<br>0= Deactivate.<br>1= Activate.   | 0    | 1    | 1    | flag | 1   | 1   | 1          | 1       |
| H10            | Serial address.  | 1    | 200  | 1    | ud.  | 1   | 1   | 1          | 1       |
| H23            | Activate Modbus.   | 0    | 1    | 1    | flag | 0   | 0   | 0          | 0       |
| H97            | Expansion board software version.  | 0    | 999  | 1    | flag |   |   |            |         |
| H99            | Software version.  | 0    | 999  | 1    | flag |   |   |            |         |
| <b>Alarms</b>  |  |      |      |      |      |   |   |            |         |
| P04            | Enable part load in high pressure:<br>0= Capacity control desactivated<br>1= Capacity control activated for high pressure.<br>2=Capacity control activated for low pressure.<br>3= Capacity control activated for high and low pres. | 0    | 3    | 1    | flag | 1   | 1   | 1          | 1       |
| P09            | Configuration for digital input: 0= Not configured<br>10= winter/summer operation (PSW 66)   | 0    | 23   | 1    | ud   | 0   | 0   | 0          | 0       |

## PARAMETERS

| PAR.              | DESCRIPTION   | MIN. | MAX. | VAR. | UD.   | BY DEFAULT  |         |   |           |
|-------------------|---|------|------|------|-------|---|---------|---|-----------|
|                   |   |      |      |      |       | AIRCOOLAIR  | AIRCUBE | COMPACTAIR  | FLATAIR 2 |
| <b>Regulation</b> |   |      |      |      |       |   |         |   |           |
| r1                | Cooling set point.                                      | R13  | R14  | 0.1  | °C    | 20  | -----   | 20  | 20        |
| r2                | Differential in cooling mode.                           | 0.3  | 50   | 0.1  | °C    | 1 (ASC/ASH 20-40)<br>2 (ASC/ASH 45-85)<br>3 (ASC/ASH 100-140) | -----   | 1 (CMC/H 20-40)<br>2 (CMC/H 45-85)<br>3 (CMC/H 100) | 1         |
| r3                | Heating set point.                                      | R15  | R16  | 0.1  | °C    | 25  | -----   | 25  | 25        |
| r4                | Differential in heating mode.                           | 0.3  | 50   | 0.1  | °C    | 1 (ASH 20-40)<br>2 (ASH 45-85)<br>3 (ASH 100-140)             | -----   | 1 (CMC/H 20-40)<br>2 (CMC/H 45-85)<br>3 (CMC/H 100) | 1         |
| r7                | Dead zone.  | 1    | 50   | 0.1  | °C    | 0.5   | -----   | 0,5   | 0,5       |
| r17               | Cooling compensation constant.                          | -5   | 5    | 0.1  | ----- | 0   | -----   | 0   | 0         |
| r18               | Maximum distance from the set point.                    | 0.3  | 20   | 0.1  | °C    | 2   | -----   | 2   | 2         |
| r19               | Start compensation temperature in cooling mode.         | -40  | 176  | 0.1  | °C    | 35  | -----   | 35  | 35        |
| r20               | Start compensation temperature in heating mode.         | -40  | 176  | 0.1  | °C    | 6   | -----   | 6   | 6         |
| r21               | Second cooling set point.                               | R13  | R14  | 0.1  | °C    | 28  | -----   | 28  | 28        |
| r22               | Second heating set point.                               | R15  | R16  | 0.1  | °C    | 18  | -----   | 18  | 18        |
| r23               | Select automatic change over probe.                     | 0    | 8    | 1    | flag  | 0   | -----   | 0   | 0         |
| r24               | Automatic change over set point.                        | R15  | R16  | 0.1  | °C    | 23  | -----   | 23  | 23        |
| r25               | Outside temp. set point to stop compressors.            | -40  | 80   | 0.1  | °C    | -15   | -15     | -15   | -15       |
| r31               | Heating compensation constant.                          | -5   | 5    | 0.1  | ----- | 0   | 0       | 0   | 0         |
| <b>Clock</b>      |   |      |      |      |       |   |         |   |           |
| t01               | Real Time Clock (RTC) hours.                            | 0    | 23   | 1    | ----- |   |         |   |           |
| t02               | Real Time Clock (RTC) minutes.                          | 0    | 59   | 1    | ----- |   |         |   |           |
| t03               | Real Time Clock (RTC) days.                             | 1    | 31   | 1    | ----- |   |         |   |           |
| t04               | Real Time Clock (RTC) month.                            | 1    | 12   | 1    | ----- |   |         |   |           |
| t05               | Real Time Clock (RTC) years.                            | 0    | 99   | 1    | ----- |   |         |   |           |
| t06               | Start hours for 2 <sup>nd</sup> set point in cooling.   | 0    | 23   | 1    | ----- | 0   | 0       |   |           |
| t07               | Start minutes for 2 <sup>nd</sup> set point in cooling. | 0    | 59   | 1    | ----- | 0   | 0       |   |           |
| t08               | End hours for 2 <sup>nd</sup> set point in cooling.     | 0    | 23   | 1    | ----- | 0   | 0       |   |           |
| t09               | End minutes for 2 <sup>nd</sup> set point in cooling.   | 0    | 59   | 1    | ----- | 0   | 0       |   |           |
| t10               | Start hours for 2 <sup>nd</sup> set point in heating.   | 0    | 23   | 1    | ----- | 0   | 0       |   |           |
| t11               | Start minutes for 2 <sup>nd</sup> set point in heating. | 0    | 59   | 1    | ----- | 0   | 0       |   |           |
| t12               | End hours for 2 <sup>nd</sup> set point in heating.     | 0    | 23   | 1    | ----- | 0   | 0       |   |           |
| t13               | End minutes for 2 <sup>nd</sup> set point in heating.   | 0    | 59   | 1    | ----- | 0   | 0       |   |           |
| t14               | Start hours for 2 <sup>nd</sup> low noise cooling.      | 0    | 23   | 1    | ----- | 0   | 0       |   |           |
| t15               | Start minutes for 2 <sup>nd</sup> low noise in cooling. | 0    | 59   | 1    | ----- | 0   | 0       |   |           |
| t16               | End hours for 2 <sup>nd</sup> low noise in cooling.     | 0    | 23   | 1    | ----- | 0   | 0       |   |           |
| t17               | End minutes for 2 <sup>nd</sup> low noise in cooling.   | 0    | 59   | 1    | ----- | 0   | 0       |   |           |
| t18               | Start hours for 2 <sup>nd</sup> low noise in heating.   | 0    | 23   | 1    | ----- | 0   | 0       |   |           |
| t19               | Start minutes for 2 <sup>nd</sup> low noise in heating. | 0    | 59   | 1    | ----- | 0   | 0       |   |           |
| t20               | End hours for 2 <sup>nd</sup> low noise in heating.     | 0    | 23   | 1    | ----- | 0   | 0       |   |           |
| t21               | End minutes for 2 <sup>nd</sup> low noise in heating.   | 0    | 59   | 1    | ----- | 0   | 0       |   |           |



### WARNING

Default values could vary depending on optional kits or improvements.

### **ANTIFREEZE PROTECTION (AIRCOOLAIR / COMPACTAIR / FLATAIR).**

The unit is protected by means of a temperature probe located in the indoor piping, when the indoor temperature goes drops 2°C:  
WITHOUT FREECOOLING

- The compressors shut down and the antifreeze alarm goes on.
- The alarm is reset automatically when the temperature reaches 7°C.

WITH FREECOOLING

- Air intake gate closes,
- Once the gate is completely closed, the compressors shut down and the antifreeze alarm goes on.

When the air intake gate is closing, if the temperature in the indoor piping goes up 2°C, the gate stops and stays in the position reached; then, if the temperature reaches goes over 7°C, the air damper starts to open or, if the temperature goes down 2°C, the damper start to close again.

In addition to that, in order to prevent frozen air discharging when freecooling without the compressors working (outdoor temp. <10°C), if the temperature in the indoor piping goes down 7°C, the air intake gate starts to mix outdoor air with return air, thus increasing the temperature of the discharge air.



## ASSEMBLY AND INSTALLATION INSTRUCTIONS

### DC40.

#### Installation instructions

1. Separate the cover of the instrument from the bodypart using a screwdriver as shown in Fig. 8.1.
2. Open the instrument with a “hinge” movement, pivoting the cover of the instrument upwards.

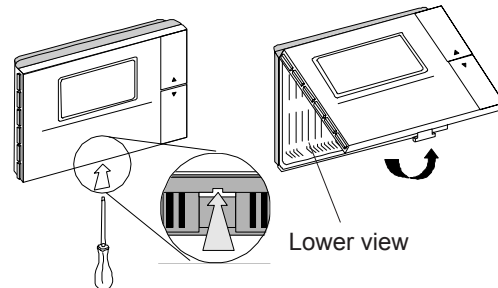


Fig. 8.1

3. Fix the rear part to the wall, taking care that the connection cables pass through the hole in the centre of the rear casing. The distances between the fastening holes are designed so as to be able to fit the DC40 to a flush-mounting connection box compliant with the CEI C.431 - IEC 670 standards. If this is not available, use the fastening holes on the casing as a guide for drilling the holes in the wall, and then use the kit of screws and plugs supplied.
4. Connect the cables to the terminals located in the casing as indicated in the casing itself or in the electrical diagram.

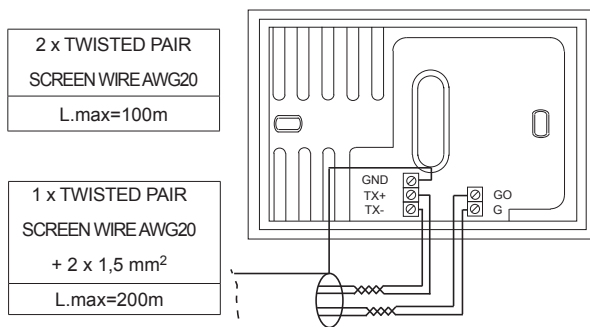


Fig. 8.2



Keep the DC40's inductive load cables separate from those of any power devices (contactors, etc.) in order to prevent electromagnetic interference.  
Do not lay power and communications cables together

- Run a connection from the electrical box in the outdoor unit to the DC40 device:

- . 91 and 92 terminal blocks respectively to Tx+ and Tx- (Twisted pair for communications).
- . 93 and 94 terminal blocks respectively to GO and G. (Twisted pair for 24VAC power).
- . 90 to GND. (shield).

5. Once the installation is complete, fit the terminal onto the casing by pivoting the cover with a “hinge” movement and close it. When closing, make sure that the pins on the board fit into the corresponding terminals.

#### Installation warnings

- Disconnect the power supply before working on the DC40 during operations of assembly, maintenance and replacement.
- The terminal must be fastened to the wall in such a way as to allow the circulation of air through the slits on the rear casing.
- Avoid installing the boards in environments with the following characteristics:
  - Avoid locations where there is a great variation in room temperature.
  - Near doors leading to the outside.
  - On outside walls.
  - Where it will be exposed to direct sunlight or to conditioned air flow.
  - Where there are strong magnetic and/or radio frequency interference (for example, near transmitting antennae).

## ALARMS

### ALARMS/WARNINGS DISPLAY

The unit self-protects by means of safety devices; when any of these safety devices detects an anomaly, this is shown on the Climatic 40 display and, in Aircoolair / Compactair / Flatair units only, also on the DC41 display (even if it has a different alarm code), in order to warn the operator.

Depending on the type of anomaly, Climatic 40 shows:

- Alarm. Serious anomaly. This is one that has a direct effect on the operation of the unit.
- Warning. Non-serious anomaly. This is one that has no direct effect on the operation of the unit.

The activation of an alarm results in:

- Alarm code being shown on BM40 display alternately with the main menu.
- in Aircoolair / Compactair / Flatair units, an alarm code (different from the one for the Climatic 40) being shown on the DC40 display alternately with the main menu.
- A red bell appears on the Climatic 40 display and the alarm relay is activated. (contacts 99-100).
- In some cases, depending on the type of alarm, some of the outputs may be blocked, thus stopping the unit.

The activation of a warning results in:

- A warning code being shown only on the Climatic 40 display, alternately with the main menu.

### ALARM/WARNING RESET

Some alarms are reset automatically. When the cause is no longer present, they disappear from the display.


Others alarms are reset manually and, once the alarm conditions have disappeared, they need to be reset by the user as shown below:

CLIMATIC BM40



5 Sec.

DC 40

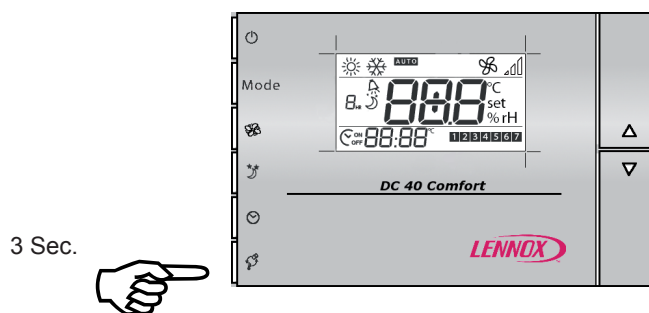

3 Sec.

# ALARMS

## ALARMS/WARNINGS CODES

| DISP<br>CL40/<br>DC41 | DISP<br>DC40 | DESCRIPTION   | EFFECT                              | RE   | ACTION  |
|-----------------------|--------------|---|-------------------------------------|--|---|
| HP1                   | HP           | High pressure switch alarm, circuit 1.<br>This alarm may indicate the following problems:<br>- High pressure switch protection.<br>- Compressor stopped.<br>- Excessive refrigerant charge. | Circuit 1<br>compressors<br>stop    | AUTO/<br>MAN.<br>After 3<br>times in<br>1 hour | Reset and check:<br>- Coil is clean and not blocked.<br>- Outdoor fan during cooling cycle.<br>- Indoor fan during heating cycle.<br>- Compressor protection.<br>- Condenser air temperature is very high.<br>- Refrigerant charge.                         |
| HP2                   |              | High pressure switch alarm, circuit 2.<br>The same as previous alarm but this time referring to circuit 2.  | Circuit 2<br>compressors<br>stop    | AUTO/<br>MAN.<br>After 3/h                     | The same as previous alarm but this time referring to circuit 2.  |
| LP1                   | LP           | Low pressure switch alarm, circuit 1.<br>This alarm may indicate the following problems:<br>- Low refrigerant.<br>- Outdoor fan stopped.<br>- Low pressure switch protection.               | Circuit 1<br>compressors<br>stop    | AUTO/<br>MAN.<br>After 3<br>times in<br>1 hour | Reset and check:<br>- Coil is clean and not blocked.<br>- Outdoor fan during heating cycle.<br>- Indoor fan during cooling cycle.<br>- Fuses of the fan.<br>- Evaporation air temperature is very low.<br>- Check refrigerant charge.<br>- Expansion valve. |
| LP2                   |              | Low pressure switch alarm, circuit 2.<br>The same as previous alarm but this time referring to circuit 2.   | Circuit 2<br>compressors<br>stop    | AUTO/<br>MAN.<br>After 3/h                     | The same as previous alarm but this time referring to circuit 2.  |
| TP                    | T            | Indoor fan thermal protection alarm:<br>- Fan thermal protection open.<br>- Faulty power supply.  | Unit stops                          | MAN.   | Reset and check:<br>- Fan.<br>- Power supply.   |
| TC1                   |              | Not used.   | -----                               | -----  | Call Technical Service.   |
| TC2                   |              | Not used.   | -----                               | -----  | Call Technical Service.   |
| LA                    | -----        | Not used.   | -----                               | -----  | Call Technical Service.   |
| FLb                   | -----        | Not used.   | -----                               | -----  | Call Technical Service.   |
| E1                    | E00          | B1 probe error.<br>Faulty probe or connection.  | Unit stops                          | AUTO   | Check connection of B1 probe (see electrical diagram), check continuity and change the faulty component.  |
| E2                    |              | B2 probe error.<br>Faulty probe or connection.  | Unit stops                          | AUTO   | Check connection of B2 probe (see electrical diagram), check continuity and change the faulty component.  |
| E3                    |              | B3 probe error.<br>Faulty probe or connection.  | Unit stops                          | AUTO   | Check connection of B3 probe (see electrical diagram), check continuity and change the faulty component.  |
| E4                    |              | B4 probe/pressure transducer error.<br>Faulty probe or connection.  | Unit stops                          | AUTO   | Check connection of B4 probe/pressure transducer (see electrical diagram), check continuity and change the faulty component.  |
| E5                    |              | Not used.   | -----                               | -----  | Call Technical Service.   |
| E6                    |              | B6 probe error.<br>Faulty probe or connection.  | Unit stops                          | AUTO   | Check connection of B6 probe(see electrical diagram), check continuity and change the faulty component.   |
| E7                    |              | B7 probe error.<br>Faulty probe or connection.  | Unit stops                          | AUTO   | Check connection of B7 probe (see electrical diagram), check continuity and change the faulty component.  |
| E8                    |              | B8 probe/pressure transducer error.<br>Faulty probe or connection.  | Unit stops                          | AUTO   | Check connection of B8 probe/pressure transducer (see electrical diagram), check continuity and change the faulty component.  |
| Hcl-4                 | Hc           | Warning.<br>Compressor operating time limit exceeded.<br>Disabled by default.   | -----                               | AUTO   | Check:<br>- Compressor operating time (parameter C10).<br>- Compressor operating time limit (par. C15).   |
| HF1                   | -----        | Warning.<br>Indoor fan operating time limit exceeded.<br>Disabled by default.   | -----                               | AUTO   | Check:<br>- Indoor fan operating time (parameter C15).<br>- Indoor fan operating time limit (par. C15).   |
| EPr                   | -----        | Warning.<br>Climatic 40 hardware error.   | -----                               | AUTO   | Call Technical Service.   |
| Epb                   | -----        | Warning.<br>Climatic 40 hardware error.   | Unit stops                          | AUTO   | Call Technical Service.   |
| ESP                   | ESP          | Expansion board error.  | Unit stops                          | AUTO   | Check:<br>- Green LED is on inside the board.<br>- J4-J9 connections (see electrical diagram).<br>Call Technical Service.   |
| EL1-2                 | -----        | Warning.<br>Condensing fan speed control hardware error.  | Outdoor fan at<br>maximum<br>speed. | AUTO   | - Check CFM board connections (see electrical diagram).<br>Call Technical Service.  |
| dF1-2                 | -----        | Warning.<br>Circuit 1-2 defrost ends due to maximum time (8 minutes).   | -----                               | AUTO   |   |

# ALARMS

## ALARMS/WARNINGS CODES


| DISP<br>CL40/<br>DC41 | DISP<br>DC40 | DESCRIPTION  | EFFECT   | RE           | ACTION   |
|-----------------------|--------------|--|--|--------------|--|
| A1                    | A12          | Antifreeze alarm.<br>- AIRCOOLAIR / COMPACTAIR / FLATAIR circuit 1 indoor piping temperature < 2°C. Reset AUTO.            | Close freecooling air dumper and stops circuit 1 compressors 1 | MAN/<br>AUTO | Check:<br>- Indoor unit air filter.<br>- Air damper working correctly.   |
| A2                    |              | Antifreeze alarm, circuit 2. (Aircoolair, Compactair, Flatnair).<br>Circuit 2 indoor piping temperature < 2°C. Reset AUTO. | Close freecooling air dumper and stops circuit 1 compressors 2 | AUTO         | Check:<br>- Indoor unit air filter.<br>- Air damper working correctly.   |
| Ht                    | -----        | High ambient temperature warning.<br>Ambient temperature > 40°C.   | -----  | AUTO         | Check location of ambient probe; avoid places where measurement of the ambient temperature by the internal may be altered. |
| Lt                    | -----        | Warning the low ambient temperature.<br>Disabled by default.   | -----  | -----        | Call Technical Service.  |
| AHt                   | -----        | Not used.  | -----  | -----        | Call Technical Service.  |
| HLt                   | -----        | Not used.  | -----  | -----        | Call Technical Service.  |
| ELS                   | -----        | Low power supply warning.<br>Power supply < 20.4V.   | -----  | AUTO         | Check power supply of controller = 24V (see electrical diagram).   |
| EHS                   | -----        | High power supply warning.<br>Power supply > 26.4V.  | Unit stops   | AUTO         | Check power supply of controller = 24V (see electrical diagram).   |
| Ed1                   | -----        | Not used.  | -----  | -----        | Call Technical Service.  |
| Ed2                   | -----        | Not used.  | -----  | -----        | Call Technical Service.  |
| SH1                   | -----        | Not used.  | -----  | -----        | Call Technical Service.  |
| SH2                   | -----        | Not used.  | -----  | -----        | Call Technical Service.  |
| nO1                   | -----        | Not used.  | -----  | -----        | Call Technical Service.  |
| nO2                   | -----        | Not used.  | -----  | -----        | Call Technical Service.  |
| LO1                   | -----        | Not used.  | -----  | -----        | Call Technical Service.  |
| LO2                   | -----        | Not used.  | -----  | -----        | Call Technical Service.  |
| HA1                   | -----        | Not used.  | -----  | -----        | Call Technical Service.  |
| HA2                   | -----        | Not used.  | -----  | -----        | Call Technical Service.  |
| EP1                   | -----        | Not used.  | -----  | -----        | Call Technical Service.  |
| EP2                   | -----        | Not used.  | -----  | -----        | Call Technical Service.  |
| ES1                   | -----        | Not used.  | -----  | -----        | Call Technical Service.  |
| ES2                   | -----        | Not used.  | -----  | -----        | Call Technical Service.  |
| EU1                   | -----        | Not used.  | -----  | -----        | Call Technical Service.  |
| EU3                   | -----        | Not used.  | -----  | -----        | Call Technical Service.  |
| Eb1                   | -----        | Not used.  | -----  | -----        | Call Technical Service.  |
| Eb2                   | -----        | Not used.  | -----  | -----        | Call Technical Service.  |
| L                     | -----        | Not used.  | -----  | -----        | Call Technical Service.  |
| Ed1                   | -----        | Not used.  | -----  | -----        | Call Technical Service.  |
| Ed2                   | -----        | Not used.  | -----  | -----        | Call Technical Service.  |
| PH1                   | -----        | Not used.  | -----  | -----        | Call Technical Service.  |
| PH2                   | -----        | Not used.  | -----  | -----        | Call Technical Service.  |
| SUL                   | -----        | Not used.  | -----  | -----        | Call Technical Service.  |
| tEr                   | OcH          | Alarm, faulty communication between DC40 and Climatic 40. (AIRCOOLAIR/COMPACTAIR/FLATAIR)                                  | Unit stops   | AUTO         | - DC40 connections (see electrical diagrams).<br>Call Technical Service.   |
|                       | AcH          | Generic alarm.<br>Some active alarms on Climatic 40.   | -----  | -----        | Check Climatic 40 alarm code and act by accordingly.   |
|                       | Ahu          | Not used.  | -----  | -----        | Call Technical Service.  |
|                       | AtE          | DC40 internal probe alarm.<br>Faulty internal probe.   | -----  | -----        | Call Technical Service.  |
|                       | CEr          | DC40 setting error.  | -----  | -----        | Call Technical Service.  |
|                       | UEr          | DC40 hardware error.   | -----  | -----        | Call Technical Service.  |

## ALARMS

### ALARM LOG

The Climatic 40 has a log where significant events that stop (alarms) or limit (warnings) the operation of the unit are saved. In order to enter the Alarm Log menu, proceed as explained in chapter 3 *MENU* in the paragraph *PARAMETERS EDITING MENU*, entering the password 44 instead of 22.

Up to 25 events can be saved, highlighting in order: event code, start hours, start minutes, start day, start month, end hours, end minutes, end day, end month.

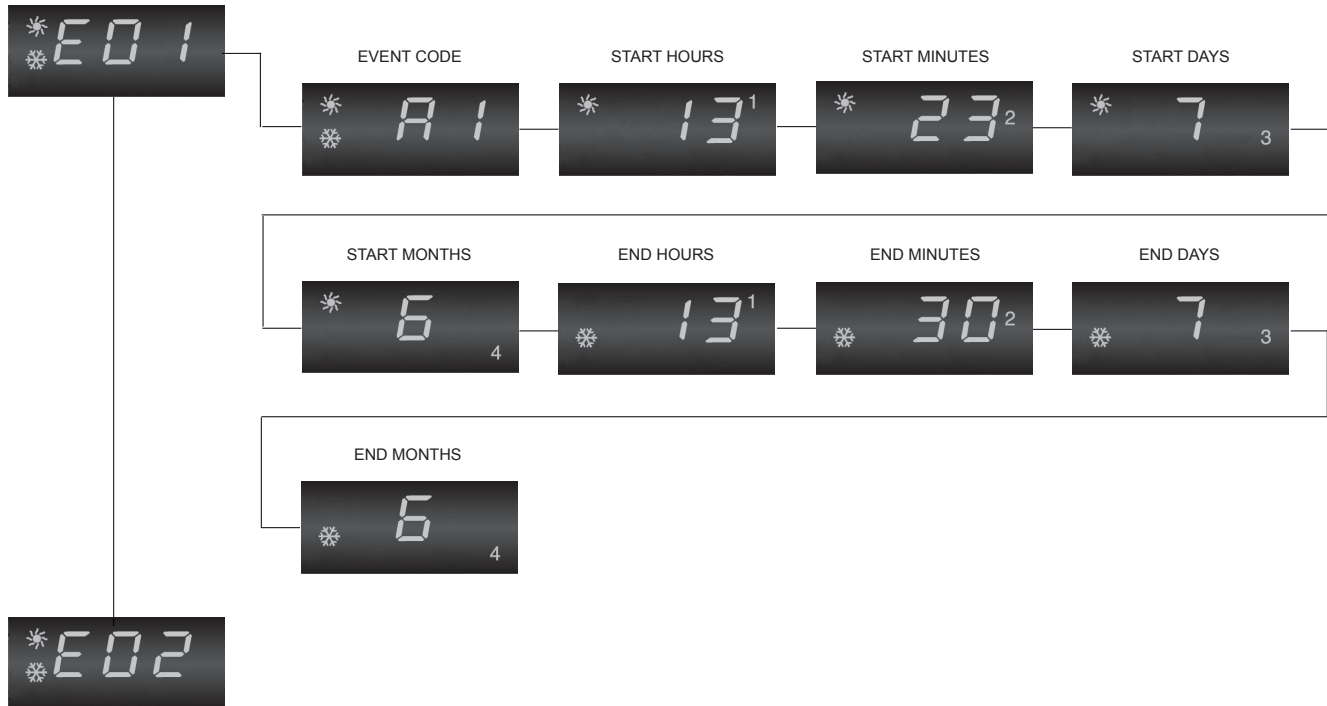

#### WARNING

The alarm log is active and operative only if the clock board is fitted.  
If there are no alarms saved, "noH" is displayed.

---

NOTES





[www.lennox europe.com](http://www.lennox europe.com)

**BELGIUM, LUXEMBOURG**  
[www.lennoxbelgium.com](http://www.lennoxbelgium.com)

**CZECH REPUBLIC**  
[www.lennox.cz](http://www.lennox.cz)

**FRANCE**  
[www.lennoxfrance.com](http://www.lennoxfrance.com)

**GERMANY**  
[www.lennoxdeutschland.com](http://www.lennoxdeutschland.com)

**GREAT BRITAIN**  
[www.lennoxuk.com](http://www.lennoxuk.com)

**NETHERLANDS**  
[www.lennoxnederland.com](http://www.lennoxnederland.com)

**POLAND**  
[www.lennoxpolska.com](http://www.lennoxpolska.com)

**PORTUGAL**  
[www.lennoxportugal.com](http://www.lennoxportugal.com)

**RUSSIA**  
[www.lennoxrussia.com](http://www.lennoxrussia.com)

**SLOVAKIA**  
[www.lennoxdistribution.com](http://www.lennoxdistribution.com)

**SPAIN**  
[www.lennoxspain.com](http://www.lennoxspain.com)

**UKRAINE**  
[www.lennoxrussia.com](http://www.lennoxrussia.com)

**OTHER COUNTRIES**  
[www.lennoxdistribution.com](http://www.lennoxdistribution.com)

Due to Lennox's ongoing commitment to quality, the Specifications, Ratings and Dimensions are subject to change without notice and without incurring liability.

Improper installation, adjustment, alteration, service or maintenance can cause property damage or personal injury.

Installation and service must be performed by a qualified installer and servicing agency.

