
Installation Manual Electric Three- Way Valve Pipe 201680490991

1. Parts Introduction

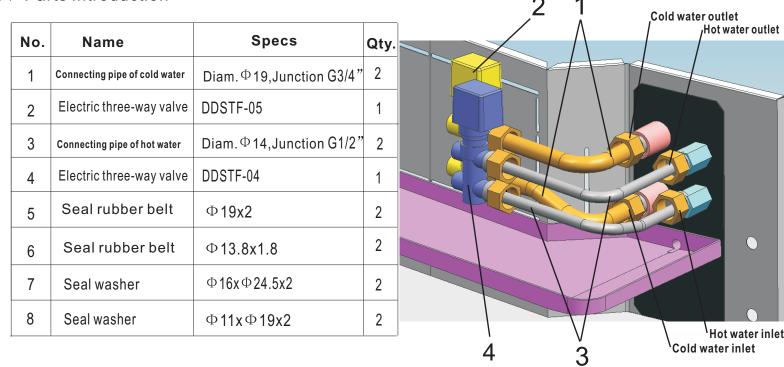

2. .Installation requirement:

- (1). Refer to the figure of size and install location for installation. To avoid the damage to screw thread of evaporator, do not overexertion, when screwing.
- (2). For avoid non-screw up or damage of screw thread, two spanners must be used simultaneously, when install or remove junction.
- (3). Except for four terminals of pipe sealed by seal washers, other screw threads must be wrapped by seal rubber belt.
- (4). Ensure all interfaces not water leakage, when finished pipes and junctions connection.
- (5). Please see enclosed Electric Three-way Valve Installation Manual for other installation procedures of the electric three-way valve.

