



- ⊕ -L1-N Mains voltage
- Watch! Phase sensitive
- 1-3 Lockout input
- 4-5 Boiler enable
- 6-7 Direct hot water sensor
- 8-9 External influence 0-5V
- 10-11 Scm bus
- 12-13 PWM pump

Thermostat see option 05S3000E02
 or DHW sensor

- *1 By connection remove jumper.
- *2 Optional, for order see parts list.
- *3 Along with option weather compensated regulation.

A	01-12-2003 RL	Wiring diagram Serie R30 type 35 - 45		DAT. 18-11-2003	B3045E02	Page 1 - 2
B	12-07-2004 RL			GET. RL.		
C	24-11-2004 RL			GEC. EH.		
D	13-01-2005 RL					

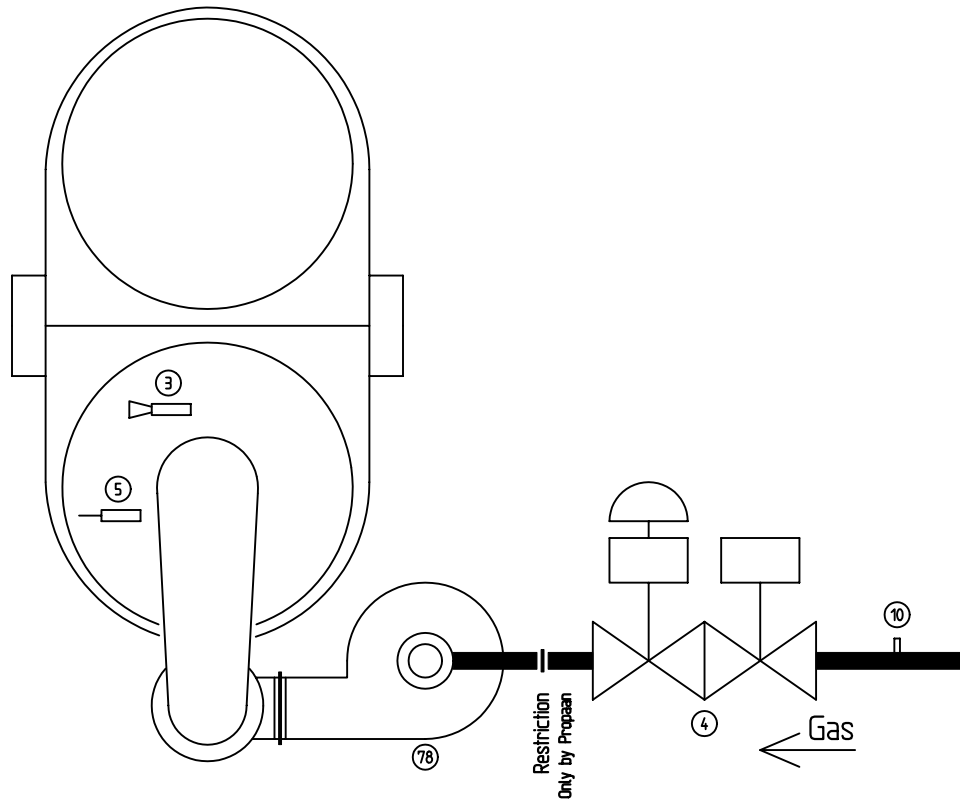

A	01-12-2003 R.L.	Gas train Serie R30 type 35 - 45	 Rendamax	DAT. 18-11-2003	B3045E02	Page 2 - 2							
B	12-07-2004 R.L.			GET. R.L.									
C	24-11-2004 R.L.			GEC. R.L.									
D	13-01-2005 R.L.												
				A	B	C	D						