

## Assembly

*For best results the extractor fan should be fitted as high on the wall as possible, or to suit individual requirements. The fan can also be mounted in the ducting system.*

1. Select a suitable position for the fan and cut a hole in the wall.  
(110 mm for IF 100, 135 mm for IF 120 and 160 mm for IF 150).
2. Allow a minimum of 250 mm extra length cable.

## Electrical connections

Switch off mains supply before making any electrical connections.

*The extractor fan must be installed by authorized personnel only. All wiring must be fixed and be preceded by an all-pole breaker with a contact gap of at least 3 mm. The fans are double insulated and do not require an earth.*

## Maintenance

The ball bearings in the motor are permanently greased in a way that it does not need special attention.

Do not use detergents or chemical products. Simply wipe the fan clean with a dry cloth or soft brush.

## Wiring diagram

IF 100, IF 120, IF 150

