


Air-Conditioners INDOOR UNIT

PEFY-P-VML-E PEFY-P-VMS-E PDFY-P-VM-E 

PEFY-P-VMM-E PEFY-P-VMR-E-L/R PFFY-P-VLRM(M)-E

PEFY-P-VMH-E PLFY-P-VLMD-E PFFY-P-VLEM-E

OPERATION MANUAL

For safe and correct use, please read this operation manual thoroughly before operating the air-conditioner unit.

BEDIENUNGSHANDBUCH

Zum sicheren und einwandfreien Gebrauch der Klimaanlage dieses Bedienungshandbuch vor Inbetriebnahme gründlich durchlesen.

MANUEL D'UTILISATION

Pour une utilisation correcte sans risques, veuillez lire le manuel d'utilisation en entier avant de vous servir du climatiseur.

MANUAL DE INSTRUCCIONES

Lea este manual de instrucciones hasta el final antes de poner en marcha la unidad de aire acondicionado para garantizar un uso seguro y correcto.

ISTRUZIONI DI FUNZIONAMENTO

Leggere attentamente questi istruzioni di funzionamento prima di avviare l'unità, per un uso corretto e sicuro della stessa.

BEDIENINGSHANDLEIDING

Voor een veilig en juist gebruik moet u deze bedieningshandleiding grondig doorlezen voordat u de airconditioner gebruikt.

MANUAL DE OPERAÇÃO

Para segurança e utilização correctas, leia atentamente o manual de operação antes de pôr a funcionar a unidade de ar condicionado.

ΕΓΧΕΙΡΙΔΙΟ ΟΔΗΓΙΩΝ ΧΡΗΣΕΩΣ

Για ασφάλεια και σωστή χρήση, παρακαλείστε διαβάσετε προσεχτικά αυτό το εγχειρίδιο χρήσεως πριν θέσετε σε λειτουργία τη μονάδα κλιματισμού.

РУКОВОДСТВО ПО ЭКСПЛУАТАЦИИ

Для обеспечения правильного и безопасного использования следует ознакомиться с инструкциями, указанными в данном руководстве по эксплуатации, тщательным образом до того, как приступить к использованию кондиционера.

İŞLETME ELKİTABI

Emniyetli ve doğru biçimde nasıl kullanılacağını öğrenmek için lütfen klima cihazını işletmeden önce bu elkitabını dikkatle okuyunuz.

操作手册

为了确保安全和正确使用，请在使用空调器之前仔细阅读本操作手册。

NÁVOD K OBSLUZE

Přečtěte si důkladně tento návod k obsluze před použitím klimatizační jednotky. Budete ji pak moci využívat bezpečně a správně.

NÁVOD NA POUŽITIE

Skôr, než začnete používať klimatizačnú jednotku, prečítajte si dôkladne návod na použitie, aby ste jednotku používali bezpečne a správne.

HASZNÁLATI KÉZIKÖNYV

A megfelelő és biztonságos használat érdekében, kérjük, hogy figyelmesen olvassa el a használati kézikönyvben leírtakat a légkondicionáló berendezés üzembe helyezése előtt.

INSTRUKCJA OBSŁUGI

Przed rozpoczęciem użytkowania klimatyzatora dokładnie przeczytaj niniejszą instrukcję, w celu uzyskania informacji na temat bezpiecznego i prawidłowego korzystania z urządzenia.

UPORABNIŠKI PRIROČNIK

Za varno in pravilno uporabo pred uporabo klimatske naprave pazljivo preberite ta uporabniški priročnik.

GB

D

F

E

I

NL

P

GR

RU

TR

#

CZ

SV


HG

PO

SL

GB Remote controller-Button
D Fernbedienungs-Taste
F Touche Commande à distance

E Controlador remoto-Botón
I Bottone dell'unità del comando a distanza
NL Knop afstandbediening
P Botão do controlo remoto

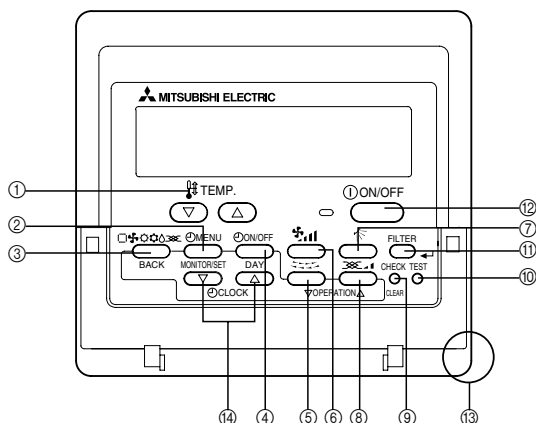

- | | |
|--|-------------------------|
| ① [Set Temperature] Button | ③ [Mode] Button |
| ② [TIMER MENU] Button | ④ [BACK] Button |
| ④ [TIMER ON/OFF] Button | ⑤ [Louver] Button |
| [SET DAY] Button | ⑦ [Vane Control] Button |
| ⑥ [Fan Speed] Button | |
| ⑧ [Ventilation] Button | |
| [OPERATION] Button | |
| ⑨ [CHECK/CLEAR] Button | ⑩ [TEST RUN] Button |
| ⑪ [FILTER] Button | ⑫ [ON/OFF] Button |
| [–] Button | |
| ⑬ Position of built-in room temperature sensor | ⑭ [Set Time] Button |

- Never expose the remote controller to direct sunlight. Doing so can result in the erroneous measurement of room temperature.
- Never place any obstacle around the lower right-hand section of the remote controller. Doing so can result in the erroneous measurement of room temperature.

- | | |
|--|-------------------------------------|
| ① [Temperatureinstellung]-Taste | ③ [Modus]-Taste |
| ② [TIMER MENU]-Taste | ④ [BACK]-Taste |
| ④ [TIMER ON/OFF]-Taste | ⑤ [Luftklappe]-Taste |
| [SET DAY]-Taste | ⑦ [Richtungsklappensteuerung]-Taste |
| ⑥ [Gebläsegeschwindigkeit]-Taste | |
| ⑧ [Lüftung]-Taste | |
| [OPERATION]-Taste | |
| ⑨ [CHECK/CLEAR]-Taste | ⑩ [TEST RUN]-Taste |
| ⑪ [FILTER]-Taste | ⑫ [ON/OFF]-Taste |
| [–]-Taste | |
| ⑬ Position des eingebauten Raumtemperatursensors | |
| ⑭ Zeiteinstell-Tasten | |

- Die Fernbedienung nicht direkter Sonneneinstrahlung aussetzen. Die Raumtemperatur wird sonst nicht korrekt gemessen.
- Den rechten unteren Teil der Fernbedienung nicht blockieren. Die Raumtemperatur wird sonst nicht korrekt gemessen.

- | | |
|--|----------------------------------|
| ① Touche [Réglage de la température] | ③ Touche [Mode] |
| ② Touche [TIMER MENU] | Touche [BACK] |
| ④ Touche [TIMER ON/OFF] | ⑤ Touche [Louvre] |
| Touche [SET DAY] | Touche [OPERATION] |
| ⑥ Touche [Vitesse du ventilateur] | ⑦ Touche [Commande des ailettes] |
| ⑧ Touche [Ventilation] | |
| Touche [OPERATION] | |
| ⑨ Touche [CHECK/CLEAR] | ⑩ Touche [TEST RUN] |
| ⑪ Touche [FILTER] | ⑫ Touche [ON/OFF] |
| Touche [–] | |
| ⑬ Position du capteur de température de la pièce intégré | |
| ⑭ Touche de [réglage de l'heure] | |

- Ne jamais laisser la commande à distance en plein soleil sinon les données de température ambiante risquent d'être erronées.
- Ne jamais placer d'obstacle devant la partie inférieure droite de la commande à distance sinon la lecture des températures ne sera pas correcte.

- | | |
|------------------------------------|--------------------------------------|
| ① Botón [Ajuste de la temperatura] | ③ Botón [Modo] |
| ② Botón [TIMER MENU] | Botón [BACK] |
| ④ Botón [TIMER ON/OFF] | ⑤ Botón [Rejilla] |
| Botón [SET DAY] | Botón [OPERATION] |
| ⑥ Botón [Velocidad de ventilador] | ⑦ Botón [Control de los deflectores] |
| ⑧ Botón [Ventilación] | |
| Botón [OPERATION] | |
| ⑨ Botón [CHECK/CLEAR] | ⑩ Botón [TEST RUN] |
| ⑪ Botón [FILTER] | ⑫ Botón [ON/OFF] |
| Botón [–] | |

- ⑬ Posición del sensor de temperatura ambiente incorporado
⑭ Botón [Ajuste de la hora]

- Nunca exponga el mando a distancia a la luz directa del sol. Si lo hace, se producirá una lectura errónea de la temperatura de la habitación.
- Nunca ponga ningún obstáculo alrededor de la sección inferior derecha del mando a distancia. Si lo hace, se producirá una lectura errónea de la temperatura de la habitación.

- | | |
|--|------------------------------|
| ① Pulsante [Impostazione temperatura] | ③ Pulsante [Modalità] |
| ② Pulsante [TIMER MENU] | Pulsante [BACK] |
| ④ Pulsante [TIMER ON/OFF] | ⑤ Pulsante [Deflettore] |
| Pulsante [SET DAY] | Pulsante [OPERATION] |
| ⑥ Pulsante [Velocità di ventilazione] | ⑦ Pulsante [Comando lamelle] |
| ⑧ Pulsante [Ventilazione] | |
| Pulsante [OPERATION] | |
| ⑨ Pulsante [CHECK/CLEAR] | ⑩ Pulsante [TEST RUN] |
| ⑪ Pulsante [FILTER] | ⑫ Pulsante [ON/OFF] |
| Pulsante [–] | |
| ⑬ Posizione del sensore temperatura ambiente incorporato | |
| ⑭ Pulsante [Imposta ora] | |

- Non esporre mai il comando a distanza alla luce diretta del sole, in quanto questo può alterare la corretta rilevazione della temperatura ambiente.
- Non porre alcun ostacolo attorno alla sezione inferiore destra del comando a distanza, in quanto questo può alterare la corretta rilevazione della temperatura ambiente.

- | | |
|---|---------------------------------|
| ① [Temperatuur instellen]-knop | ③ [Modus]-knop |
| ② [TIMER MENU]-knop | [BACK]-knop |
| ④ [TIMER ON/OFF]-knop | ⑤ [Jaloezie]-knop |
| [SET DAY]-knop | [OPERATION]-knop |
| ⑥ [Ventilatorsnelheid]-knop | ⑦ [Ventilatorblad regelen]-knop |
| ⑧ [Ventilatie]-knop | |
| [OPERATION]-knop | |
| ⑨ [CHECK/CLEAR]-knop | ⑩ [TEST RUN]-knop |
| ⑪ [FILTER]-knop | ⑫ [ON/OFF]-knop |
| [–]-knop | |
| ⑬ Positie van ingebouwde kamertemperatuursensor | |
| ⑭ [Tijd instellen]-knop | |


- Laat de afstandsbediening nooit in direct zonlicht liggen. Als u dit toch doet kan het zijn dat de kamertemperatuur onjuist gemeten wordt.
- Zet of hang nooit iets in de buurt van het gedeelte rechtsonder op de afstandsbediening. Als u dit toch doet kan het zijn dat de kamertemperatuur onjuist gemeten wordt.

- | | |
|---|----------------------------------|
| ① Botão [Ajustar Temperatura] | ③ Botão [Modo] |
| ② Botão [TIMER MENU] | Botão [BACK] |
| ④ Botão [TIMER ON/OFF] | ⑤ Botão [Aleta] |
| Botão [SET DAY] | Botão [OPERATION] |
| ⑥ Botão [Velocidade do Ventilador] | ⑦ Botão [Controlo de Defletores] |
| ⑧ Botão [Ventilação] | |
| Botão [OPERATION] | |
| ⑨ Botão [CHECK/CLEAR] | ⑩ Botão [TEST RUN] |
| ⑪ Botão [FILTER] | ⑫ Botão [ON/OFF] |
| Botão [–] | |
| ⑬ Posição do sensor da temperatura ambiente incorporado | |
| ⑭ Botão [Ajustar Tempo] | |

- Nunca exponha o controlo remoto à luz directa do sol, porque pode dar-lhe valores de temperatura da peça anormais.
- Nunca coloque nenhum obstáculo em volta da secção inferior direita do controlo remoto, pois isso pode dar-lhe valores de temperatura da peça anormais.

(GB) Remote controller-Display
 (D) Fernbedienung-Anzeige
 (F) Affichage Commande à distance

(E) Controlador remoto-Indicador
 (I) Display dell'unità del comando a distanza
 (NL) Display afstandbediening
 (P) Visualização do controlo remoto

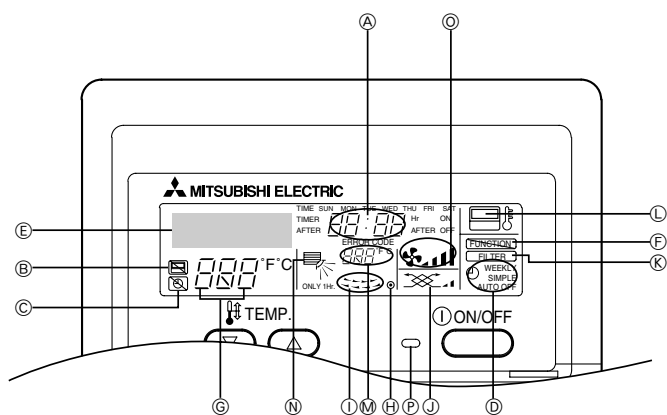

- (A) Current time/Timer time
 (B) Centralized control indicator
 (C) Timer OFF indicator
 (D) Timer mode indicator
 (E) Operation mode display: COOL, DRY, AUTO, FAN, HEAT
 (F) Function mode indicator
 (H) Power indicator
 (J) Ventilation
 (L) Sensor position
 (N) Vane setting
 (P) Operation lamp
 (G) Preset temperature
 (I) Louver
 (K) Filter sign
 (M) Room temperature
 (O) Fan speed

- (A) Aktuelle Uhrzeit/Timer-Zeit
 (B) Anzeige für Zentralsteuerung
 (C) Timer-OFF-Anzeige
 (D) Anzeige des Timer-Modus
 (E) Betriebsartenanzeige: Kühlen, Trocknen, AUTO, Lüfter, Heizen
 (F) Anzeige des Funktionsmodus
 (H) Netzanzeige
 (J) Ventilation
 (L) Sensorposition
 (N) Flügeleinrichtung
 (P) Betriebsanzeige
 (G) Voreingestellte Temperatur
 (I) Luftklappe
 (K) Filtersymbol
 (M) Raumtemperatur
 (O) Ventilatorgeschwindigkeit

- (A) Heure réelle/heure de la minuterie
 (B) Témoin de commande à distance centralisée
 (C) Témoin de minuterie OFF
 (D) Témoin de mode de minuterie
 (E) Affichage du mode de fonctionnement: FROID, DESHU, AUTO, VENTILATION, CHAUD
 (F) Témoin de mode de fonctionnement
 (H) Témoin d'alimentation
 (J) Ventilation
 (L) Position du capteur
 (N) Réglage des ailettes
 (P) Témoin de fonctionnement
 (G) Température prédéfinie
 (I) Louvre
 (K) Signe du filtre
 (M) Température de la pièce
 (O) Vitesse du ventilateur

- (A) Hora actual/hora del temporizador
 (B) Indicador de control centralizado
 (C) Indicador de desconexión del temporizador
 (D) Indicador de modo del temporizador
 (E) Pantalla de modo de funcionamiento: FRÍO, DESHUMIDIFICACION, AUTOMÁTICO, VENTILACIÓN, CALOR
 (F) Indicador de modo de función
 (H) Indicador de encendido
 (J) Ventilación
 (L) Posición de sensor
 (N) Ajuste de deflectores
 (P) Lámpara de funcionamiento
 (G) Temperatura prefijada
 (I) Rejilla
 (K) Señalización de filtro
 (M) Temperatura de la habitación
 (O) Velocidad del ventilador



- (A) Ora corrente/Timer
 (B) Indicatore comando centralizzato
 (C) Indicatore Timer non attivato
 (D) Indicatore modalità Timer
 (E) Visualizzazione modalità di funzionamento: COOL, DRY, AUTO, VENTILAZIONE, HEAT
 (F) Indicatore modalità funzione
 (H) Indicatore alimentazione
 (J) Ventilazione
 (L) Posizione del sensore
 (N) Impostazione lamelle
 (P) Spia di funzionamento
 (G) Preimpostazione temperatura
 (I) Deflettore
 (K) Simbolo del filtro
 (M) Temperatura ambiente
 (O) Velocità di ventilazione

- (A) Huidige tijd/Timertijd
 (B) Indicatielampje voor centraal regelen
 (C) Indicatielampje timer UIT
 (D) Indicatielampje timermodus
 (E) Werkingsstand: COOL, DRY, AUTO, FAN, HEAT
 (F) Indicatielampje functiemodus
 (H) Voedingsindicatielampje
 (J) Ventilatie
 (L) Plaats van sensor
 (N) Instelling ventilatorblad
 (P) Bedrijfslamp
 (G) Vooraf ingestelde temperatuur
 (I) Jaloezie
 (K) Filterteken
 (M) Kamertemperatuur
 (O) Ventilatorsnelheid



- (A) Hora actual/Hora do temporizador
 (B) Indicador de controlo centralizado
 (C) Indicador de temporizador OFF
 (D) Indicador de modo do temporizador
 (E) Visor do modo de funcionamento: COOL, DRY, AUTO, FAN, HEAT
 (F) Indicador do modo de funcionamento
 (H) Indicador de corrente
 (J) Ventilação
 (L) Posição do sensor
 (N) Regulação da palheta
 (P) Lâmpada de funcionamento
 (G) Temperatura predefinida
 (I) Aba
 (K) Sinal do filtro
 (M) Temperatura ambiente
 (O) Velocidade da ventoinha

[Fig. A]


<PLFY-P20~100VLMD-E>

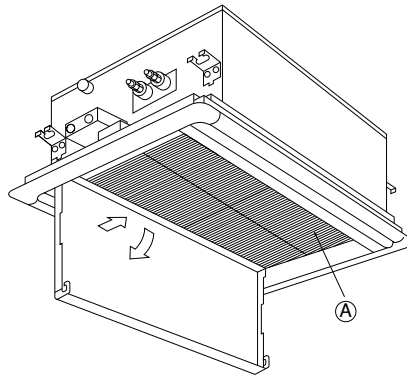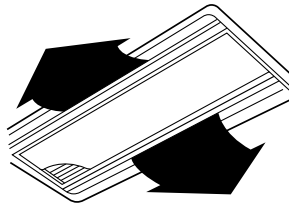


<PLFY-P125VLMD-E>

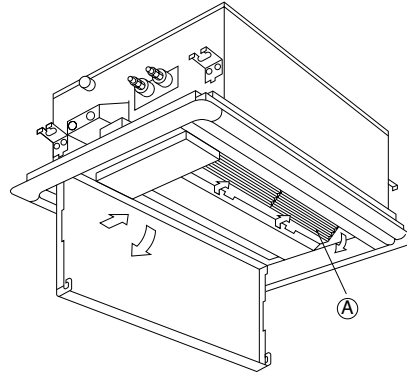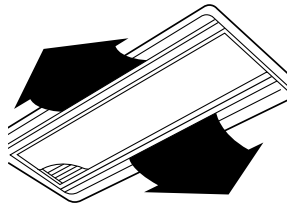



<PDFY-P-VM-E>

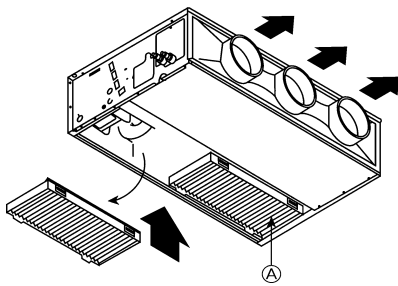

<PEFY-P-VML-E>

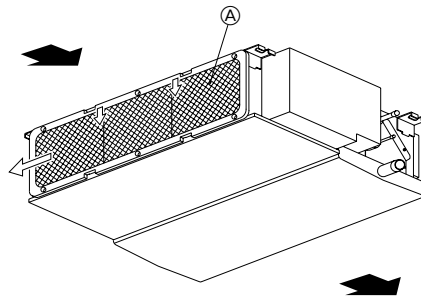

<PEFY-P-VMM-E>

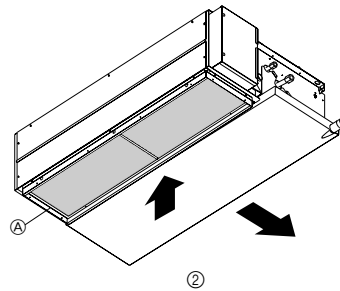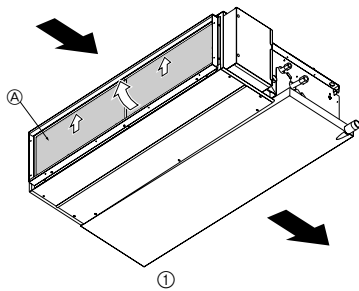

①: In case of rear inlet
 Bei Einlass von hinten
 En cas d'entrée arrière
 En el caso de unidad interior trasera
 In caso di ingresso dell'aria dalla parte posteriore
 Bij een achterinlaat
 No caso de unidade interior traseira
 Σε περίπτωση πίσω εισαγωγής
 При воздухозаборнике сзади
 Arka giriş durumunda
 使用后侧出风口时
 V prípade zadního prívodu
 V prípade zadného prívodu
 Hátsó beszívás esetén
 Wlot z tyłu
 V primeru vstopne odprtine zadaj


②: In case of bottom inlet
 Bei Einlass von unten
 En cas d'entrée sur le dessous
 En el caso de unidad interior inferior
 In caso di ingresso dell'aria dalla parte inferiore
 Bij een onderinlaat
 No caso de unidade interior inferior
 Σε περίπτωση κάτω εισαγωγής
 При воздухозаборнике внизу
 Alt giriş durumunda
 使用底部出风口时
 V prípade spodního prívodu
 V prípade spodného prívodu
 Alsó beszívás esetén
 Wlot od spodu
 V primeru vstopne odprtine spodaj

Ⓐ: Filter
 Filter
 Filtre
 Filtro
 Filtro
 Filter
 Filtro
 Φίλτρο
 Фильтр
 Filtre
 滤网
 Filtr
 Filter
 Szűrő
 Filtr
 Filter


➔: Air Flow
 Luftstrom
 Flux d'air
 Flujo de aire
 Flusso d'aria
 Luchtstroom
 Fluxo de Ar
 Ροή αέρα
 Воздушный поток
 Hava Akımı
 气流
 Proudění vzduchu
 Prúd vzduchu
 Levegőáramlás
 Strumień powietrza
 Tok zraka

[Fig. A]


<PEFY-P-VMH-E>

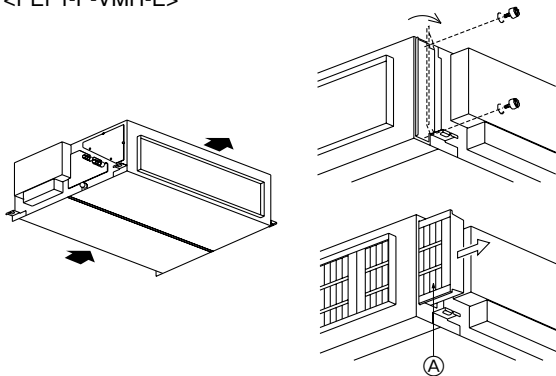


<PFFY-P-VLEM-E, VLRM(M)-E>

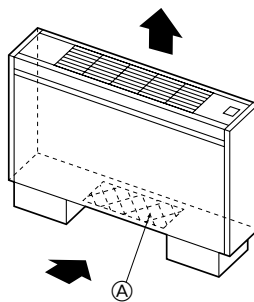

<PEFY-P-VMS-E>

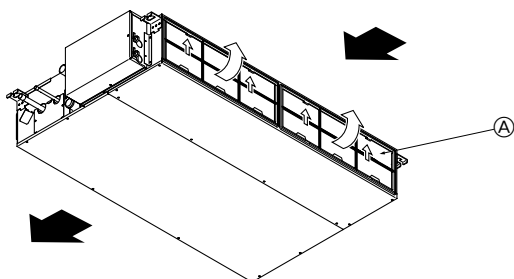

<PEFY-P-VMR-E-L/R>

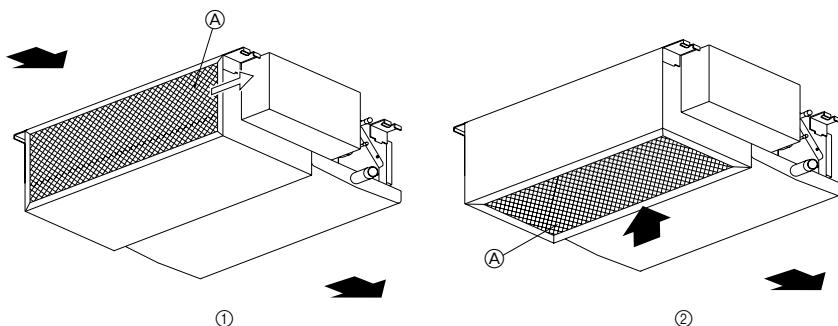

①: In case of rear inlet
 Bei Einlass von hinten
 En cas d'entrée arrière
 En el caso de unidad interior trasera
 In caso di ingresso dell'aria dalla parte posteriore
 Bij een achterinlaat
 No caso de unidade interior traseira
 Σε περίπτωση πίσω εισαγωγής
 При воздухозаборнике сзади
 Arka giriş durumunda
 使用后侧出风口时
 V prípade zadního prívodu
 V prípade zadného prívodu
 Hátsó beszívás esetén
 Wlot z tyłu
 V primeru vstopne odprtine zadaj

②: In case of bottom inlet
 Bei Einlass von unten
 En cas d'entrée sur le dessous
 En el caso de unidad interior inferior
 In caso di ingresso dell'aria dalla parte inferiore
 Bij een onderinlaat
 No caso de unidade interior inferior
 Σε περίπτωση κάτω εισαγωγής
 При воздухозаборнике внизу
 Alt giriş durumunda
 使用底部出风口时
 V prípade spodného prívodu
 V prípade spodného prívodu
 Alsó beszívás esetén
 Wlot od spodu
 V primeru vstopne odprtine spodaj

Ⓐ: Filter
 Filtre
 Filtro
 Filtro
 Filtro
 Filtre
 Filtro
 Φίλτρο
 Фильтр
 Filtre
 滤网
 Filtr
 Filtre
 Szűrő
 Filtr
 Filter

➔: Air Flow
 Luftstrom
 Flux d'air
 Flujo de aire
 Flusso d'aria
 Luchtstroom
 Fluxo de Ar
 Ροή αέρα
 Воздушный поток
 Hava Akımı
 气流
 Proudění vzduchu
 Prúd vzduchu
 Levegőáramlás
 Strumień powietrza
 Tok zraka


Contents


| | | | |
|---|----|---|----|
| 1. Safety precautions | 10 | 3.4. Fan speed adjustment | 12 |
| 1.1. Installation | 10 | 3.5. Adjustment of up/down airflow direction | 12 |
| 1.2. During operation | 10 | 3.6. Ventilation | 13 |
| 1.3. Disposing of the unit | 11 | 3.7. Others | 13 |
| 2. Names and functions of various parts | 11 | 4. The smart way to use | 13 |
| 3. How to operate | 11 | 5. Caring for the machine | 13 |
| 3.1. ON/OFF | 11 | 6. Troubleshooting | 14 |
| 3.2. Selecting operation | 11 | 7. Installation, transferring works, and checking | 15 |
| 3.3. Room temperature adjustment | 12 | 8. Specifications | 15 |

1. Safety precautions






- ▶ Before operating the unit, make sure you read all the “Safety precautions”.
- ▶ “Safety precautions” lists important points about safety. Please be sure to follow them.

Symbols used in the text

 **Warning:**
Describes precautions that should be observed to avoid the risk of injury or death to the user.

 **Caution:**
Describes precautions that should be observed to prevent damage to the unit.


Symbols used in the illustrations

-  : Indicates an action that must be avoided.
-  : Indicates that important instructions must be followed.
-  : Indicates a part which must be grounded.
-  : Indicates that caution should be taken with rotating parts. (This symbol is displayed on the main unit label.) <Color: yellow>
-  : Beware of electric shock. (This symbol is displayed on the main unit label.) <Color: yellow>


 **Warning:**
Carefully read the labels affixed to the main unit.


1.1. Installation

- ▶ After you have read this manual, keep it and the Installation Manual in a safe place for easy reference whenever a question arises. If the unit is going to be operated by another person, make sure that this manual is given to him or her.

-  **Warning:**
- The unit should not be installed by the user. Ask the dealer or an authorized company to install the unit. If the unit is installed improperly, water leakage, electric shock or fire may result.
 - Use only accessories authorized by Mitsubishi Electric and ask your dealer or an authorized company to install them. If accessories are installed improperly, water leakage, electric shock or fire may result.
 - The Installation Manual details the suggested installation method. Any structural alteration necessary for installation must comply with local building code requirements.
 - Never repair the unit or transfer it to another site by yourself. If repair is performed improperly, water leakage, electric shock or fire may result. If you need to have the unit repaired or moved, consult your dealer.
 - Keep the electric parts away from water (washing water) etc.
 - It might result in electric shock, catching fire or smoke.
Note1: When washing the Heat Exchanger and Drain Pan, ensure the Control Box, Motor and LEV remain dry, using a water proof covering.
Note2: Never drain the washing water for the Drain Pan and the Heat Exchanger using the Drain Pump. Drain separately.
 - The appliance is not intended for use by young children or infirm persons without supervision.
 - Young children should be supervised to ensure that they do not play with the appliance.
 - Do not use a leak detection additive.

1) Outdoor unit

-  **Warning:**
- The outdoor unit must be installed on a stable, level surface, in a place where there is no accumulation of snow, leaves or rubbish.
 - Do not stand on, or place any items on the unit. You may fall down or the item may fall, causing injury.

 **Caution:**
The outdoor unit should be installed in a location where air and noise emitted by the unit will not disturb the neighbours.


2) Indoor unit

 **Warning:**
The indoor unit should be securely installed. If the unit is loosely mounted, it may fall, causing injury.


3) Remote controller

 **Warning:**
The remote controller should be installed in such a way that children cannot play with it.


4) Drain hose

 **Caution:**
Make sure that the drain hose is installed so that drainage can go ahead smoothly. Incorrect installation may result in water leakage, causing damage to furniture.


5) Power line, fuse or circuit breaker


-  **Warning:**
- Make sure that the unit is powered by a dedicated supply. Other appliances connected to the same supply could cause an overload.
 - Make sure that there is a main power switch.
 - Be sure to adhere to the unit's voltage and fuse or circuit breaker ratings. Never use a piece of wire or a fuse with a higher rating than the one specified.

6) Grounding

-  **Caution:**
- The unit must be properly grounded. Never connect the grounding wire to a gas pipe, water pipe, lightning conductor or telephone grounding wire. If the unit is not grounded properly, electric shock may result.
 - Check frequently that the ground wire from the outdoor unit is properly connected to both the unit's ground terminal and the grounding electrode.

1.2. During operation

-  **Caution:**
- Do not use any sharp object to push the buttons, as this may damage the remote controller.
 - Do not twist or tug on the remote controller cord as this may damage the remote controller and cause malfunction.
 - Never remove the upper case of the remote controller. It is dangerous to remove the upper case of the remote controller and touch the printed circuit boards inside. Doing so can result in fire and failure.
 - Never wipe the remote controller with benzene, thinner, chemical rags, etc. Doing so can result in discoloration and failure. To remove heavy stains, soak a cloth in neutral detergent mixed with water, wring it out thoroughly, wipe the stains off, and wipe again with a dry cloth.
 - Never block or cover the indoor or outdoor unit's intakes or outlets. Tall items of furniture underneath the indoor unit, or bulky items such as large boxes placed close to the outdoor unit will reduce the unit's efficiency.

-  **Warning:**
- Do not splash water over the unit and do not touch the unit with wet hands. An electric shock may result.
 - Do not spray combustible gas close to the unit. Fire may result.
 - Do not place a gas heater or any other open-flame appliance where it will be exposed to the air discharged from the unit. Incomplete combustion may result.

⚠ Warning:

- Do not remove the front panel or the fan guard from the outdoor unit when it is running. You could be injured if you touch rotating, hot or high-voltage parts.
- Never insert fingers, sticks etc. into the intakes or outlets, otherwise injury may result, since the fan inside the unit rotates at high speed. Exercise particular care when children are present.
- If you detect odd smells, stop using the unit, turn off the power switch and consult your dealer. Otherwise, a breakdown, electric shock or fire may result.
- When you notice exceptionally abnormal noise or vibration, stop operation, turn off the power switch, and contact your dealer.
- Do not over-cool. The most suitable inside temperature is one that is within 5 °C of the outside temperature.
- Do not leave handicapped people or infants sitting or standing in the path of the airflow from the air-conditioner. This could cause health problems.

⚠ Caution:

- Do not direct the airflow at plants or caged pets.
- Ventilate the room frequently. If the unit is operated continuously in a closed room for a long period of time, the air will become stale.

In case of failure

⚠ Warning:


- Never remodel the air conditioner. Consult your dealer for any repair or service. Improper repair work can result in water leakage, electric shock, fire, etc.
- If the remote controller displays an error indication, the air conditioner does not run, or there is any abnormality, stop operation and contact

2. Names and functions of various parts

Attachment and detachment of filter

[Fig. A] (P.8, P.9)

3. How to operate

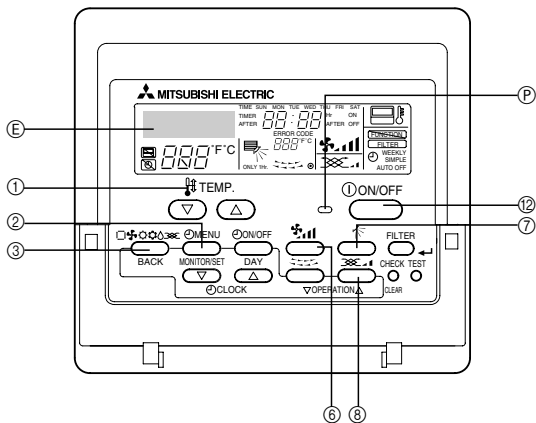

Before starting operation

- Start running after the "PLEASE WAIT" display has disappeared. The "PLEASE WAIT" display briefly appears on the room temperature display (max. 3 minutes) when the power is turned on and after a power failure. This does not indicate any failure of the air-conditioner.
- The choice of indoor unit operation mode is limited by the operation status of the outdoor unit to which a given indoor unit is connected. If an outdoor unit and some of the indoor units that are connected to the outdoor units are already operating in the cooling mode, for example, only the cooling mode is available for the rest of the units in the same group. If a different mode is requested, the symbol that corresponds to the requested mode will blink, notifying the user that the mode is currently unavailable. The same is true for the dry and heating mode. This restriction, however, does not apply to the models that support a simultaneous cooling/heating function.
- The outdoor units stop when all the indoor units connected to the counterpart outdoor units stop.
- During heating operation, even if the indoor unit is set to operation while the outdoor unit is in defrosting operation, operation starts after the defrosting operation of the outdoor unit has ended.

your dealer. Leaving the unit as it is under such conditions can result in fire or failure.

- If the power breaker is frequently activated, get in touch with your dealer. Leaving it as it is can result in fire or failure.
- If the refrigeration gas blows out or leaks, stop the operation of the air conditioner, thoroughly ventilate the room, and contact your dealer. Leaving the unit as it is can result in accidents due to oxygen deficiency.

When the air conditioner is not to be used for a long time

- If the air conditioner is not to be used for a long time due to a seasonal change, etc., run it for 4 - 5 hours with the air blowing until the inside is completely dry. Failing to do so can result in the growth of unhygienic, unhealthy mold in scattered areas throughout the room.
- When it is not to be used for an extended time, keep the [power supply] turned OFF.
If the power supply is kept on, several watts or several tens of watts will be wasted. Also, the accumulation of dust, etc., can result in fire.
- Keep the power switched ON for more than 12 hours before starting operation. Do not turn the power supply OFF during seasons of heavy use. Doing so can result in failure.

1.3. Disposing of the unit

⚠ Warning:

When you need to dispose of the unit, consult your dealer. If pipes are removed incorrectly, refrigerant (fluorocarbon gas) may blow out and come into contact with your skin, causing injury. Releasing refrigerant into the atmosphere also damages the environment.

⚠ Caution:

- In removing the filter, precautions must be taken to protect your eyes from dust. Also, if you have to climb up on a stool to do the job, be careful not to fall.
- Turn off the power supply when the filter is changed.

3.1. ON/OFF

Start an operation

1. Press the ⑫ [ON/OFF] button
Ⓟ Operation lamp lights up and operation starts.

Stop an operation

1. Press the ⑫ [ON/OFF] button again
Operation lamp goes off and operation stops.
- Once the Buttons have been set, pressing of the [ON/OFF] Button only can repeat the same operation thereafter.
 - During operation, the operation lamp above the [ON/OFF] button lights up.

⚠ Caution:

Even if the [ON/OFF] Button is pressed immediately after the operation is once stopped, operation is not restarted for about 3 minutes. This function protects the machine. It automatically starts operation after the lapse of approximately 3 minutes.

3.2. Selecting operation

When selecting operation

1. Press the ③ [Mode (BACK)] Button
Consecutive press of the selecting operation Button switches the operation over to ⑤ [COOL], "△ DRY", "FAN", ("□ AUTO"), and ("HEAT"). For the contents of operation, check the display.

For cooling

Press the ③ [Mode (BACK)] Button and bring up the "COOL" display.

For dry

Press the ③ [Mode (BACK)] Button and bring up the "△ DRY" display.

- The indoor fan turns to the low-speed operation, disabling the change of fan speed.
- Dry operation cannot be carried out at room temperature of less than 18 °C.

For fan

Press the [Mode (BACK)] Button and bring up the “ FAN” display.

- The fan operation functions to circulate the air in the room.
- The temperature of the room cannot be set by fan operation.

⚠ Caution:

Never expose your body directly to cool air for a long time. Excessive exposure to cool air is bad for your health, and should therefore be avoided.

Dry operation

The dry is a microcomputer-controlled dehumidifying operation which controls excessive air-cooling according to the room temperature of your choice. (Not usable for heating.)

1. Until reaching room temperature of your choice
The compressor and indoor fan function is linked motion according to the change of the room temperature and automatically repeat ON/OFF.
2. When reaching room temperature of your choice
Both the compressor and indoor fan stop.
When stop continues for 10 minutes, the compressor and indoor fan are operated for 3 minutes to keep the humidity low.

For heating

Press the [Mode (BACK)] Button to bring up the “ HEAT” display.

Regarding displays during heating operation “DEFROST”

Displayed only during the defrosting operation.

“STAND BY”

Displayed from the start of heating operation until the moment warm air blows out.

⚠ Caution:

- When the air-conditioner is used together with burners, thoroughly ventilate the area. Insufficient ventilation can result in accidents due to oxygen deficiency.
- Never place a burner at a place where it is exposed to the airflow from the air-conditioner.
Doing so can result in imperfect combustion of the burner.
- The microcomputer functions in the following cases: *
• Air does not blow out when heating starts. *
- To prevent any cool air from escaping, the indoor fan is gradually switched in sequence from faint airflow/weak airflow/set airflow according to the temperature rise of the blown out air. Wait a moment until the airflow comes out naturally.
- The fan is not moving at the set speed. *
- In some models, the system switches over to faint airflow when the temperature of the room reaches the set temperature. In other cases, it stops to prevent any cool air from escaping during the defrosting operation.
- Air flows out even if operation is stopped. *
- Approximately 1 minute after the stop of operation, the indoor fan sometimes rotates to eliminate extra heat generated by the electric heater, etc. The fan speed comes to low or high.
* Except PEFY-P-NMHU-E-F.

3.3. Room temperature adjustment

To change room temperature

Press the [Set Temperature] Button and set the room temperature of your choice.

Pressing or once changes the setting by 1 °C.

If the pressing is continued, the setting continues to change by 1 °C.

- Indoor temperature can be set within the following range.
Cooling/dry :19 °C - 30 °C
Heating :17 °C - 28 °C

- Temperature cannot be set for the fan mode.

* The range of room temperature display is 8 °C - 39 °C. Outside this range, the display flashes either 8 °C - 39 °C to inform you if the room temperature is lower or higher than the displayed temperature.

3.4. Fan speed adjustment

To change fan speed

Every time you press the [Fan Speed] button once, it switches from the low-speed to high-speed settings successively.

In the electronics dry operation, the indoor fan automatically turns to low-speed operation. Switching of fan speed is impossible. (Only the display on the remote controller changes.)

* Every time the fan speed adjustment button is pressed once, the fan speed is changed.

[PEFY-P200-250VMH]

Fan speed : 1 stage

* Switching of fan speed is impossible.

[PEFY-P40~140VMH, PFFY-P-VLEM, PFFY-P-VLRM]
[PDFY-P100-125VM, PEFY-P100~140-VMM series]

Fan speed : 2 stages

Display: (Low)→(High)

[PLFY-P125VLMD, PDFY-P20~80VM series]

Fan speed : 4 stages

Display: (Low)→(Mid2)→(Mid1)→(High)

[PLFY-P20~100VLMD, PEFY-P-VML, PEFY-P20~80-VMM, PEFY-P-VMR series]

Fan speed : 3 stages

Display: (Low)→(Mid)→(High)

[PEFY-P-VMS, PFFY-P-VLRMM-E series]

Fan speed : 3 stages

Display: (Low)→(Mid)→(High)→(AUTO*)

* This setting can be adjusted only with MA remote controller.

3.5. Adjustment of up/down airflow direction

To change the up/down airflow direction

Every time the [Vane Control] button is pressed, the direction of the airflow changes.

[PLFY-P20~100VLMD]

| Display | | | | | | |
|-----------------|--------------|---|-----------------------|---|---|---------|
| Mode | Fan speed | | | | | |
| Heating/Fan | High/Mid/Low | ① | ② | ③ | ④ | ⑤ |
| Cooling | High | | | | | |
| | Mid/Low | ① | ② | ③ | ④ | ⑤ |
| Dry | Fixed | ① | ② | ③ | ④ | ⑤ |
| Initial setting | | - | Cooling Dry Fan | - | - | Heating |

[Other Models]

| Display | | | | | | |
|-----------------|------------------------|---|-----------------------|---|---|---------|
| Mode | Fan speed | | | | | |
| Heating/Fan | High/Mid1/ Mid2/Low | ① | ② | ③ | ④ | ⑤ |
| Cooling | High | | | | | |
| | Mid1/Mid2/Low | ① | ② | ③ | ④ | ⑤ *1 |
| Dry | Fixed | | | | | |
| Initial setting | | - | Cooling Dry Fan | - | - | Heating |

*1 • It automatically returns to the “② 0°” when one hour passes.


- The “1 Hr.” is displayed on the remote controller (It is disappeared when one hour passes.)

- This function is not available according to the models.

- There may be a discrepancy between the vane position on the display and the actual vane position in the following conditions:
 1. When “DEFROST” or “STAND BY” is displayed on the controller
 2. At the beginning of heating operation
 3. Thermo-OFF in the heating mode

PEFY-P-VLEM



While pulling the blowout grill out toward you, raise the rear, remove it, change the direction, and set it in place.

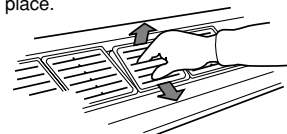

⚠ Caution:

Avoid putting your hand into the air outlet of the indoor unit any more than necessary. If you get your hands caught in the metal parts when adjusting the airflow-direction-adjustment board and blowout grill, or nip them in the autovane, there is a risk of injury and failure.

3.6. Ventilation

- The ventilation unit (OA processing unit or LOSSNAY) automatically goes into operation when the indoor unit that is interlocked with it goes into operation.
- If the  [Ventilation] button is pressed while the indoor unit is stopped, only the ventilator goes into operation.
- Press the  [Ventilation] button to change the fan speed.
- Depending on the models, the indoor unit fan goes into operation while the unit is in the ventilation mode.

3.7. Others



: Displayed when control is executed by a separately sold centralized control unit, etc.

STAND BY
DEFROST

: Displayed from the start of heating operation until the moment warm air blows out.

CHECK

: This displays indication when some abnormality occurs in the unit.


NOT AVAILABLE

: When a Button is pressed for any function which the indoor unit cannot perform, this display flashes concurrently with the display of that function.



: In the system in which the [Sensor] display is indicated as the "remote controller", room temperature measurement is performed by the room temperature sensor built into the remote controller.

FILTER

: Displayed when it is time to clean the filter. Press the  [FILTER (-)] Button twice, then the display is disappeared.

4. The smart way to use

Even minimal steps to care for your air conditioner can help make its use far more effective in terms of air-conditioning effect, electricity charges, etc.

Set the right room temperature

- In cooling operation, a temperature difference of about 5 °C between indoors and outdoors is optimum.
- If the room temperature is raised by 1 °C during air-cooling operation, about 10 % electric power can be saved.
- Excessive cooling is bad for health. It also results in the waste of electric power.

Clean the filter thoroughly

- If the screen of the air filter becomes clogged, the airflow and air-conditioning effect can be significantly reduced. Further, if the condition is left unattended, failure can result. It is particularly important to clean the filter at the beginning of the cooling and heating seasons. (When profuse dust and dirt have accumulated, clean the filter thoroughly.)

5. Caring for the machine

Always have filter maintenance performed by a service person.
Before care-taking, turn the power supply OFF.

Caution:

- Before you start cleaning, stop operation and turn OFF the power supply. Remember that the fan is rotating inside at high speed, posing a serious risk of injury.
- Indoor units are equipped with filters to remove the dust of sucked-in air. Clean the filters using the methods shown in the following sketches. (The standard filter should normally be cleaned once a week, and the long-life filter at the beginning of each season.)
- The life of the filter depends on where the unit is installed and how it is operated.

Prevent intrusion of heat during air-cooling

- To prevent the intrusion of heat during cooling operation, provide a curtain or a blind on the window to block out direct sunlight. Also, do not open the entrance or exit except in cases of dire necessity.

Carry out ventilation sometimes

- Since the air periodically gets dirty in a room that is kept closed for a long time, ventilation is sometimes necessary. When gas appliances are used together with the air conditioner, special precautions must be taken. If the "LOSSNAY" ventilation unit developed by our company is used, you can perform ventilation with less waste. For details on this unit, consult with your dealer.

How to clean

- Clear dust away lightly or clean it up with a vacuum cleaner. In the case of severe staining, wash the filter in lukewarm water mixed with dissolved neutral detergent or water, and then rinse off the detergent completely. After washing, dry it and fix it back into place.

Caution:

- Do not dry the filter by exposing it to direct sunlight or warming it using fire, etc. Doing so can result in the deformation of the filter.
- Washing it in hot water (more than 50 °C) can also result in deformation.

Caution:

Never pour water or flammable sprays onto the air conditioner. Cleaning using these methods can result in the failure of the air conditioner, electric shock, or fire.

6. Troubleshooting

Before you ask for repair service, check the following points:

| State of Machine | Remote Controller | Cause | Troubleshooting |
|---|---|--|---|
| It does not run. | “●” display is not lit up. No display appears even when the [ON/OFF] button is pressed. | Power failure | Press the [ON/OFF] button after power restoration. |
| | | The power supply is turned OFF. | Turn the power supply ON. |
| | | The fuse in the power supply is gone. | Replace fuse. |
| | | The earth leakage breaker is gone. | Put in the earth leakage breaker. |
| Air flows out but it does not cool enough or heat enough. | The liquid crystal display shows that it is in the state of operation. | Improper temperature adjustment | After checking the set temperature and inlet temperature on the liquid crystal display, refer to [Room temperature adjustment], and operate the adjustment button. |
| | | The filter is filled with dust and dirt. | Clean up the filter. (Refer to [Caring for the machine].) |
| | | There are some obstacles at the air inlet and outlet of the indoor and outdoor units. | Remove. |
| | | Windows and doors are open. | Close. |
| Cool air or warm air does not come out. | The liquid crystal display shows that it is in operation. | The restart-preventing circuit is in operation for 3 minutes. | Wait for a while. (To protect the compressor, a 3-minute restart-preventing circuit is built into the indoor unit. Therefore, there are occasions sometimes when the compressor does not start running immediately. There are cases when it does not run for as long as 3 minutes.) |
| | | Indoor unit operation was restarted during the heating and defrosting operation. | Wait for a while. (Heating operation starts after ending defrosting operation.) |
| It runs briefly, but soon stops. | The “CHECK” and check code flashes on the liquid crystal display. | There are some obstacles at the air inlet and outlet of the indoor and outdoor units. | Rerun after removal |
| | | The filter is filled with dust and dirt. | Rerun after cleaning the filter. (Refer to [Caring for the machine].) |
| The sound of the exhaust and rotation of the motor can still be heard after stop of running. | All lights are out except the powered display of “●”. | When other indoor units are engaged in cooling operation, the machine stops after running a drain-up mechanism for 3 minutes when air-cooling operation is stopped. | Wait for 3 minutes. |
| The sound of the exhaust and the rotation of the motor can be heard intermittently after stop of running. | All lights are out except the powered display of “●”. | When other indoor units are engaged in cooling operation, drained water is brought in. If the drain water is collected, the drain-up mechanism initiates a draining operation. | It soon stops. (If the noise occurs more than 2-3 times in an hour, ask for repair service.) |
| Warm air comes out intermittently when the thermostat is OFF or during fan operation. | The liquid crystal display shows that it is in the state of operation. | When other indoor units are engaged in heating operation, the control valves are opened and closed from time to time to maintain the stability of the system. | It soon stops. (If the room temperature rises uncomfortably high in a small room, stop operation.) |

- If operation stops due to a power failure, the [restart-preventing circuit at power failure] operates and disables unit operation even after power restoration. In this case, press the [ON/OFF] button again and start operation.

If malfunctions persist after you have checked the above, turn the power supply OFF and contact your dealer with information about the product name, the nature of the malfunction, etc. If the display of “[CHECK]” and (4 digit) check code flashes, tell the dealer contents of the display (check code). Never attempt to repair by yourself.

The following symptoms are not air conditioner failures:

- The air blown out from the air conditioner can sometimes give off odors. This is due to cigarette smoke contained in the air of the room, the smell of cosmetics, the walls, furniture, etc., absorbed in the air conditioner.
- A hissing noise can be heard immediately after the air conditioner is started or stopped. This is the sound of the refrigeration flowing inside the air conditioner. This is normal.
- The air conditioner sometimes snaps or clicks at the beginning or end of cooling/heating operation. This is the sound of friction on the front panel and other sections due to expansion and contraction caused by temperature change. This is normal.

7. Installation, transferring works, and checking

Regarding place for installation

Consult with your dealer for details on installation and transferring the installation.

Caution:

Never install the air conditioner where there is a risk of leakage of flammable gas.

If gas leaks and accumulates around the unit, fire can result.

Never install the air conditioner at the following place:

- where there is a lot of machine oil
- near the ocean and beach areas where there is salt air.
- where humidity is high
- where there are hot springs nearby
- where there is sulphurous gas
- where there is a high-frequency processing machinery (a high-frequency welder, etc.)
- where acid solution is frequently used
- where special sprays are frequently used
- Install the indoor unit horizontally. Otherwise, water leakage can result.
- Take sufficient measures against noise when installing the air conditioners at hospitals or communication-related businesses.

If the air conditioner is used in any of the above-mentioned environments, frequent operational failure can be expected. It is advisable to avoid these types of installation sites.

For further details, consult with your dealer.

Regarding electrical work

Caution:

- The electrical work must be undertaken by a person who is qualified as an electrical engineer according to the [technical standard respecting electrical installation], [internal wiring rules], and the installation instruction manual with the absolute use of exclusive circuits. The use of other products with the power source can result in burnt-out breakers and fuses.

- Never connect the grounding wire to a gas pipe, water pipe, arrester, or telephone grounding wire. For details, consult with your dealer.
- In some types of installation sites, the installation of an earth leakage breaker is mandatory. For details, consult with your dealer.

Regarding transfer of installation

- When removing and reinstalling the air conditioner when you enlarge your home, remodel, or move, consult with your dealer in advance to ascertain the cost of the professional engineering work required for transferring the installation.

Caution:

When moving or reinstalling the air conditioner, consult with your dealer. Defective installation can result in electric shock, fire, etc.

Regarding noise

- In installing work, choose a place that can fully bear the weight of the air conditioner, and where noise and vibration can be reduced.
- Choose a place where cool or warm air and noise from the outdoor air outlet of the air conditioner does not inconvenience the neighbors.
- If any alien object is placed near the outdoor air outlet of the air conditioner, decreased performance and increased noise can result. Avoid placing any obstacles adjacent to the air outlet.
- If the air conditioner produces any abnormal sound, consult with your dealer.

Maintenance and inspection

- If the air conditioner is used throughout several seasons, the insides can get dirty, reducing the performance.

Depending upon the conditions of usage, foul odors can be generated and drainage can deteriorate due to dust and dirt, etc.

8. Specifications

PLFY-P-VLMD-E series

| Item | Model | P20VLMD-E | P25VLMD-E | P32VLMD-E | P40VLMD-E | P50VLMD-E | P63VLMD-E |
|---|---------------------|-------------------------------|-------------|-------------|--------------|---------------|----------------|
| Power source | | ~220-240V 50Hz/~220-230V 60Hz | | | | | |
| Cooling capacity*1 / Heating capacity*1 | kW | 2.2/2.5 | 2.8/3.2 | 3.6/4.0 | 4.5/5.0 | 5.6/6.3 | 7.1/8.0 |
| Dimension*2 | Height | mm | 290 (20) | 290 (20) | 290 (20) | 290 (20) | 290 (20) |
| | Width | mm | 776 (1,080) | 776 (1,080) | 776 (1,080) | 776 (1,080) | 946 (1,250) |
| | Depth | mm | 634 (710) | 634 (710) | 634 (710) | 634 (710) | 634 (710) |
| Net weight | kg | 23 (6.5) | 23 (6.5) | 24 (6.5) | 24 (6.5) | 27 (7.5) | 28 (7.5) |
| Fan Airflow rate (Low-Middle-High) | m ³ /min | 6.5-8.0-9.5 | 6.5-8.0-9.5 | 6.5-8.0-9.5 | 7.0-8.5-10.5 | 9.0-11.0-12.5 | 10.0-13.0-15.5 |
| Noise level (Low-Middle-High)*3 | dB(A) | 220V, 240V | 27-30-33 | 27-30-33 | 27-30-33 | 29-33-36 | 31-34-37 |
| | | 230V | 28-31-34 | 28-31-34 | 28-31-34 | 30-34-37 | 32-35-38 |
| Filter | | Long life filter | | | | | |

| Item | Model | P80VLMD-E | P100VLMD-E | P125VLMD-E |
|---|---------------------|-------------------------------|----------------|---|
| Power source | | ~220-240V 50Hz/~220-230V 60Hz | | |
| Cooling capacity*1 / Heating capacity*1 | kW | 9.0/10.0 | 11.2/12.5 | 14.0/16.0 |
| Dimension*2 | Height | mm | 290 (20) | 290 (20) |
| | Width | mm | 1,446 (1,750) | 1,446 (1,750) |
| | Depth | mm | 634 (710) | 634 (710) |
| Net weight | kg | 44 (12.5) | 47 (12.5) | 56 (13) |
| Fan Airflow rate (Low-Middle-High) | m ³ /min | 15.5-18.5-22.0 | 17.5-21.0-25.0 | 24.0-27.0-30.0-33.0 (Low-Middle2-Middle1-High) |
| Noise level (Low-Middle-High)*3 | dB(A) | 220V, 240V | 33-36-39 | 36-39-42 |
| | | 230V | 34-37-40 | 37-41-43 |
| Filter | | Long life filter | | |

Notes: * Operation temperature of indoor unit.

Cooling mode: 15 °C WB - 24 °C WB

Heating mode: 15 °C DB - 27 °C DB

*1 Cooling/Heating capacity indicates the maximum value at operation under the following condition.

Cooling: Indoor: 27 °C DB/19 °C WB

Outdoor: 35 °C DB

Heating: Indoor: 20 °C DB

Outdoor: 7 °C DB/6 °C WB

*2 The figure in () indicates panel's.

*3 The operating noise is the data that was obtained in an anechoic room.

PEFY-P-VML-E series

| Item | Model | P20VML-E | P25VML-E | P32VML-E |
|---|--------------------------------|---------------------------------|-------------|-------------|
| Power source | | ~220-240V 50/60Hz | | |
| Cooling capacity*1 / Heating capacity*1 | kW | 2.2/2.5 | 2.8/3.2 | 3.6/4.0 |
| Dimension | Height / Width / Depth | mm 225/720/550 | 225/720/550 | 225/720/550 |
| Net weight | kg | 18 | 18 | 18 |
| Fan | Airflow rate (Low-Middle-High) | m ³ /min 4.8/5.8/7.9 | 4.8/5.8/7.9 | 4.8/5.8/9.5 |
| | External static pressure | Pa 5 | 5 | 5 |
| Noise level (Low-Middle-High)*5 | dB(A) | 25/29/36 | 25/29/36 | 25/29/40 |
| Filter | | Standard filter | | |

PEFY-P-VMM-E series

| Item | Model | P20VMM-E | P25VMM-E | P32VMM-E | P40VMM-E | P50VMM-E |
|---|--------------------------------|---------------------------------|-------------|--------------|----------------|----------------|
| Power source | | ~220-240V 50Hz | | | | |
| Cooling capacity*1 / Heating capacity*1 | kW | 2.2/2.5 | 2.8/3.2 | 3.6/4.0 | 4.5/5.0 | 5.6/6.3 |
| Dimension | Height / Width / Depth | mm 295/815/700 | 295/815/700 | 295/815/700 | 295/935/700 | 295/935/700 |
| Net weight | kg | 27 | 27 | 27 | 33 | 33 |
| Fan | Airflow rate (Low-Middle-High) | m ³ /min 6.0-7.2-8.5 | 6.0-7.2-8.5 | 7.5-9.0-10.5 | 10.0-12.0-14.0 | 12.0-14.5-17.0 |
| | External static pressure*2 | Pa 30/50/100 | 30/50/100 | 30/50/100 | 30/50/100 | 30/50/100 |
| Noise level (Low-Middle-High)*5 | dB(A) | 27-30-32 | 27-30-32 | 28-32-35 | 31-34-37 | 31-35-38 |
| Filter | | Standard filter | | | | |

| Item | Model | P63VMM-E | P71VMM-E | P80VMM-E |
|---|--------------------------------|------------------------------------|----------------|----------------|
| Power source | | ~220-240V 50Hz | | |
| Cooling capacity*1 / Heating capacity*1 | kW | 7.1/8.0 | 8.0/9.0 | 9.0/10.0 |
| Dimension | Height / Width / Depth | mm 295/1,175/700 | 295/1,175/700 | 295/1,175/700 |
| Net weight | kg | 42 | 42 | 42 |
| Fan | Airflow rate (Low-Middle-High) | m ³ /min 13.5-16.2-19.0 | 14.5-18.0-21.0 | 14.5-18.0-21.0 |
| | External static pressure*2 | Pa 30/50/100 | 30/50/100 | 30/50/100 |
| Noise level (Low-Middle-High)*5 | dB(A) | 31-35-38 | 32-36-39 | 32-36-39 |
| Filter | | Standard filter | | |

| Item | Model | P100VMM-E | P125VMM-E | P140VMM-E |
|---|----------------------------|-------------------------------|---------------|---------------|
| Power source | | ~220-240V 50Hz | | |
| Cooling capacity*1 / Heating capacity*1 | kW | 11.2/12.5 | 14.0/16.0 | 16.0/18.0 |
| Dimension | Height / Width / Depth | mm 325/1,415/740 | 325/1,415/740 | 325/1,715/740 |
| Net weight | kg | 62 | 65 | 70 |
| Fan | Airflow rate (Low-High) | m ³ /min 23.0-33.0 | 28.0-40.0 | 29.5-42.0 |
| | External static pressure*2 | Pa 50/130 | 50/130 | 50/130 |
| Noise level (Low-High)*5 | dB(A) | 40-44 | 42-45 | 42-45 |
| Filter | | Standard filter | | |

PEFY-P-VMH-E series

| Item | Model | P40VMH-E | P50VMH-E | P63VMH-E | P71VMH-E | P80VMH-E |
|---|----------------------------|---|---------------------------|---------------------------|---------------------------|---------------------------|
| Power source | | ~220-240V 50/60Hz | | | | |
| Cooling capacity*1 / Heating capacity*1 | kW | 4.5/5.0 | 5.6/6.3 | 7.1/8.0 | 8.0/9.0 | 9.0/10.0 |
| Dimension | Height / Width / Depth | mm 380/750/900 | 380/750/900 | 380/750/900 | 380/1,000/900 | 380/1,000/900 |
| Net weight | kg | 44 | 44 | 45 | 50 | 50 |
| Fan | Airflow rate (Low-High) | m ³ /min 10.0-14.0 | 10.0-14.0 | 13.5-19.0 | 15.5-22.0 | 18.0-25.0 |
| | External static pressure*3 | Pa 220 V 50/100/200 230, 240 V 100/150/200 | 50/100/200 100/150/200 | 50/100/200 100/150/200 | 50/100/200 100/150/200 | 50/100/200 100/150/200 |
| Noise level (Low-High)*5 | dB(A) 220 V | 27-34 | 27-34 | 32-38 | 32-39 | 35-41 |
| | 230, 240 V | 31-37 | 31-37 | 36-41 | 35-41 | 38-43 |
| Filter | | Long life filter (option) | | | | |

| Item | Model | P100VMH-E | P125VMH-E | P140VMH-E |
|---|----------------------------|---|---------------------------|---------------------------|
| Power source | | ~220-240V 50/60Hz | | |
| Cooling capacity*1 / Heating capacity*1 | kW | 11.2/12.5 | 14.0/16.0 | 16.0/18.0 |
| Dimension | Height / Width / Depth | mm 380/1,200/900 | 380/1,200/900 | 380/1,200/900 |
| Net weight | kg | 70 | 70 | 70 |
| Fan | Airflow rate (Low-High) | m ³ /min 26.5-38.0 | 26.5-38.0 | 28.0-40.0 |
| | External static pressure*3 | Pa 220 V 50/100/200 230, 240 V 100/150/200 | 50/100/200 100/150/200 | 50/100/200 100/150/200 |
| Noise level (Low-High)*5 | dB(A) 220 V | 34-42 | 34-42 | 34-42 |
| | 230, 240 V | 38-44 | 38-44 | 38-44 |
| Filter | | Long life filter (option) | | |

| Item | Model | P200VMH-E | P250VMH-E |
|---|----------------------------|--------------------------------------|--------------------|
| Power source | | 3N~380-415V 50/60Hz | |
| Cooling capacity*1 / Heating capacity*1 | kW | 22.4/25.0 | 28.0/31.5 |
| Dimension | Height / Width / Depth | mm 470/1,250/1,120 | 470/1,250/1,120 |
| Net weight | kg | 100 | 100 |
| Fan | Airflow rate | m ³ /min 58.0 | 72.0 |
| | External static pressure*4 | Pa 380V 110/220 400, 415V 130/260 | 110/220 130/260 |
| Noise level*5 | dB(A) 380V | 42 | 50 |
| | 400, 415V | 44 | 52 |
| Filter | | Long life filter (option) | |

Notes: * Operation temperature of indoor unit.

Cooling mode: 15 °C WB - 24 °C WB

Heating mode: 15 °C DB - 27 °C DB

*1 Cooling/Heating capacity indicates the maximum value at operation under the following condition.

Cooling: Indoor: 27 °C DB/19 °C WB

Outdoor: 35 °C DB

Heating: Indoor: 20 °C DB

Outdoor: 7 °C DB/6 °C WB

*2 The external static pressure is set to 50 Pa at factory shipment.

*3 The external static pressure is set to 100 Pa (at 220 V)/150 Pa (at 230, 240 V) at factory shipment.

*4 The external static pressure is set to 220 Pa (at 380 V)/260 Pa (at 400, 415 V) at factory shipment.

*5 The operating noise is the data that was obtained in an anechoic room.

PFFY-P-VLEM-E/PFFY-P-VLRM(M)-E series

| Item | Model | P20VLEM-E | P25VLEM-E | P32VLEM-E | P40VLEM-E | P50VLEM-E | P63VLEM-E |
|---------------------------------------|----------------------------|----------------------------------|---------------|---------------|---------------|---------------|---------------|
| Power source | | ~220-240V 50Hz / ~208V-230V 60Hz | | | | | |
| Cooling capacity*1/Heating capacity*1 | kW | 2.2/2.5 | 2.8/3.2 | 3.6/4.0 | 4.5/5.0 | 5.6/6.3 | 7.1/8.0 |
| Dimension | Height / Width / Depth | 630/1,050/220 | 630/1,050/220 | 630/1,170/220 | 630/1,170/220 | 630/1,410/220 | 630/1,410/220 |
| Net weight | kg | 23 | 23 | 25 | 26 | 30 | 32 |
| Fan | Airflow rate (Low-High) | 5.5-6.5 | 5.5-6.5 | 7.0-9.0 | 9.0-11.0 | 12.0-14.0 | 12.0-15.5 |
| | External static pressure*3 | | | | | | |
| Noise level (Low-High)*7 *8 | dB(A) | 34-40 | 34-40 | 35-40 | 38-43 | 38-43 | 40-46 |
| Filter | | Standard filter | | | | | |

| Item | Model | P20VLRM-E | P25VLRM-E | P32VLRM-E | P40VLRM-E | P50VLRM-E | P63VLRM-E |
|---------------------------------------|----------------------------|----------------------------------|-------------|---------------|---------------|---------------|---------------|
| Power source | | ~220-240V 50Hz / ~208V-230V 60Hz | | | | | |
| Cooling capacity*1/Heating capacity*1 | kW | 2.2/2.5 | 2.8/3.2 | 3.6/4.0 | 4.5/5.0 | 5.6/6.3 | 7.1/8.0 |
| Dimension | Height / Width / Depth | 639/886/220 | 639/886/220 | 639/1,006/220 | 639/1,006/220 | 639/1,246/220 | 639/1,246/220 |
| Net weight | kg | 18.5 | 18.5 | 20 | 21 | 25 | 27 |
| Fan | Airflow rate (Low-High) | 5.5-6.5 | 5.5-6.5 | 7.0-9.0 | 9.0-11.0 | 12.0-14.0 | 12.0-15.5 |
| | External static pressure*3 | | | | | | |
| Noise level (Low-High)*7 *8 | dB(A) | 34-40 | 34-40 | 35-40 | 38-43 | 38-43 | 40-46 |
| Filter | | Standard filter | | | | | |

| Item | Model | P20VLRMM-E | P25VLRMM-E | P32VLRMM-E | P40VLRMM-E | P50VLRMM-E | P63VLRMM-E |
|---------------------------------------|--------------------------------|-----------------------|-------------|---------------|---------------|----------------|----------------|
| Power source | | ~220-240V 50Hz / 60Hz | | | | | |
| Cooling capacity*1/Heating capacity*1 | kW | 2.2/2.5 | 2.8/3.2 | 3.6/4.0 | 4.5/5.0 | 5.6/6.3 | 7.1/8.0 |
| Dimension | Height / Width / Depth | 639/886/220 | 639/886/220 | 639/1,006/220 | 639/1,006/220 | 639/1,246/220 | 639/1,246/220 |
| Net weight | kg | 18.5 | 18.5 | 20 | 21 | 25 | 27 |
| Fan | Airflow rate (Low-Middle-High) | 4.5-5.5-6.5 | 4.5-5.5-6.5 | 6.5-7.5-9.0 | 8.0-9.5-10.0 | 10.0-12.0-14.0 | 11.0-13.0-15.5 |
| | External static pressure*3 | 20/40/60 | 20/40/60 | 20/40/60 | 20/40/60 | 20/40/60 | 20/40/60 |
| Noise level (Low-Middle-High)*3 *8 | dB(A) | 31-36-40 | 31-36-40 | 27-32-37 | 30-36-40 | 32-37-41 | 35-40-44 |
| Filter | | Standard filter | | | | | |

PDFY-P-VM-E series

| Item | Model | P20VM-E | P25VM-E | P32VM-E | P40VM-E | P50VM-E |
|---|--|-----------------------------|-----------------|-----------------|---------------------|---------------------|
| Power source | | ~220-240V 50Hz / ~220V 60Hz | | | | |
| Cooling capacity*1/Heating capacity*1 | kW | 2.2/2.5 | 2.8/3.2 | 3.6/4.0 | 4.5/5.0 | 5.6/6.3 |
| Dimension*2 | Height | 295 (58) | 295 (58) | 295 (58) | 295 (58) | 295 (58) |
| | Width | 710 (790) | 710 (790) | 710 (790) | 960 (1,040) | 960 (1,040) |
| | Depth | 735 (600) | 735 (600) | 735 (600) | 735 (600) | 735 (600) |
| Net weight | kg | 25.5 (5) | 25.5 (5) | 27 (5) | 32 (6) | 34 (6) |
| Fan | Airflow rate (Low-Middle2-Middle1-High) m³/min | 6.0-6.5-7.5-8.5 | 6.0-6.5-7.5-8.5 | 6.0-6.5-7.5-8.5 | 10.0-11.0-12.5-14.0 | 10.0-11.0-12.5-14.0 |
| | External static pressure*4 | 30/50/100 | 30/50/100 | 30/50/100 | 30/50/100 | 30/50/100 |
| Noise level (Low-Middle2-Middle1-High)*6 *8 | dB(A) | 28-30-33-36 | 28-30-33-36 | 28-30-33-36 | 34-36-37-39 | 34-36-37-39 |
| Filter | | Long life filter | | | | |

| Item | Model | P63VM-E | P71VM-E | P80VM-E | P100VM-E | P125VM-E |
|---|--|-----------------------------|---------------------|---------------------|---------------|---------------|
| Power source | | ~220-240V 50Hz / ~220V 60Hz | | | | |
| Cooling capacity*1/Heating capacity*1 | kW | 7.1/8.0 | 8.0/9.0 | 9.0/10.0 | 11.2/12.5 | 14.5/16.3 |
| Dimension*2 | Height | 295 (58) | 295 (58) | 295 (58) | 335 (58) | 335 (58) |
| | Width | 1,160 (1,240) | 1,160 (1,240) | 1,160 (1,240) | 1,510 (1,590) | 1,510 (1,590) |
| | Depth | 735 (600) | 735 (600) | 735 (600) | 775 (600) | 775 (600) |
| Net weight | kg | 39 (7) | 39 (7) | 39 (7) | 52 (8.5) | 52 (8.5) |
| Fan | Airflow rate (Low-Middle2-Middle1-High) m³/min | 12.5-14.0-16.0-18.0 | 13.5-15.5-17.5-19.5 | 14.5-16.5-18.5-21.0 | 19.5-28.0 | 24.0-34.0 |
| | External static pressure*4 | 30/50/100 | 30/50/100 | 30/50/100 | 50/100/130 | 50/100/130 |
| Noise level (Low-Middle2-Middle1-High)*6 *8 | dB(A) | 30-34-36-39 | 32-35-37-40 | 34-37-40-42 | 34-42 <37-44> | 40-45 <42-46> |
| Filter | | Long life filter | | | | |

PEFY-P-VMS-E series

| Item | Model | P20VMS-E | P25VMS-E | P32VMS-E | P40VMS-E | P50VMS-E | P63VMS-E |
|---------------------------------------|--------------------------------|-------------------|------------|------------|------------|------------|------------|
| Power source | | ~220-240V 50/60Hz | | | | | |
| Cooling capacity*1/Heating capacity*1 | kW | 2.2/2.5 | 2.8/3.2 | 3.6/4.0 | 4.5/5.0 | 5.6/6.3 | 7.1/8.0 |
| Dimension | Height | 200 | 200 | 200 | 200 | 200 | 200 |
| | Width | 900 | 900 | 900 | 900 | 900 | 1,100 |
| | Depth | 700 | 700 | 700 | 700 | 700 | 700 |
| Net weight | kg | 23 | 23 | 23 | 24 | 24 | 28 |
| Fan | Airflow rate (Low-Middle-High) | 6-7-8 | 6-7-8 | 7.5-8.5-10 | 8-9.5-11 | 9.5-11-13 | 12-14-16.5 |
| | External static pressure*5 | 5/15/35/50 | 5/15/35/50 | 5/15/35/50 | 5/15/35/50 | 5/15/35/50 | 5/15/35/50 |
| Noise level (Low-Middle-High)*5 *8 | dB(A) | 22-25-27 | 22-25-27 | 25-28-30 | 28-30-33 | 30-32-35 | 30-33-36 |
| Filter | | Standard filter | | | | | |

PEFY-P-VMR-E-L/R series

| Item | Model | P20VMR-E-L/R | P25VMR-E-L/R | P32VMR-E-L/R |
|---------------------------------------|--------------------------------|-------------------------------|--------------|--------------|
| Power source | | ~220-240V 50Hz/~220-230V 60Hz | | |
| Cooling capacity*1/Heating capacity*1 | kW | 2.2/2.5 | 2.8/3.2 | 3.6/4.0 |
| Dimension | Height / Width / Depth | 292/640/580 | 292/640/580 | 292/640/580 |
| Net weight | kg | 18 | 18 | 18 |
| Fan | Airflow rate (Low-Middle-High) | 4.8/5.8/7.9 | 4.8/5.8/7.9 | 4.8/5.8/9.3 |
| | External static pressure | 5 | 5 | 5 |
| Noise level (Low-Middle-High)*8 | dB(A) | 20/25/30 | 20/25/30 | 20/25/33 |
| | 230V | 21/26/32 | 21/26/32 | 21/26/35 |
| | 240V | 22/27/30 | 22/27/30 | 22/27/33 |
| Filter | | Standard filter | | |

GB

Notes: * Operation temperature of indoor unit.

Cooling mode: 15 °C WB - 24 °C WB

Heating mode: 15 °C DB - 27 °C DB

*1 Cooling/Heating capacity indicates the maximum value at operation under the following condition.

Cooling: Indoor: 27 °C DB/19 °C WB Outdoor: 35 °C DB

Heating: Indoor: 20 °C DB Outdoor: 7 °C DB/6 °C WB

*2 The figure in () indicates panel's.

*3 The external static pressure is set to 20 Pa at factory shipment.

*4 The external static pressure is set to 50 Pa at factory shipment.

*5 The external static pressure is set to 15 Pa at factory shipment.

*6 The figure in < > indicates noise level at 240 V/50 Hz.

*7 The figures represent a 240 V/50 Hz unit measured at a point which is 1 m away from the front of the unit and at a height of 1 m from the floor.

The noise is approximately 1 dB(A) less for a 230 V unit and approximately 2 dB(A) less for a 220 V unit. The noise is approximately 3 dB(A) less when the measurement point is 1.5 m away from the front of the unit and at a height of 1.5 m from the floor.

*8 The operating noise is the data that was obtained in an anechoic room.

This product is designed and intended for use in the residential, commercial and light-industrial environment.

The product at hand is based on the following EU regulations:

- Low Voltage Directive 73/23/EEC
- Electromagnetic Compatibility Directive 89/336/EEC

Please be sure to put the contact address/telephone number on this manual before handing it to the customer.