



Fasadium

Service & maintenance





Fasadium

1.0 Installation

1.1 Product description

Lindab's facade system Fasadium is an efficient system designed to handle low air pressures. Typical environments where Fasadium is used include, for example, schools, hospitals and offices. The Fasadium unit is placed at the building façade, preferably under a window sill.

1.2 Handling

The beam must be handled with care, ensuring that the beam does not sustain dents, scratches or bends during installation.

Always seek to lift the beam at multiple points.

- Do not lift in pipes
- Do not lift in edges
- Each beam is equipped with protective film to avoid any damage during transport and handling at building site. The film needs to be removed before commissioning the products.

1.3 Mounting instruction

- Please visit www.lindqst.com
 - Select Documentation Finder
 - Select "Fasadium"
 - Select "Mounting"

1.4 Air connection installation

The primary air supply should be connected with instructions from a ventilation specialist. Lindab's chilled beams can beneficially be used together with Lindab's Safe® duct systems.

1.5 Connection description water

Flow indication arrows are shown on the inlet and return pipes in order to assist the installer. If the beam has been ordered with integrated valves, a special direction of the flow must be upheld to ensure correct flow through the thermostatic valve. If the beam has been delivered without integrated valves, the flow can be reversed, depending on the location of the retrofitted valve. Please note the flow direction indicator on the valve to insure correct installation in relation to the desired flow.



Fasadium

1.5.1 Push-on fittings

- Please ensure that all pipes and fittings are undamaged, as even small dents and scratches potentially pose a risk of leakage in the system. Always remember to do a pressure test after assembly of the pipe work.
- Both flow and return pipe is covered by a plastic or rubber protection cover, which should be removed before installation.



After removing the protection cover, make sure that the pipe is intact and undamaged, especially at the pipe end. Crooked or in other ways imperfect pipe ends will result in leaks. Deburr the pipe on the inside and the outside, using a deburring tool before installation



- Mount a push-on fitting to the pipe. Make sure to press the fitting all the way onto the pipe. Consult the installation guide for the specific fitting for further details on proper installation.

Push-on fitting





Fasadium

Push-on valve



Notice! The connection pipes are internally soft-welded why it's not allowed to solder the beam to the pipes.

1.5.2 Compression fitting

- Please ensure that all pipes and fittings are undamaged, as even small dents and scratches potentially pose a risk of leakage in the system. Always remember to do a pressure test after assembly of the pipe work.
- While mounting a compression fitting, the pipe will be exposed to a big amount of force, creating a risk of crushing the pipe. To ensure that the pipe won't be crushed when mounting the compression fitting, a copper insert should be inserted into the pipe.
- Both flow and return pipe is covered by a plastic or rubber protection cover during transport, which must be removed before installation.



- After removing the protection cover, make sure that the pipe is intact and undamaged, especially at the pipe end. Crooked or in other ways imperfect pipe ends will result in leaks. Deburr the pipe on the inside and the outside, using a deburring tool before installation





Fasadium

- The copper insert should be placed inside the pipe on the beam. Always support the copper pipe coil when inserting the copper insert into position.



- Mount a compression coupling and/or a valve to the pipe. Don't stress the nut too much, since this may crush the pipe.



Notice! The connection pipes are internally soft-welded why it's not allowed to solder the beam to the pipes.

1.5.3 Flex hoses

Our flexible hoses can be used with both compression and Tectite fitting. We recommend using Tectite fittings, for easier and faster mounting.

- Please ensure that all pipes and fittings are undamaged, as even small dents and scratches potentially pose a risk of leakage in the system. Always remember to do a pressure test after assembly of the pipe work.
- Both flow and return pipe is covered by a plastic or rubber protection cover, which should be removed before installation.





Fasadium

After removing the protection cover, make sure that the pipe is intact and undamaged, especially at the pipe end. Crooked or in other ways imperfect pipe ends will result in leaks. Deburr the pipe on the inside and the outside, using a deburring tool before installation



- Mount a push-on fitting to the pipe. Make sure to press the fitting all the way onto the pipe. After mounting the push-on fitting, mount the flexible hose. Make sure that the flexible hose is pushed fully into the fitting. Consult the installation guide for the specific fitting for further details on proper installation.

Push-on fitting



Push-on valve




Notice! The connection pipes are internally soft-welded why it's not allowed to solder the beam to the pipes.



Fasadium

2.0 Commissioning

2.1 Product labeling

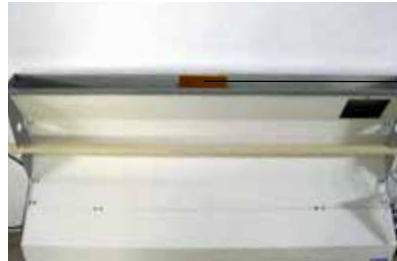

| | | | |
|------------------------|-----------|-------------|-----|
| Order: Ordernumber | | | |
| Pos: 10 | | | |
| Product | | 0,00 m | |
| Pressure: | Pa | Flow: | l/s |
| Project: Project | | | |
| Mark: Mark | | | |
| Nozzels: | 999 Plugs | Sign: _____ | |
| Product ID: 8 011-10-1 | | | |
| | | | |

Fig.1: Label location exterior (water connection)

On the label you'll find:

- Order: Order identification number.
- Pos: Order position.
- Product: Product configuration.
- Project: Project name.
- Mark: Marking noted on order.
- Nozzels: Number of nozzles.
- Plugs: Number of plugged nozzles.
- Product ID: Product number.
- Sign: To be signed when checked and commissioned on site.

2.2 Measure air pressure and calculating the airflow.

Before calculating the airflow, the static nozzle pressure must first be measured. The static nozzle pressure is the air pressure available at the nozzles.

2.2.1 Measure the static nozzle pressure.

- To measure the air pressure, a manometer, analog or digital (such as the Lindab PC410) will be needed.
- Insert the measuring tube into any of the nozzles.



- Read off the static nozzle pressure from the manometer



Fasadium

2.2.2 Calculating the airflow

- After measuring the static nozzle pressure, calculate the air flow per nozzle:

$$q = 0.0598 \cdot \sqrt{P}$$

q = air flow per nozzle

P = static nozzle pressure


- After finding the air flow per nozzle, find the needed number of open nozzles:

$$q_{tot} / q = n_{open}$$

q_{tot} = total air flow

n_{open} = open nozzles

- Alternatively, read off the needed number of nozzles in the diagram below.

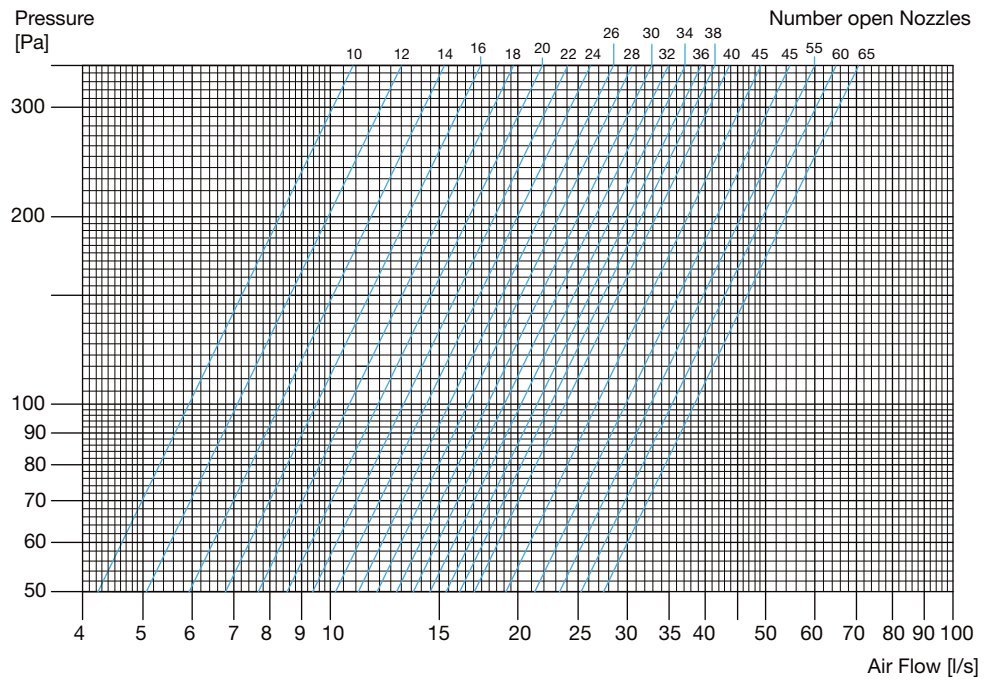



Fasadium

2.3 Changing the airflow

- Measure the static nozzle pressure
- Calculate the needed number of nozzles to be plugged, in order to reach the desired airflow at the available air pressure, as see the diagram above.
- Plug or unplug nozzles to reach the desired air flow. Using the Lindab Fasadium plug-tool
- Dividing the plugs evenly, will result in an even air spread.



3.0 Maintenance

The interval of cleaning depends on the indoor environment where the beam is placed. Under optimal conditions the Fasadium beams only need cleaning every 5 years.

3.1 Cleaning instructions

- Remove the battery cover plate.
- Clean underneath the battery and inside the air dispersal duct with a vacuum cleaner and a piece of wet cloth.
- Only use lukewarm water and a mild detergent.



Fasadium

4.0 Product and system specification

4.1 Material data

| | Fasadium 600 | Fasadium 700 | Fasadium 800 | Fasadium 1000 | Fasadium 1200 | Fasadium 1500 |
|----------------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|
| Weight, kg/m, Ø100 duct | 9.5 | 10.5 | 12.0 | 14.0 | 17.0 | 21.0 |
| Weight, kg/m, Ø160 duct | 10.0 | 11.0 | 12.5 | 15.0 | 18.0 | 22.0 |
| Weight, kg/m, Ø200 duct | 10.5 | 11.5 | 13.0 | 16.0 | 19.0 | 23.0 |
| Water content, cooling, l. | 0.55 | 0.66 | 0.77 | 0.99 | 1.21 | 1.54 |
| Water content, heating, l. | 0.18 | 0.22 | 0.25 | 0.33 | 0.39 | 0.51 |
| Copper pipes, quality | EN 12735-2 CU-DHP | EN 12735-2 CU-DHP | EN 12735-2 CU-DHP | EN 12735-2 CU-DHP | EN 12735-2 CU-DHP | EN 12735-2 CU-DHP |
| Pressure class | PN10 | PN10 | PN10 | PN10 | PN10 | PN10 |

4.2 Environmental declaration

- Please visit www.lindqst.com
 - Select Documentation Finder
 - Select “Fasadium”
 - Select “Environmental declaration”

4.3 Working and test pressure

- Lindab’s waterborne products have been manufactured and tested according to the Pressure Equipment Directive 97/237EC. The products are classified as SEP – Sound Engineering Practice.
- Pressure table

| | |
|-----------------------------------|---------|
| Pressure class | PN10 |
| Max. working pressure | 10 bar |
| Max. recommended dynamic pressure | 0,2 bar |
| Max. test pressure | 16 bar |

- Even though the battery of the chilled beam can withstand a very high static working pressure, we recommend a much lower dynamic working pressure, to avoid noise issues from the valves.

4.4 Water quality

- The water preparation and maintenance for the chilled beam water circuit should be handled by a specialist
- To prevent corrosion, the water circuit must be airtight
- The water system must also be equipped with aerators to remove any build-up air in the system.



Fasadium

- The water should be oxygen free, to prevent corrosion.
- The water system must be filled with potable water that complies with the “EC directive 98/83/EC”.
- pH value of water must be between approximately 6-9 pH
- The water velocities should not exceed 1m/s, and should be kept as close to the nominal flow as possible to minimize noise and optimize the energy yield
- There should be used in-line strainers to remove dirt particles from the water.
- If the water contains any additive inhibitor this must be appropriate to use with copper and solder.

4.5 Capacity test

- Lindabs active chilled beams are Eurovent-certified and tested according to EN-15116.



Support
Hjælp
Hjälp
Tuotetuki
Unterstützung
Supporto

UK - Here you can find product updates/mounting instructions and support telephone number/mail.

www.lindab.com

Right to alterations reserved.

DK - Her kan du finde seneste produkt opdateringer/montagevejledninger samt support tlf. nr/mail.

www.lindab.dk

Ret til ændringer forbeholdes.

SE - Här kan du alltid hitta senaste produktuppdateringarna/montageanvisningarna samt support tel. /e-mail.

www.lindab.se

Rätt till ändringar förbehålles.

FI - Täältä löydät uusimmat tuotetiedot ja asennusohjeet sekä tuotetuen yhteystiedot.

www.lindab.fi

Oikeus muutoksiin pidätetään.

DE - Hier finden Sie aktuelle Produktinformationen/ Montageanleitungen und Telefonnummer/ E-Mail-Adressen der Ansprechpartner.

www.lindab.de

Änderungen vorbehalten.

IT - Qui potete trovare istruzioni di montaggio, informazioni sul prodotto ed un supporto tecnico qualificato
Tel. 011 9952099 - e-mail: lindab@lindab.it

www.lindab.it

Soggetto a modifica senza obbligo di preavviso.

FR - Vous trouverez les fiches produits ou de montage actualisées ainsi que les coordonnées du support téléphonique à l'adresse suivante :

www.lindab.fr

Toutes modifications réservées.

**Do you have trouble finding your local contacts
please go to:**

www.lindab.com

Fasadium-03052013



www.lindab.com