

# MULTI TYPE ROOM AIR CONDITIONER INSTALLATION INSTRUCTION SHEET

(PART NO. 9374083015)



**WARNING** This mark indicates procedures which, if improperly performed, might result in personal harm to the user, or damage to property.

**CAUTION** This air conditioner uses new refrigerant R410A. However, pay careful attention to the following points.

- 1. Since the working pressure is 1.4 times higher than that of conventional refrigerant models, some of the piping and installation and service tools are special. (See the tables below.)
- 2. Accurately check the refrigerant R410A model, always replace the conventional piping and flare nuts with the R410A piping and flare nuts.
- 3. Accurately check the refrigerant R410A model, always replace the conventional piping and flare nuts with the R410A piping and flare nuts.
- 4. The more careful that you install the R410A model, the more accurate the performance of the air conditioner.
- 5. When changing the refrigerant, take into account the slight change in the composition of the gas and liquid phases, and always charge from the liquid phase side whose composition is stable.

Special tools for R410A

Change method	Contents of change
1. High pressure side	Use a high pressure side pressure gauge to prevent overpressure during or after refrigerant filling. The diameter of each part has been changed. It is recommended to use a gauge with a range of 0 to 2.0 MPa. For high pressure, it is recommended to use a gauge with a range of 0 to 2.0 MPa. For low pressure, it is recommended to use a gauge with a range of 0 to 0.2 MPa.
2. Low pressure side	Use a low pressure side pressure gauge to prevent overpressure during or after refrigerant filling. The diameter of each part has been changed. It is recommended to use a gauge with a range of 0 to 0.2 MPa. For high pressure, it is recommended to use a gauge with a range of 0 to 2.0 MPa. For low pressure, it is recommended to use a gauge with a range of 0 to 0.2 MPa.

Table 1 Thicknesses of Annealed Copper Pipes

Nominal diameter	Outer diameter	Thickness (mm)
1/4	1/2	0.20
3/8	1/2	0.20
1/2	3/4	0.25
3/4	1	0.30


- 1. Do not use the existing (for conventional refrigerant) piping and flare nuts.
- 2. When installing and repairing the air conditioner, do not mix gases other than the specified refrigerant (R410A) to enter the refrigerant cycle.
- 3. If a gas other than the refrigerant gas, the pressure inside the cycle will rise to an abnormally high value and cause leakage, injury, etc.

- 1. For authorized service personnel only.
- 2. For the room air conditioner to operate satisfactorily, install it as outlined in this installation instruction sheet.
- 3. Connect the indoor unit and outdoor unit with the room air conditioner piping and cords available standards parts. This installation instruction sheet describes the correct connections using the installation set available from our standard parts.
- 4. Installation work must be performed in accordance with national wiring standards by authorized personnel only.
- 5. Allow, do not use an extension cord.
- 6. Do not turn on the power until all installation work is complete.
- 7. Do not purge the air with refrigerants but use a vacuum pump to vacuum the installation.
- 8. There is not water refrigerant in the outdoor unit for air purging.
- 9. Use a vacuum pump for R410A exclusively.
- 10. Use a clean vacuum pump for different refrigerants may damage the vacuum pump or the unit.
- 11. Use a clean gauge manifold and charging hose for R410A exclusively.
- 12. If refrigerant leaks while work is being carried out, ventilate the area. If the refrigerant comes in contact with a flame, it produces a hard gas.
- 13. Be careful not to scratch the room air conditioner when handling it.
- 14. After installation, explain correct operation to the customer, using the operating manual.
- 15. Let the customer keep this installation instruction sheet because it is used when the room air conditioner is serviced or moved.

### SELECTING THE MOUNTING POSITION

- 1. Install in a place that can withstand the weight of the indoor and outdoor units and install positively so that the units will not topple or fall.
- 2. Do not install where there is the danger of combustible gas leakage.
- 3. Allow under 10 mm space will be approx. the unit, take preventive measure so that they cannot reach the unit.

### 1. INDOOR UNIT

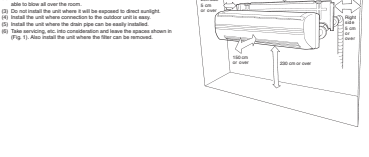

NOTE: Installation in cold regions. Do not use the accessory drain pipe. If the drain pipe is used, the drain water in the pipe may freeze in extremely cold weather.

### STANDARD ACCESSORIES

The following installation accessories are supplied. Use them as required.

Accessories	Qty
Connection pipe assembly (with insulation)	2
Insulation tape (200mm x 25mm)	1
Drain pipe	2
Drain cap	2
Drain pipe clamp	2
Drain pipe hanger	2
Drain pipe support	2
Drain pipe bracket	1

INDOOR UNIT ACCESSORIES (Wall Mounted type)

Accessories	Use
Wall hook bracket	For indoor unit installation
Remote control unit	Use for remote control
Remote control unit holder	Use to remote control unit holder
Cool hose	For indoor unit installation
Hook cover (top) (H4 2)	For wall hook bracket installation
Hook cover (side) (H4 3)	For remote control unit holder installation

### ELECTRICAL REQUIREMENT

Always make the air conditioner power supply a special branch circuit and provide a special switch and receptacle. Do not use the power cord.

### CONNECTION PIPE REQUIREMENTS

Install heat insulation around both the gas and liquid pipes. Failure to do so may cause water leakage. The heat insulation with heat resistance above 120 °C (the service cycle only). In addition, if the building level at the installation location of the refrigerant piping is expected to exceed 70%, install heat insulation around the refrigerant piping. If the expected humidity level is 70-80%, use heat insulation that is 12 mm or thicker and if the expected humidity exceeds 80%, use heat insulation that is 20 mm or thicker. If heat insulation is used that is not as thick as specified, condensation may form on the surface of the insulation. In addition, use heat insulation with heat conductivity of 0.025 W/m·K or less (at 20 °C).

Conversion table according to CONNECTING PIPE R410A in this installation instruction sheet.


Model	All models
12000~12000 BTU or 9000~9000 BTU Model	2.00 mm (3/16")
12000~7000 BTU Model	2.50 mm (1/8")

### OUTDOOR UNIT ACCESSORIES

Accessories	Use
Bracket	For power cord and connection cable wiring
Putty	For sealing
Hanging wrench	For opening the refrigerant valves on the outdoor unit
Door plate (Heat & Cool model) (Please copy out)	For outdoor unit drain piping work
Door plate (Heat & Cool model) (Please copy out)	For outdoor unit drain piping work

### 2. OUTDOOR UNIT

- 1. If possible, do not install the unit where it will be exposed to direct sunlight. If it is unavoidable, install the unit where it is not exposed to direct sunlight. Do not install the unit where it is exposed to direct sunlight. Do not install the unit where it is exposed to direct sunlight.
- 2. Do not install the unit where it is exposed to direct sunlight.
- 3. Do not install the unit where it is exposed to direct sunlight.
- 4. Do not install the unit where it is exposed to direct sunlight.
- 5. Do not install the unit where it is exposed to direct sunlight.
- 6. Do not install the unit where it is exposed to direct sunlight.
- 7. Do not install the unit where it is exposed to direct sunlight.
- 8. Do not install the unit where it is exposed to direct sunlight.
- 9. Do not install the unit where it is exposed to direct sunlight.
- 10. Do not install the unit where it is exposed to direct sunlight.

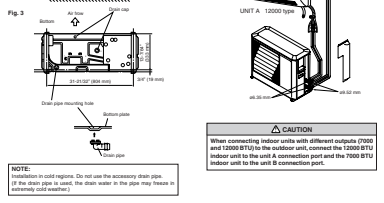

NOTE: Installation in cold regions. Do not use the accessory drain pipe. If the drain pipe is used, the drain water in the pipe may freeze in extremely cold weather.


### INSTALLATION PROCEDURE

#### 1. INDOOR UNIT INSTALLATION

- 1. The piping can be connected in the direction indicated by (1), (2), (3), and (4). When the piping is connected in direction (1) or (2), use the piping groove on the side of the front cover with a notch. When connecting piping in direction (3), cut a notch in the top wall with a hand saw.
- 2. Cut the hole on that the outside edge is lower (5 to 10 mm) than the inside edge.
- 3. Always align the center of the wall hole. If misaligned, water leakage will occur.
- 4. Cut the wall pipe to match the wall thickness, cut it into five pieces for the left and right sides of the wall hole and the top and bottom of the wall hole.
- 5. Cut the wall pipe to match the wall thickness, cut it into five pieces for the left and right sides of the wall hole and the top and bottom of the wall hole.


#### 1. INSTALLING THE WALL HOOK BRACKET

- 1. Install the wall hook bracket so that it is strong enough to withstand the weight of the indoor unit.
- 2. Fasten the wall hook bracket to the wall with the screws through the hole on the center of bracket to the wall with the handle of the bracket.
- 3. Check that there is no wobble at the wall hook bracket.

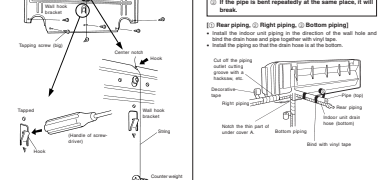


#### 2. CUTTING THE HOLE IN THE WALL FOR THE CONNECTING PIPING

- 1. Perform INDOOR UNIT MOUNTING before performing this piping.
- 2. Mark the position of the hole on the wall with the center of the hole. The hole should be 10 mm larger than the diameter of the hole on the wall.
- 3. Cut the hole on the wall with a hand saw. The hole should be 10 mm larger than the diameter of the hole on the wall.
- 4. Cut the hole on the wall with a hand saw. The hole should be 10 mm larger than the diameter of the hole on the wall.




#### 3. FORMING THE DRAIN HOLE AND PIPE

- 1. Do not remove the flare nut from the indoor unit pipe.
- 2. Do not remove the flare nut from the indoor unit pipe.
- 3. Do not remove the flare nut from the indoor unit pipe.
- 4. Do not remove the flare nut from the indoor unit pipe.

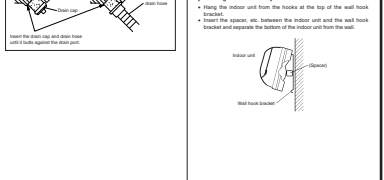


#### 2. FRONT PANEL AND UNDER COVER REMOVAL

- 1. Turn the front panel removal screw to the right to remove the front panel.
- 2. Turn the front panel removal screw to the right to remove the front panel.
- 3. Turn the front panel removal screw to the right to remove the front panel.
- 4. Turn the front panel removal screw to the right to remove the front panel.



#### 3. THE FRONT PANEL REMOVAL

- 1. Turn the front panel removal screw to the right to remove the front panel.
- 2. Turn the front panel removal screw to the right to remove the front panel.
- 3. Turn the front panel removal screw to the right to remove the front panel.
- 4. Turn the front panel removal screw to the right to remove the front panel.




#### 4. THE UNDER COVER REMOVAL AND INSTALLATION

- 1. Hold the under cover removal screw to the right to remove the under cover.
- 2. Hold the under cover removal screw to the right to remove the under cover.
- 3. Hold the under cover removal screw to the right to remove the under cover.
- 4. Hold the under cover removal screw to the right to remove the under cover.




#### 3. INDOOR UNIT WIRING

- 1. Before starting work, check that power is not being supplied to indoor units and the outdoor unit.
- 2. Match the terminal block numbers and connection cord colors with those of the outdoor unit.
- 3. Connect the connection cords firmly to the terminal block.
- 4. Always connect the ground wire.



#### 4. OUTDOOR UNIT INSTALLATION

- 1. Install the outdoor unit where it will not be filled by more than 5°.
- 2. When installing the outdoor unit where it may be exposed to strong wind, fasten it securely.
- 3. Do not set the unit directly on the ground because it will cause trouble.

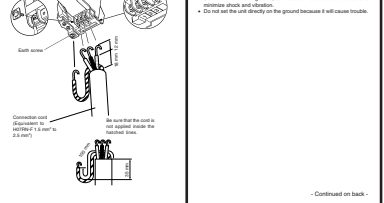

- Continued on back -



5

CONNECTING THE PIPING


CAUTION

The maximum lengths of this product are shown in Table 5-1. If the units are further apart than this, correct operation can not be guaranteed.

1. LIMITATION OF REFRIGERANT PIPING LENGTH

Table 5-1

Table with 2 columns: Parameter (Total max length (A+B), Max length for each indoor unit (A or B), Max height difference (H)), Value (30 m (98 ft), 15 m (49 ft), 8 m (26 ft)).

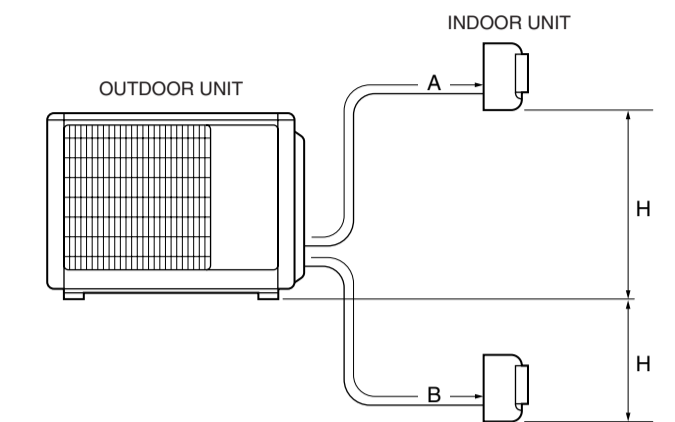

2. FLARING

- (1) Cut the connection pipe to the necessary length with a pipe cutter.
(2) Hold the pipe downward so that cuttings will not enter the pipe and remove the burrs.
(3) Insert the flare nut (always use the flare nut attached to the indoor and outdoor units respectively) onto the pipe and perform the flare processing with a R410A flare tool.

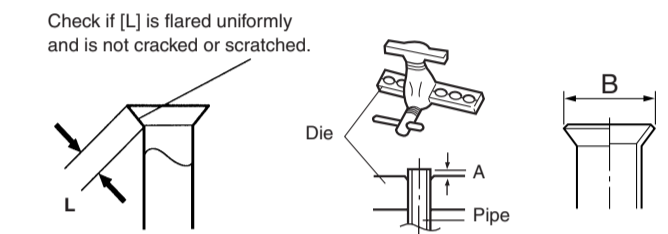


Table 5-2 Flaring dimension: B

Table with 2 columns: Pipe outside diameter, B (mm). Values: 6.35 mm (1/4 in.) = 9.1, 9.52 mm (3/8 in.) = 13.2.

When using conventional flare tools to flare R410A pipes, the dimension A should be approximately 0.5 mm more than indicated in Table 5-3 (for flaring with R410A flare tools) to achieve the specified flaring. Use a thickness gauge to measure the dimension A.

Table 5-3 Pipe outside diameter

Table with 2 columns: Pipe outside diameter, A (mm). Values: 6.35 mm (1/4 in.) = 0 to 0.5, 9.52 mm (3/8 in.) = 0 to 0.5.

11

POWER

WARNING

- 1 The rated voltage of this product is 220-240 V A.C. 50 Hz.
2 Before turning on the verify that the voltage is within the 198 V to 264 V range.
3 Always use a special branch circuit and install a special receptacle to supply power to the room air conditioner.
4 Use a circuit breaker and receptacle matched to the capacity of the room air conditioner. (Fuse + breaker rating: 20 A)
5 The circuit breaker is installed in the permanent wiring. Always use a circuit that can trip all the poles of the wiring and has an isolation distance of at least 3mm between the contacts of each pole.
6 Perform wiring work in accordance with standards so that the room air conditioner can be operated safely and positively.
7 Install a leakage circuit breaker in accordance with the related laws and regulations and electric company standards.

CAUTION

- 1 The power source capacity must be the sum of the room air conditioner current and the current of other electrical appliances. When the current contracted capacity is insufficient, change the contracted capacity.
2 When the voltage is low and the air conditioner is difficult to start, contact the power company to have the voltage raised.

3. BENDING

- (1) When bending the pipe, be careful not to crush it.
(2) To prevent breaking of the pipe, avoid sharp bends. Bend the pipe with a radius of curvature of 70 mm or over.
(3) If the copper pipe is bent or pulled to often, it will become stiff. Do not bend the pipe more than three times at one place.

4. CONNECTION

- (1) Install the outdoor unit wall cap (supplied with the optional installation set or procured at the site) to the wall pipe.
(2) Connect the outdoor unit and indoor unit piping.
(3) After matching the center of the flare surface and tightening the nut hand tight, tighten the nut to the specified tightening torque with a torque wrench. (Tighten the flare nut of the outdoor unit 3-way valve after air purging.)

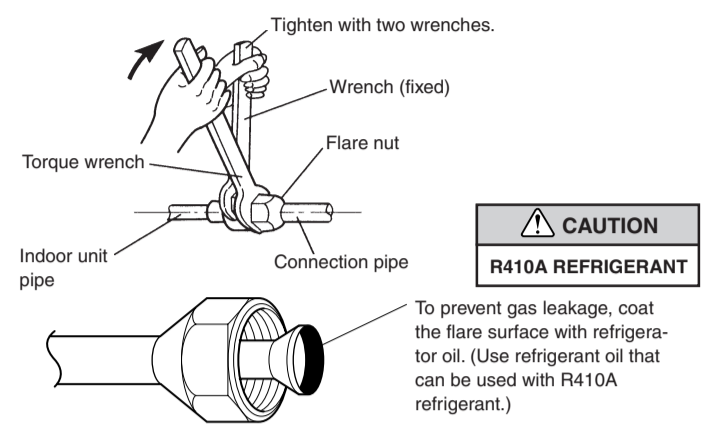


Table 5-4 Flare nut tightening torque

Table with 3 columns: Flare nut, Tightening torque, Tightening torque standard (using a 20 cm wrench). Values: 6.35 mm dia. = 16 to 18 N·m, 9.52 mm dia. = 30 to 42 N·m.

Do not remove the cap from the connection pipe before connecting the pipe.

6

VACUUM PROCESS


CAUTION

- 1 Do not purge the air with refrigerants but use a vacuum pump to vacuum the installation! There is no extra refrigerant in the outdoor unit for air purging!
2 Use a vacuum pump for R410A exclusively. Using the same vacuum pump for different refrigerants may damage the vacuum pump or the unit.
3 Charging of additional refrigerant (R410A) according to the piping length is unnecessary.

1. VACUUM


- (1) Remove the cap, and connect the gauge manifold and the vacuum pump to the charging valve and fit the service hoses.
(2) Vacuum the indoor unit and the connecting pipes until the pressure gauge indicates -0.1 MPa (-0.76 cmHg).
(3) When -0.1 MPa (-0.76 cmHg) is reached, operate the vacuum pump for at least 15 minutes.
(4) Disconnect the service hoses and fit the cap to the charging valve to the specified torque.
(5) Remove the blank caps, and fully open the spindles of the 2-way and 3-way valves with a hexagon wrench (Torque : 6 to 7 N·m (60 to 70 kgf·cm)).
(6) Tighten the blank caps of the 2-way valve and 3-way valve to the specified torque.

Table: Tightening torque. Blank cap: 20 to 25 N·m (200 to 250 kgf·cm). Charging port cap: 13 to 16 N·m (125 to 160 kgf·cm).

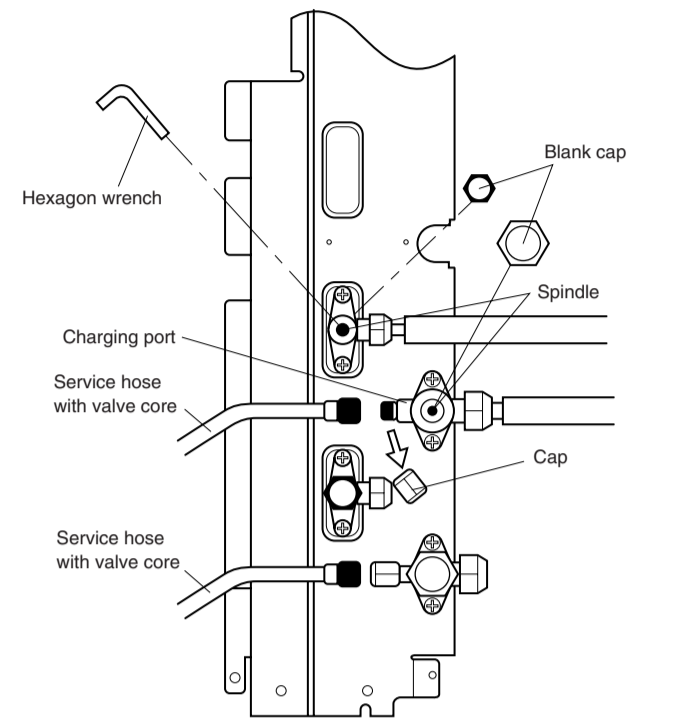

CAUTION

Use a clean gauge manifold and charging hose for R410A exclusively.

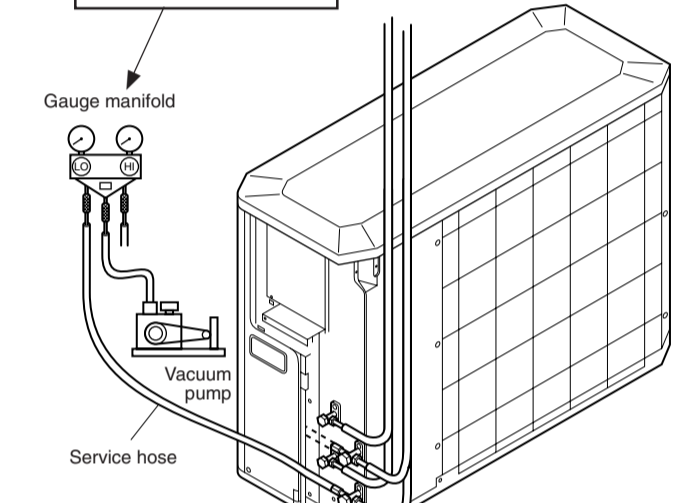

7

GAS LEAKAGE INSPECTION

CAUTION

After connecting the piping, check the joints for gas leakage with gas leak detector.

8

RECHARGING THE REFRIGERANT

- (1) When moving and installing the air conditioner, do not mix gas other than the specified refrigerant (R410A) inside the refrigerant cycle.
(2) When charging the refrigerant R410A, always use an electronic balance for refrigerant charging (to measure the refrigerant by weight).
(3) When charging the refrigerant, take into account the slight change in the composition of the gas and liquid phases, and always charge from the liquid phase side whose composition is stable.
(4) Add refrigerant from the charging valve after the completion of the work.

9

OUTDOOR UNIT WIRING

WARNING


- 1 Before starting work, check that power is not being supplied to the outdoor unit.
2 Match the terminal block numbers and connection cord colors with those of the indoor unit side. Erroneous wiring may cause burning of the electric parts.
3 Connect the connection cords firmly to the terminal block. Imperfect installation may cause a fire.
4 Always fasten the outside covering of the connection cord with cord clamps. (If the insulator is clamped, electric leakage may occur.)
5 Always connect the ground wire.

CAUTION

- 1 The power cord is not supplied with the outdoor unit. Use 2.0 mm² to 3.5 mm² #07RN-F or equivalent as the connection cord.
2 Select power cable matched to the fuse capacity. (Install in a accordance with standard.)


1) Remove the outdoor unit terminal cover.

Fig. 9-1

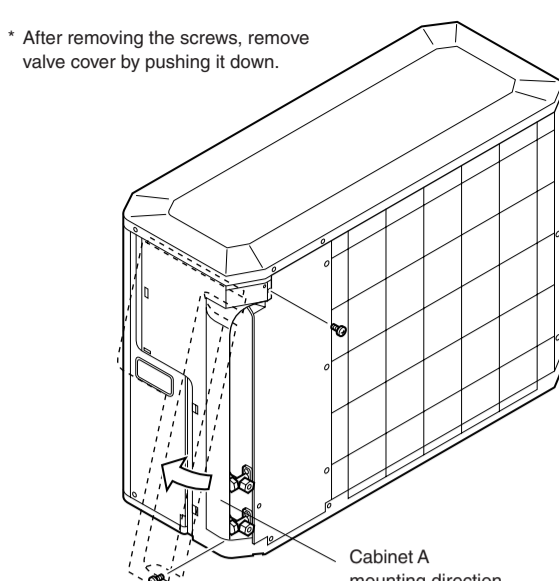

(2) Process the end of the connection cords to the dimension shown in (Fig. 9-3) and bend the end of each cord as shown in (Fig. 9-2).

Fig. 9-2 Stripped length

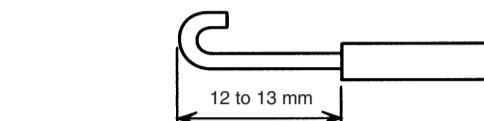

(3) Connect the end of the power cord and connection cord fully into the terminal block.
(4) Fasten the sheath with a cord clamp.
(5) Fasten the power cord and connection cord with cable clips and binders as shown in (Fig. 9-3).

Fig. 9-3

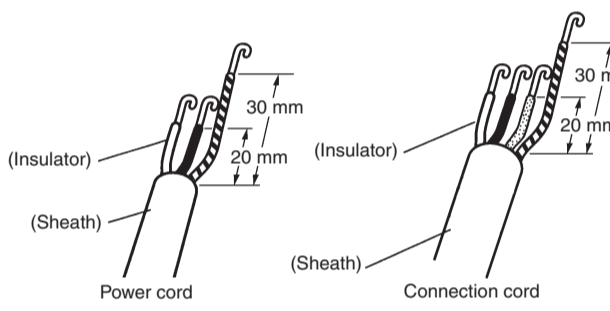
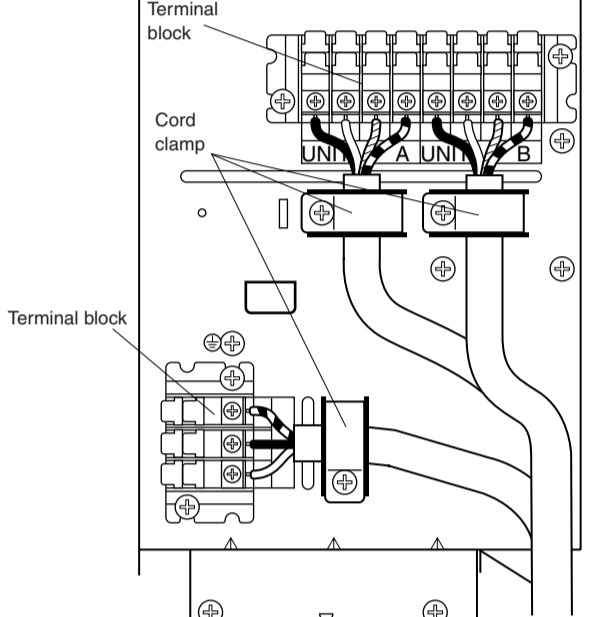


Fig. 9-4

Indoor and outdoor wire connection


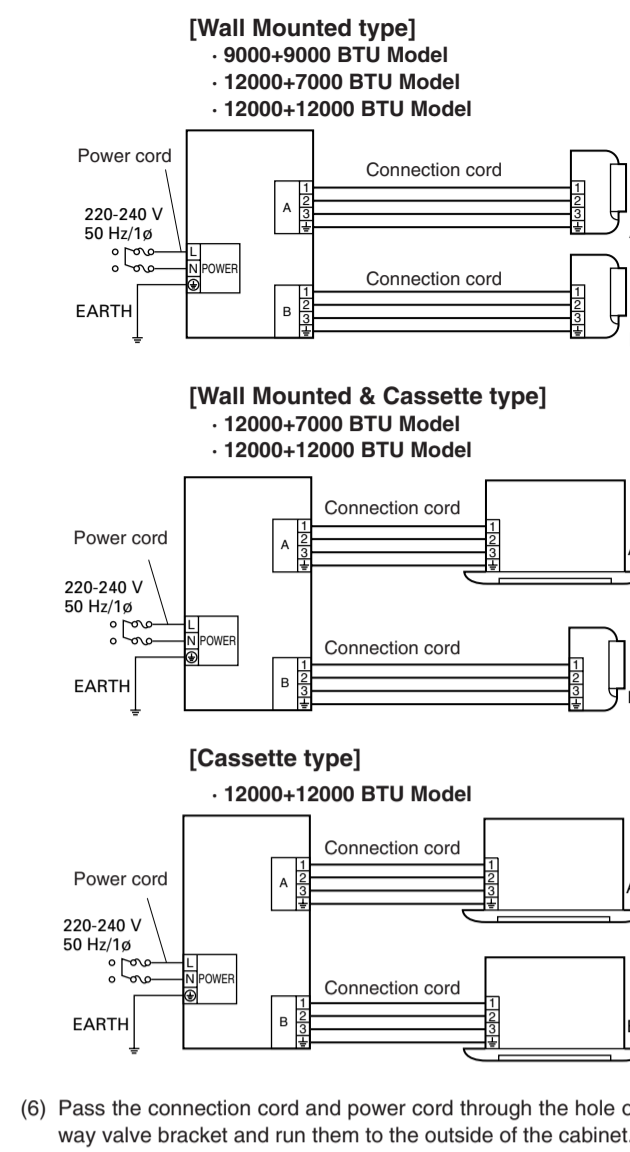



Fig. 9-5

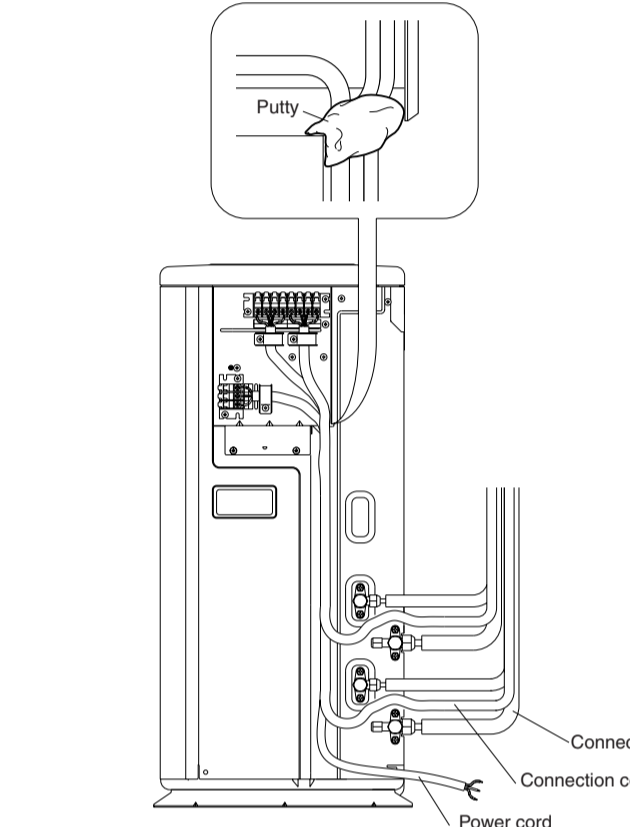


10

FINISHING

- (1) Insulate between pipes.
- For rear, right, and bottom piping, overlap the connection pipe heat insulation and indoor unit pipe heat insulation and bind them with vinyl tape so that there is no gap.
- For left and left rear piping, butt the connection pipe heat insulation and indoor unit pipe heat insulation together and bind them with and vinyl tape so that there is no gap.

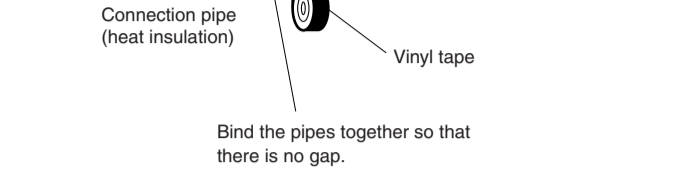

- (2) Temporarily fasten the connection cord along the connection pipe with vinyl tape. (Wrap to about 1/3 the width of the tape from the bottom of the pipe so that water does not enter.)
(3) Fasten the connection pipe to the outside wall with a saddle, etc.
(4) Fill the gap between the outside wall pipe hole and the pipe with sealer so that rain water and wind cannot blow in.

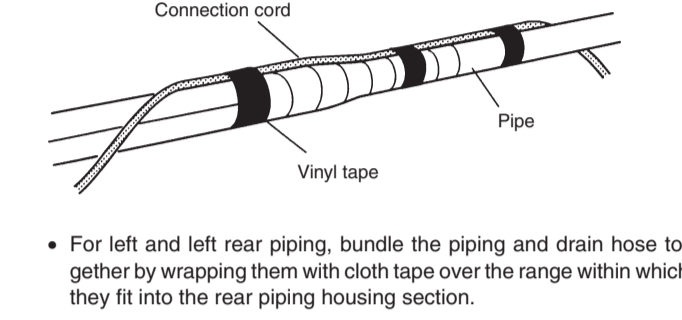


- (5) Fasten the drain hose to the outside wall, etc.




Check that:


- The top and bottom hooks are hooked firmly and the indoor unit does not move to the front and rear or left and right.
The indoor unit is accurately positioned horizontally and vertically.
When connected from the left rear, the drain hose is at the bottom left of the wall pipe.

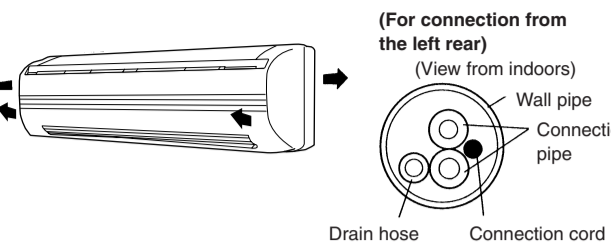

- Temporarily fasten the connection cord along the connection pipe with vinyl tape.
Fasten the connection pipe to the outside wall with a saddle, etc.
Fill the gap between the outside wall pipe hole and the pipe with sealer so that rain water and wind cannot blow in.

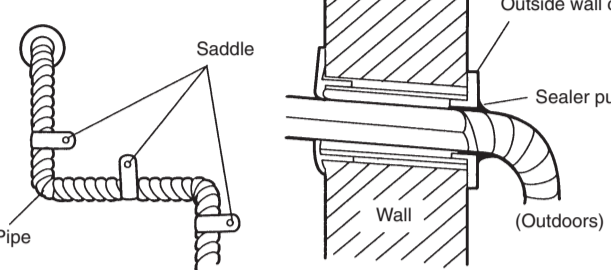

- Fasten the drain hose to the outside wall, etc.

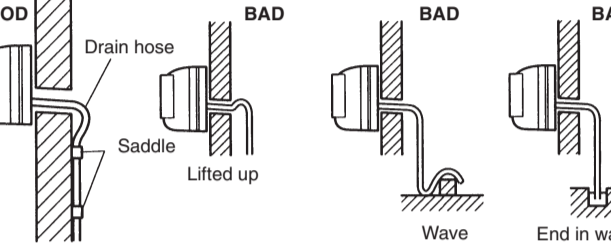


14

REMOTE CONTROL UNIT HOLDER INSTALLATION

CAUTION

- 1 Check that the indoor unit correctly receives the signal from the remote control unit, then install the remote control unit holder.
2 Select the remote control unit holder site by paying careful attention to the following: Avoid places in direct sunlight. Select a place that will not be affected by the heat from a stove, etc.

Install the remote control unit holder to a wall or pillar with the tapping screws.

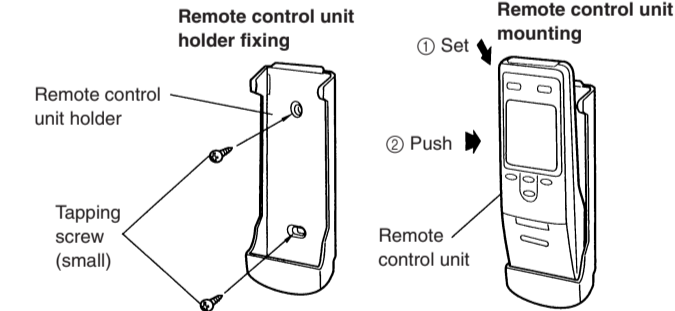

13


CUSTOMER GUIDANCE

- Explain the following to the customer in accordance with the operating manual:
(1) Starting and stopping method, operation switching, temperature adjustment, timer, air flow switching, and other remote control unit operations.
(2) Air filter removal and cleaning, and how to use the air louvers.
(3) Give the operating and installation instruction sheets to the customer.

12

TEST RUNNING

- Perform test operation and check items 1 and 2 below.
For the operation method, refer to the operating manual.
The outdoor unit may not run, depending on the room temperature. In this case, press the test run button at the back of the remote control unit while the room air conditioner is running. (With the transmit section of the remote control unit facing the body, press the TEST RUN button with the tip of a ball point pen.)

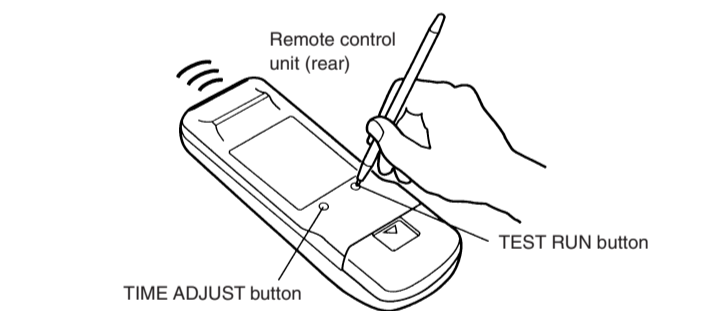

Operation can be checked by lighting and flashing of the display section OPERATION and TIMER lamps. Perform judgement in accordance with the following.

Table: Test running. When the air conditioner is run by pressing the remote control unit test run button, the OPERATION and TIMER lamps flash slowly at the same time. To end test operation, press the remote control unit START/STOP button. Error: The OPERATION, TIMER and SWING lamps operate as follows according to the error contents.

Table: INDOOR UNIT Error display. Columns: Error contents, OPERATION (RED), TIMER (GREEN), SWING (ORANGE). Rows include Indoor unit circuit board error, Room temperature thermistor or piping thermistor error, Indoor unit-outdoor unit miswiring, and Indoor unit fan error.

OUTDOOR UNIT [Heat & Cool model (Reverse cycle) only]. Error: Fast flashing, Slow flashing.

Table: OUTDOOR UNIT LED indication. Columns: LED indication, Contents. Rows include D8 and D15 signal reception errors.